



Whirlpool GR556LRKB0 Installation Instructions Manual

30" (76.2 cm) electric refrigerated range with self-cleaning, convection oven

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
Table Of Contents
17




-

[Table of Contents](#)

•

Bookmarks

Available languages

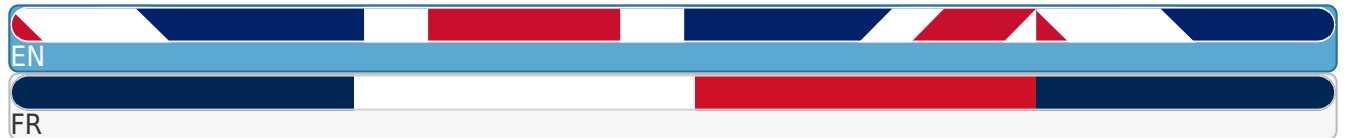

Quick Links

[Download this manual](#) See also: [Use and Care Manual](#)



Installation Instructions

 
30" (76.2 cm) Electric Refrigerated Range

WARNING

Tip Over Hazard

A child or adult can tip the range and be killed.

Connect anti-tip bracket to rear range foot.

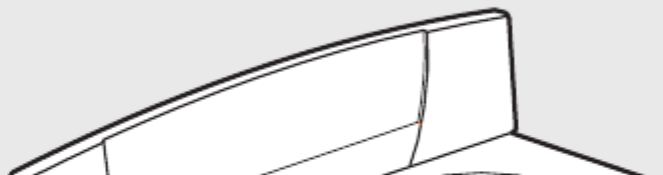

Reconnect the anti-tip bracket, if the range is moved.

Failure to follow these instructions can result in death or serious burns to children and adults.

IMPORTANT:

Read and save these instructions.

IMPORTANT:

Installer: Leave Installation

Instructions with the homeowner.

Homeowner: Keep Installation

Instructions for future reference.

Save Installation Instructions for local electrical inspector's use.

with self-cleaning, convection oven

Write down the model and serial numbers before installing range.

Both numbers are on the model/serial rating plate, located on the oven frame behind the door.

Model # _____

 
Serial # _____

9758643

9758643

www.whirlpool.com

Part No. 9758643

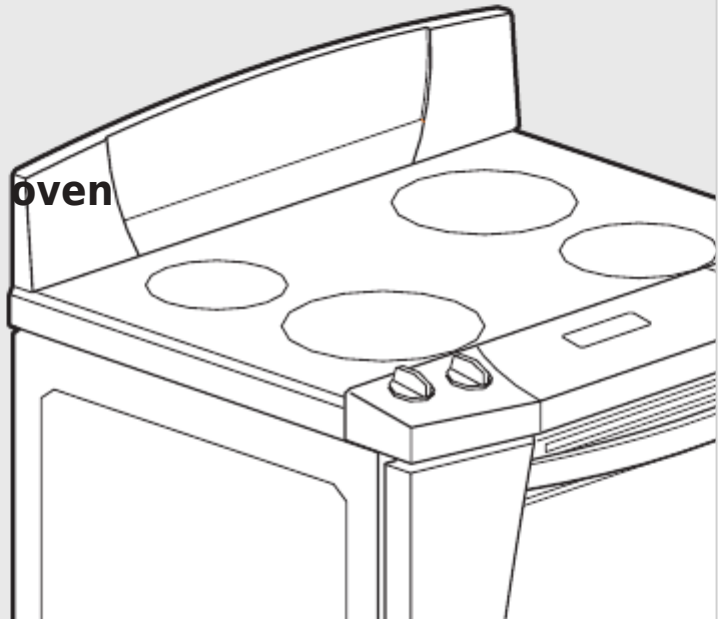

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool GR556LRKB0

[Ranges Whirlpool GR556LRKP1 Use & Care Manual](#)

Electric refrigerated range (44 pages)

[Cooktop Whirlpool YGR556LRKB0 Installation Instructions Manual](#)

30" (76.2 cm) electric refrigerated range (16 pages)

[Ranges Whirlpool Polara GR556 Use & Care Manual](#)

Polara electric refrigerated range (44 pages)

[Ranges Whirlpool GR563LXS Dimensions And Installation Information](#)

30" freestanding electric range (1 page)

[Ranges Whirlpool GR563LXS Product Dimensions](#)

30" freestanding electric range (1 page)

[Ranges WHIRLPOOL 9762996-D-WH Dimensional Information](#)

30" freestanding electric range (1 page)

[Ranges Whirlpool GR563LXS Installation Instructions Manual](#)

30" (76 cm) freestanding electric ranges (12 pages)

[Ranges Whirlpool RF265LXTQ Dimensions](#)

30" freestanding electric range (1 page)

[Ranges Whirlpool RF462LXS Dimensions](#)

30" freestanding electric range (1 page)

[Ranges Whirlpool GR556LRKB Installation Instructions Manual](#)

30" (76.2 cm) electric freestanding range with self-cleaning, convection oven (8 pages)

[Ranges Whirlpool GR563LXSB1 Parts List](#)

30" electric ceran freestanding range self clean oven (9 pages)

[Ranges Whirlpool GR563LXSS2 Use & Care Manual](#)

(32 pages)

[Ranges Whirlpool GR563LXSQ0 Parts List](#)

30" electric ceran freestanding range self clean oven (9 pages)

[Ranges Whirlpool RF261PXST Installation Instructions Manual](#)

30" (76 cm) freestanding electric ranges (12 pages)

[Ranges Whirlpool Polara GR556LRK Service Manual](#)

Refrigerated range (88 pages)

[Ranges Whirlpool GR440LXL Use & Care Manual](#)

Electric range (24 pages)

Summary of Contents for Whirlpool GR556LRKB0

[Page 1: Installation Instructions](#)

Write down the model and serial numbers before installing range. Both numbers are on the model/serial rating plate, located on the oven frame behind the door. Model #

Serial # _____ 9758643 9758643
www.whirlpool.com Part No. 9758643...

[Page 2: Tools And Materials Needed](#)

Before you start... Your safety and the safety of others are very important. We have provided

many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.

[Page 3: Product Dimensions](#)

Cutout dimensions/requirements 25" (63.5 cm) countertop depth and 24" (61 cm) base cabinet depth, 36" (91.4 cm) countertop height 13" (33 cm) max. upper cabinet depth 30" (76.2 cm) min. cabinet opening width 18" (45.7 cm) upper side cabinet to countertop 30"...

[Page 4: Electrical Connection](#)

Electrical connection (Not used for Canadian installations) This range can be connected directly to the fused disconnect (or circuit breaker box) through flexible, armored conduit. Allow two to three feet of slack in the line so that it can be moved if servicing is ever necessary.

[Page 5](#) Four-wire electrical connection: Use this method for new installations, mobile homes, recreational vehicles, and whenever four-wire installation is required. 7. Remove the ground-link screw from the range frame. Save the ground-link screw. Bend up the ground link so that it does not contact the range. ground-link screw ground link...

[Page 6](#) Four-wire electrical connection: ground link ground screw Figure 1 slotted set screw line 1 line 2 green neutral ground (center wire wire) Figure 2 Use this method for new installations, mobile homes, recreational vehicles, and whenever four-wire installation is required. 10.

[Page 7](#) Place cardboard or hardboard in front of range. Stand range back up onto cardboard or hardboard. **WARNING Tip Over Hazard** A child or adult can tip the range and be killed. Connect anti-tip bracket to rear range foot. Reconnect the anti-tip bracket, if the range is moved.

[Page 8: If Range Does Not Operate](#)

Use and Care Guide. Keep Installation Instructions and Use and Care Guide close to the electric range for easy reference. Part No. 9758643 ©2004 Whirlpool Corporation For cleaning and maintenance... If removing the range is necessary for cleaning or maintenance, disconnect the electric supply.

[Page 9: Instructions D'installation](#)

Inscrire ci-dessous les numéros de modèle et de série avant d'installer la cuisinière. On trouve cette information sur la plaque signalétique, fixée sur le châssis, derrière la porte. N° de modèle _____ N° de série _____ www.whirlpool.com Pièce n° 9758643...

[Page 10: Avant De Commencer](#)

Avant de commencer... Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel, et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Voici le symbole d'alerte de sécurité.

[Page 11: Dimensions Du Produit](#)

Dimensions de la cavité d'installation 63,5 cm (25 po) - profondeur standard du plan de travail 61 cm (24 po) - profondeur des placards inférieurs 91,4 cm (36 po) - hauteur du plan de travail 76,2 cm (30 po) minimum - largeur de l'ouverture entre les placards distance minimale de 45,7 cm...

[Page 12](#) Raccordement à un circuit électrique à 4 conducteurs... Les conducteurs de liaison à la terre de cette cuisinière sont raccordés à la caisse. On doit réviser le système de liaison à la terre pour que le conducteur vert de liaison à la terre du cordon d'alimentation à...

[Page 13](#) Commencer ... maintenant avec la cuisinière dans la cuisine Retirer de la cuisinière matériaux d'emballage, rubans adhésifs et film de protection. Laisser palette/matériaux d'emballage sous la cuisinière. Enlever les grilles du four, les grilles de brûleur et les sachets de pièces placés à l'intérieur du four.

[Page 14](#) Aligner les trous de la bride antibasculement avec les avant-trous percés dans le plancher. Utiliser les vis fournies pour fixer la bride antibasculement sur le plancher. NOTE : Il faut que la bride soit solidement fixée au sous-plancher. Selon l'épaisseur du plancher, il peut être nécessaire d'utiliser des vis plus longues pour l'ancrage de la bride sur le sous-plancher.

[Page 15: Si La Cuisinière Ne Fonctionne Pas](#)

Nettoyage et entretien... S'il est nécessaire de déplacer la cuisinière pour des opérations de nettoyage et d'entretien, interrompre l'alimentation électrique. Si le point de connexion au réseau électrique n'est pas accessible, soulever légèrement la cuisinière à l'avant et tirer la cuisinière pour l'écartier du mur. Tirer la cuisinière juste assez pour pouvoir accéder au point de raccordement/ branchement pour déconnecter la...

[Page 16](#) Pièce n° 9758643 Imprimé aux É.-U. ©2004 Whirlpool Corporation Benton Harbor, Michigan 49022 01/2004...

This manual is also suitable for:

[Gr556lrks](#)