



Whirlpool 220-240~volt Instructions For Installation And Use Manual

Whirlpool freestanding compactor instructions for installation and use 220-240~volt, 50-hz models

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

--

•

•

Bookmarks

--

[Download this manual](#)

Quick Links



Instructions for Installation and Use

Freestanding Compactor

220-240~volt, 50-Hz Models

AMB 755

9871413

\-T-I\

.

\



Instructions for Installation and Use

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 220-240~volt

[Washer Whirlpool 220/240-volt Installation Instructions](#)

Whirlpool washer Installation instructions 220/240-volt, 60-hz models (5 pages)

[Washer/Dryer Whirlpool 50 Hz Installation Instructions Manual](#)

Whirlpool thin twin washer dryer 230 volt, 50 hz installation instructions (7 pages)

[Trash Compactor Whirlpool GC900QPPQ User Instructions](#)

For console models (16 pages)

[Trash Compactor Whirlpool TF 4500 Senes Use & Care Manual](#)

Whirlpool use & care guide trash masher compactor tu 4000 series, tf 4500 senes, tu 8000 series, tf 8500 series (12 pages)

[Trash Compactor Whirlpool Compactor Use And Care Manual](#)

9871676b.book (16 pages)

[Trash Compactor Whirlpool Trash Masher Installation Instructions](#)

Trash masher compactor (4 pages)

[Trash Compactor Whirlpool TU950QPXQ0 Use & Care Manual](#)

Integrated compactors (24 pages)

[Trash Compactor Whirlpool 9872208 Use And Care Manual](#)

Whirlpool trash compactors 9872208 use & careguide (16 pages)

[Trash Compactor Whirlpool Trash Masher JTF8500XL User Manual](#)

Trash masher (16 pages)

[Trash Compactor Whirlpool TRASH MASHER Installation Instructions](#)

(4 pages)

[Trash Compactor Whirlpool TU800SPPB1 Parts List](#)

Whirlpool trash compactor parts list (7 pages)

[Trash Compactor Whirlpool trash masher Installation Instructions](#)

(4 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Trash Compactor Whirlpool TU950QPXS Use And Care Manual](#)

Integrated compactors (24 pages)

[Trash Compactor Whirlpool TF4600X Series Use & Care Manual](#)

Built-in and freestanding compactors (16 pages)

[Trash Compactor Whirlpool \[12:36:03\] ??????????????: GC900QPPB Use & Care Manual](#)

(12 pages)

Summary of Contents for Whirlpool 220-240~volt

[Page 1](#) Instructions for Installation and Use Freestanding Compactor 220-240~volt, 50-Hz Models AMB 755 9871413...

[Page 2: Table Of Contents](#)

Whirlpool Compactor Warranty Thank you for buying a WHIRLPOOL* Please complete the form below. Have this information ready if you need service or call with a question. . Copy model and

serial numbers from plate (see diagram on page 7) and purchase date from sales slip.

[Page 3: Important Safety Instructions](#)

Important Safety Instructions Electrical Requirements 1. A 230 volt 50Hz ac only 15 ampere fused electrical supply is required. 2. A time delay fuse or circuit breaker is recommended. It is also recommended that a separate circuit serving only this appliance be provided. 3.

[Page 4: Installation Instructions](#)

Installation Instructions Cutout dimensions Earthed electrical outlet must be 8 cm minimum from either side of wall and recessed 2 cm into wall. 87 cm min. 38.4 cm min. -1 Clearance dimensions 60 cm clearance in front of compactor needed to fully open or remove compactor drawer.

[Page 5: Tools And Materials Needed For Installation](#)

Tools and materials needed for installation: .('i Power inlet' Pliers Now start With compactor Do not grasp console Slide compactor before moving damaging floor covering. Do not allow the rear frame of compactor touch the floor covering compactor. 1. Remove compactor from shipping carton. Remove - Cable clip all protective packaging materials such as tape and shipping pads.

[Page 6: Using Your Compactor](#)

Self-tapping Wheel bracket screw (pivot) assembly 4. Place the other two corner posts on the floor to the side of the compactor. Grasp the sides of the compactor cabinet and put compactor on its side on top of the corner posts.

[Page 7: Adjusting The Toe Plate](#)

Installation Instructions Continued 9. Grasp sides of compactor drawer and place bottom of drawer into tracks. Lift at the handle so the front of drawer will go over drawer stops. Close drawer. Check if drawer opens freely. If the toe plate rubs against floor, see "Adjusting the toe plate"...

[Page 8: Description Of The Appliance](#)

Description of the Appliance Below is an illustration of your appliance with the parts and features called out. NOTE: The drawings in this book may vary from your compactor model. They are designed to show the different features of all models covered by this book. Your model may not include all features. Drawer handle Bag retainer buGons\...

[Page 9](#) Using Your Compactor . START OFF . IMPORTANT: Do not compact any container, aerosol cans or cloths which might contain insecticide, spray, engine starting fluid, paints, liquids, thinners, or any poisonous or explosive products. If you compact these items, a fire or explosion could result. Broken glass or sharp edges may be present in trash.

[Page 10](#) . START OFF . OFF . . START To stop the compactor during a cycle: 1. Turn the Key-knob to OFF. 2. Turn the Key-knob to ON. The compacting ram will rise. 3. When the ram stops rising, you can open the drawer. To remove the Key-knob: 1.

[Page 11: Removing A Filled Bag](#)

Using Your Compactor Continued Removing a filled bag When the trash is compacted to the top of the drawer, remove the bag. If the bag is too heavy, compact less trash before emptying in the future. IMPORTANT: Sharp objects may protrude through bag after removal from compactor.

[Page 12: Installing A New Bag](#)

Installing a new bag Before installing a new bag, be sure: 1. The drawer side is securely locked. 2. The container is clean and free of sharp debris that may puncture the bag. Do not use any kind of bag other than those designed especially for use in your compactor.

[Page 13: How Your Compactor Works](#)

How Your Compactor Works The compacting ram does not go to the drawer bottom. You will not see compacting of the first few loadings. Compaction starts after the drawer is about 1/4 full. You may hear a noise when glass breaks. Strong glass bottles may not break at all.

[Page 14: Caring For Your Compactor](#)

Caring For Your Compactor As is true of most appliances, proper care is needed to give you continued satisfaction. Before cleaning the compactor, turn the Key-knob to the OFF position and remove. If you will be away for more than a couple of days, remove the compactor bag.

[Page 15](#) Caring For Your Compactor Continued Clean inside the cabinet: Wear protective gloves. There may be bits of glass in the cabinet. Pull the drawer out until it stops. Note the tracks in which the drawer rollers move. Lift the front to clear the drawer stops. Grasp the drawer on the sides.

[Page 16: Changing Your Compactor's Colour](#)

Changing Your Compactor's Colour The colour panel on the front of your compactor's drawer reverses to another colour. To change the colour of your compactor's front panel, follow the directions below. All you need is a medium- sized screwdriver. 1. Slide drawer out. 2.

[Page 17: Troubleshooting Guide/Service](#)

WHIRLPOOL WHIRLPOOL WILL PAY FOR Replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized Whirlpool service company. modifications made to the appliance. or force: CPOO4 household use. OR CONSEQUENTIAL DAMAGES.

[Page 18](#) Whirlpool is a registered trademark of Whirlpool, U.S.A. Whirlpool ist ein eingetragenes Warenzeichen der Whirlpool, USA. Whirlpool est une marque déposée de Whirlpool, USA. 9871413 Whirlpool is een geregistreerd handelsmerk van Whirlpool, USA. 10196 Whirlpool B un marchio commerciale registrato della Whirlpool, USA.

This manual is also suitable for:

50-hz models