 


# Whirlpool W10198562A Installation Instructions Manual

15.5" (39.4 cm) washer/dryer pedestal



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12




•

[Table of Contents](#)

•

## Bookmarks

Available languages

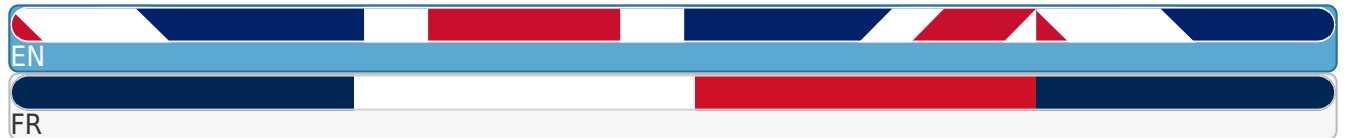

## Quick Links

[1 Installation Requirements](#)

[Download this manual](#)





**15.5" (39.4 cm) Washer/ Dryer Pedestal**

Installation Instructions

**Piédestal de 15.5" (39,4 cm) pour  
laveuse/sécheuse**

Installation Instructions



Whi  
duet  
du

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Whirlpool W10198562A

### [Laundry Accessories Whirlpool W10110902 Use And Care Manual](#)

Laundry worksurface (12 pages)

### [Laundry Accessories Whirlpool 279787 Installation And Wiring Instructions](#)

Dryer motor kit (4 pages)

### [Laundry Accessories Whirlpool 279827 Installation And Wiring Instructions](#)

Dryer motor kit (4 pages)

### [Laundry Accessories Whirlpool WFP2715HW0 Installation Instructions Manual](#)

15.5" pedestal (18 pages)

### [Laundry Accessories Whirlpool PEDESTAL Installation Instructions Manual](#)

(16 pages)

### [Laundry Accessories Whirlpool XHPC155YC Installation Instructions Manual](#)

15.5" laundry pedestal with chrome handle and storage drawer (16 pages)

### [Laundry Accessories Whirlpool LRF4001RY Use And Care Manual](#)

Fabric freshener (40 pages)

### [Laundry Accessories Whirlpool LRF4001RY Quick Start Manual](#)

New fabric freshener (2 pages)

### [Laundry Accessories Whirlpool For use only with front load washer and dryers Installation Instructions Manual](#)

Stack kit for use only with front load washer and dryers (16 pages)

### [Laundry Accessories Whirlpool W10323246 Installation Instructions Manual](#)

4-way vent kit front load dryer match with full front panel - side and bottom exhaust venting (18 pages)

### [Laundry Accessories Whirlpool WHP1500SCB Installation Instructions Manual](#)

15.5" (39.4 cm) washer/dryer pedestal (24 pages)

### [Laundry Accessories Whirlpool WVP5000SQ Use And Care Manual](#)

Symphony series laundry tower (12 pages)

## Summary of Contents for Whirlpool W10198562A

[Page 1](#) 15.5" (39.4 cm) Washer/ryer Pedestal nstallation nstructions Piédestal de 15,5" (39,4 cm) pour laveuse/sécheuse nstructions d'installation...

[Page 2](#) Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 3](#) WARNING Excessive Weight Hazard Use two or more people to move and uninstall washer. Failure to do so can result in back or other injury. WARNING Excessive Weight Hazard Use two or more people to move and uninstall dryer. Failure to do so can result in back or other injury. WARNING Excessive Weight Hazard Use two or more people to move and uninstall dryer.

[Page 4](#) WARNING Excessive Weight Hazard Use two or more people to move washer or dryer. Failure to do so can result in back or other injury. A. Carton sides IMPORTANT: WARNING Excessive Weight Hazard Use two or more people to move and install pedestal. Failure to do so can result in back or other injury.

[Page 5](#) A. Locknut A. Washer bottom B. Dryer bottom C. Install screws A. Lower screws in keyhole slots.

[Page 7](#) Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Voici le symbole d'alerte de sécurité. Ce symbole d'alerte de sécurité...

[Page 8](#) AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer et désinstaller la laveuse. Le non-respect de cette instruction peut causer une blessure au dos ou d'autre blessure. AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer et désinstaller la sècheuse.

[Page 9](#) AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer et désinstaller la sècheuse. Le non-respect de cette instruction peut causer une blessure au dos ou d'autre blessure. AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer la laveuse ou la sècheuse.

[Page 10](#) AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer et installer le piédestal. Le non-respect de cette instruction peut causer une blessure au dos ou d'autre blessure. A. Glissière du tiroir B. Vis à tête hexagonale A.

[Page 11](#) A. Contre-écrous...

This manual is also suitable for:

W10205335a sp