



Asus ROG THOR Series Quick Start Manual

1
2
3
4
5
6
7

--

•

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

1 Package Contents

2 Specifications


3 Cable Description

4 Front View

5 Right View

6 Getting Started

[Download this manual](#)

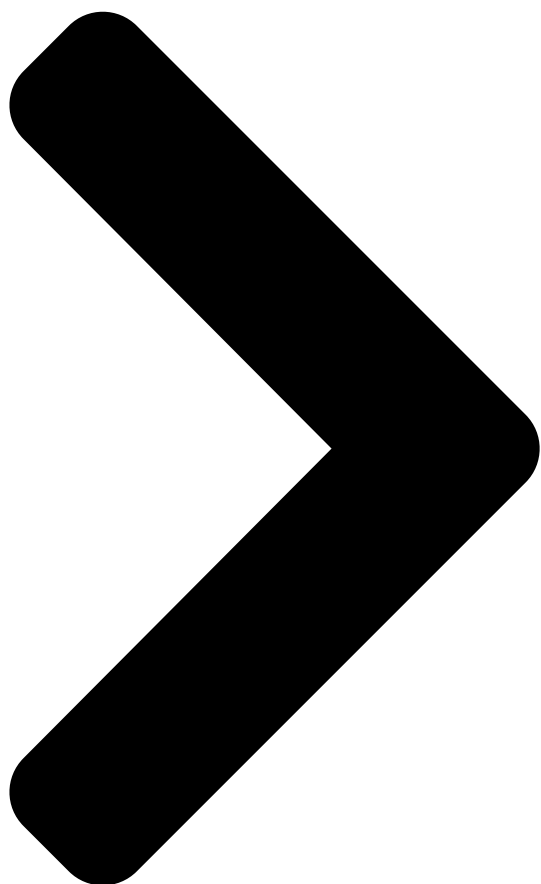

Quick Start Guide

快速启动指南

快速启动指南

快速启动指南 (繁體)

Guide de démarrage rapide (Français)

Schnellstartanleitung (Deutsch)

Guida rapida (Italiano)

Краткое руководство (Русский)

Guia de Início Rápido (Português do Brasil)

Rychlý průvodce (Čeština)

Hurtigt i gang aktiviteter (Dansk)

لتشغيل السريع

Beleidsplan (Nederlands)



REPUBLIC OF
GAMERS

ROG. TW

Οδηγός γρήγορης εκκίνησης (Ελληνικά)

快速入门指南 (繁體中文)

Przewodnik szybkiego startu (Polski)

Guía de inicio rápido (Español)

Snabbstartshandbok (Svenska)

Стислий керівництво для початку експлуатації (Українська)

Vodič za brzi početak rada (Hrvatski)

Hurtigstartveiledning (Norsk)

Kratko uputstvo za početak (Srpski)

Vodič za hitri začetek (Slovenščina)

Hızlı Başlangıç Kılavuzu (Türkçe)

Quickstart

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus ROG THOR Series

[Computer Accessories Asus ROG-THOR Series Quick Start Manual](#)

Power supply unit (141 pages)

[Power Supply Asus ROG THOR Quick Start Manual](#)

(114 pages)

[Power Supply Asus ROG THOR Quick Start Manual](#)

Power supply unit (122 pages)

[Power Supply Asus ROG Q20140b Quick Start Manual](#)

(89 pages)

[Power Supply ASUS A series Quick Reference](#)

(4 pages)

[Power Supply Asus REPUBLIC OF GAMERS ROG Stix PSU 650W Quick Start Manual](#)

(74 pages)

[Power Supply Asus TUF Gaming 550B Quick Start Manual](#)

(89 pages)

[Power Supply Asus ROG STRIX Q15428 Quick Start Manual](#)

(74 pages)

Summary of Contents for Asus ROG THOR Series

[Page 1](#) Q15060a Quick Start Guide Beknopte handleiding (Nederlands) Οδηγός γρήγορης εκκίνησης (Ελληνικά) 快速启动指南 (简体) 快速启动指南 (繁体) Przewodnik szybkiego startu (Polski) Guide de démarrage rapide (Français) Guía de inicio rápido (Español) Schnellstartanleitung (Deutsch) Snabbstartshandbok (Svenska) Guida rapida (Italiano) Стисле...

[Page 2: Package Contents](#)

Package contents ROG-THOR-850P ROG-THOR-1200P 1 x ROG-THOR-850P PSU 1 x ROG-THOR-1200P PSU 1 x Chassis Screws Package 1 x Chassis Screws Package 1 x ROG Sticker 1 x ROG Sticker 4 x ROG Cable Tie 6 x ROG Cable Tie 10 x Cable Tie 12 x Cable Tie 2 x Sleeved Cable Combs (6-pin)

[Page 3: Cable Description](#)

Cable description Connector Cable MB Power 610mm 650mm 75mm PCIe 675mm 400mm 120mm 120mm 120mm 350mm 150mm 150mm 150mm SATA (Included in 1200W only) 450mm 120mm (Included in 850W only) SATA to peripheral 150mm 150mm (continued on the next page) ROG Thor PSU...

[Page 4: Front View](#)

Connector Cable 450mm 120mm 120mm Peripheral 350mm 120mm Floppy 101mm 950mm Addressable RGB 950mm Features The illustrations in this section are for reference only and may vary between models. Front view ROG Thor PSU...

[Page 5: Right View](#)

Left view 0 dB Fan Right view OLED power display 8-pin CPU / VGA / PCI-E connectors 0 dB Fan button* 2-pin Addressable AURA RGB connector Power switch 6-pin Peripheral-IDE / SATA / Molex connectors Power connector 10-pin and 18-pin MB connectors * Pressing this button will turn off the 0dB function, allowing the PSU fan to spin at all times.

[Page 6: Getting Started](#)

Getting started The illustrations in this section are for reference only and may vary between models. Connecting the peripheral cables You may connect the SATA to Peripheral cable or Floppy cable to any of the Peripheral cables to extend additional SATA power connectors or a floppy power connector. To extend SATA power connectors: 150mm 150mm...

[Page 7](#) Safety information • NEVER, under any circumstances, open the power supply unit. This is extremely dangerous due to the high voltage inside. • DO NOT insert any objects into the fan grill or the ventilation area of the power supply unit. • DO NOT place any objects in front of the fan or the ventilation area of the power supply unit that may obstruct or restrict the airflow. • USE ONLY the modular cables bundled with the power supply unit. • Avoid dust, humidity, and temperature extremes. Do not place the power supply unit in any area where it may become wet. • The power supply unit is for integration into a computer, and not intended for external or outdoor usage. • DO NOT use any third party cables or extension cables with this unit. Notice labels ROG Thor PSU...

This manual is also suitable for:

[Rog-thor-850p](#)[Rog-thor-1200p](#)