

TOSHIBA

Toshiba BMS-LSV4E Installation Manual

Bacnet software (for intelligent server)

1
2
3
4
5
6
7
8

• PAGE

1

OF 8 GO

•

[Table of Contents](#)

•

Bookmarks

Table of Contents

1 Table of Contents

2 Precautions for Safety

3 Before Installation

4 Elements of the Intelligent Server


5 CF (Compact Flash) Card Installation

6 Setting

[7 Installation](#)

[8 Cable Connection](#)

[Download this manual](#)

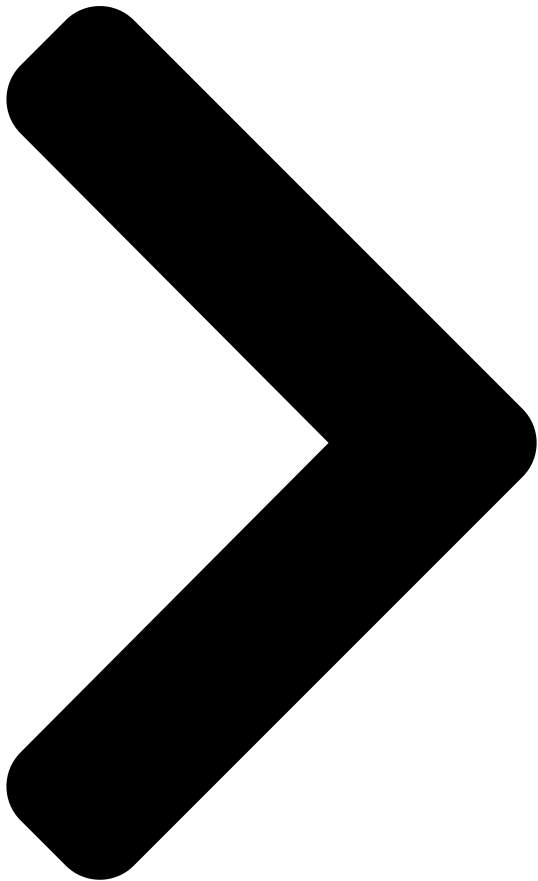

INSTALLATION MANUAL

TM

BACnet **TOSHIBA**

SOFTWARE

Model:

BMS-STBN

E

(for Intelligent Server model BMS-LSV4E only)



- Thank you very much for purchasing this TOSHIBA BACnet Software.
- Please read this manual carefully beforehand for proper installation of the software.

CONTENTS

Precautions for Safety

..... 1

Before Installation

1

Elements of the Intelligent Server

..... 2

1 CF (Compact Flash) card Installation

..... 3

2 Setting

..... 3

3

Installation



..... 4

4 Cable Connection

..... 6

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba BMS-LSV4E

[Server Toshiba BMS-LSV6E Installation Manual](#)

Intelligent server (8 pages)

[Server Toshiba BMS-LSV6UL Installation Manual](#)

Bacnet system intelligent server (12 pages)

[Server Toshiba IPedge Installation Manual](#)

(196 pages)

[Server Toshiba TC-net Instruction Manual](#)

(134 pages)

[Server Toshiba IP edge EP Installation Manual](#)

(206 pages)

[Server Toshiba Strata CIX Installation And Maintenance Manual](#)

Mas release 3 (62 pages)

[Server Toshiba C1 Installation Manual](#)

Enterprise server (16 pages)

[Server Toshiba Strategy iES32 Installation Manual](#)

Enterprise server (16 pages)

[Server Toshiba Strata CIX40 R5.2 Software - R1 ~ R3 Hardware Installation And Maintenance Manual](#)

R5.2 software - r1 ~ r3 hardware (82 pages)

[Server Toshiba Magnia SG20 User Manual](#)

Toshiba magnia (331 pages)

[Server Toshiba SD-H400-S-TU Installation Manual](#)

Digital media server (239 pages)

[Server Toshiba RS-TX20 Viewer's Manual](#)

Digital media server (204 pages)

[Server Toshiba Strata CS User Manual](#)

Toshiba communication server client user guide (249 pages)

[Server Toshiba Magnia 3310 User Manual](#)

(335 pages)

[Server Toshiba SD-H400-S-TU Installation Manual](#)

Digital media server (291 pages)

Summary of Contents for Toshiba BMS-LSV4E

[Page 1: Table Of Contents](#)

SOFTWARE Model: BMS-STBN (for Intelligent Server model BMS-LSV4E only) • Thank you very much for purchasing this TOSHIBA BACnet Software. • Please read this manual carefully beforehand for proper installation of the software. CONTENTS Precautions for Safety1 Before Installation 1 Elements of the Intelligent Server

[Page 2: Precautions For Safety](#)

Failure to do so may result in disconnection, overheating, or fire. Before Installation NOTE This CF (Compact Flash) card is the software for the Intelligent Server (Model: BMS-LSV4E) only. Prepare the Intelligent Server to use this card. This card is not applicable to BMS-LSV2E. Check

the following package contents.

[Page 3: Elements Of The Intelligent Server](#)

Elements of the Intelligent Server Front view INTELLIGENT SERVER RUN LED (green) LON T/R LED (green) General-purpose LED1 (green) END LED (green) General-purpose LED2 (green) General-purpose switch 2 Maintenance switch Error indication LED (red) Shutdown request switch General-purpose switch 1 Reset switch SERVICE LED (green) LON service switch...

[Page 4: Cf \(Compact Flash\) Card Installation](#)

CF (Compact Flash) card Installation REQUIREMENT • Do not insert or remove the CF (Compact Flash) card during power on of the Intelligent Server. Doing so may cause a failure. • If the CF (Compact Flash) card is not inserted properly, the Intelligent Server will not work. Insert the attached CF (Compact Flash) card fully into the CF (Compact Flash) card slot on the side of the Intelligent Server.

[Page 5: Installation](#)

Installation Intelligent Server Installation Method and Orientation There are two ways to install the Intelligent Server as shown below: (1) rack mount (2) surface mount. The rack mount installation requires a support bracket for a 19-inch rack. Please contact us if you need the support bracket.

[Page 6](#) Installation (continued) Installation Space and Maintenance Space The installation space and the maintenance space must be determined before installation. These spaces depend on installation method. Installation Space The values in the following table are required for installation space in each direction. Select an installation place that allows good air ventilation.

[Page 7: Cable Connection](#)

Cable Connection AC Power Cable Connection REQUIREMENT Power cable is not supplied for the Intelligent Server. Prepare a 3-core power cable conforming to applicable safety standards. Be sure to connect the earth line of the power cable securely. • Insert an AC power cable into the AC inlet of the unit. •...

[Page 8](#) Appearance and Size WARNING Do not decompose. Unit in mm NOTE Trial operation should be checked by professional service personnel. Trademarks:
.....
.....