



# Toshiba 46TL933F How To Upgrade The Software



1  
2  
3  
4

|  |
|--|
|  |
|--|

•

Bookmarks

|  |
|--|
|  |
|--|

[Download this manual](#)

### Quick Links





# How to upgrade the Software

## <Preparation>

Whenever updating the Software, perform the "Media Player setup" as below. Otherwise software updating may not be started.

### 1

Press the "MENU" button on the remote controller.

□ Via LEFT/RIGHT or UP/DOWN button on the remote controller, select

▢ "Media Player"

▢ "USB Media Player"

▢ "Setup"

Note; "Setup" may not be visible until you select it through "USB Media Player" menu.



## 2 **TOSHIBA** Leading Innovation >>>

Press the "left or right" arrow buttons to select the "On" as shown in figure2.

## 3

Press "EXIT" button on the remote controller to exit the "Menu".

Copyright 2010

Figure2

All Rights Reserved

Page 1 of 4

[Next Page](#)

1  
2  
3  
4

## Related Manuals for Toshiba 46TL933F

### [TV Toshiba 46TL933G Service Manual](#)

Lcd color television (140 pages)

### [TV Toshiba 42VL963B Owner's Manual](#)

VI96 digital series (92 pages)

### [LCD TV Toshiba RL939 Digital Series Manual](#)

(90 pages)

### [Smart TV Toshiba 43LL3C63DB Quick Start Manual](#)

(13 pages)

### [Smart TV Toshiba 43 UF3D Series Quick Start Manual](#)

(113 pages)

### [Smart TV Toshiba 32WK3C63DB Quick Start Manual](#)

(13 pages)

### [Smart TV Toshiba 32WD2A63DB Quick Start Manual](#)

(17 pages)

### [Smart TV Toshiba 24WK3C63DB Quick Start Manual](#)

(13 pages)

### [Smart TV Toshiba 32WK3A63DB Quick Start Manual](#)

(12 pages)

### [Smart TV Toshiba 24W3163DB Quick Start Manual](#)

(12 pages)


### [Smart TV Toshiba 32L2163DB Quick Start Manual](#)

(12 pages)

### [Smart TV Toshiba 32WL3C63DB Quick Start Manual](#)

(12 pages)

## Summary of Contents for Toshiba 46TL933F

**Page 1** How to upgrade the Software <Preparation> Whenever updating the Software, perform the "Media Player setup" as below. Otherwise software updating may not be started. Press the "MENU" button on the remote controller. □Via LEFT/RIGHT or UP/DOWN button on the remote controller, select ...

**Page 2** <Software updating procedure> Connect the AC power and turn "ON" the TV receiver. The USB reader is located on the left or right of the cabinet near the side control/jack assembly as shown in Figure1. Figure3 Insert the "USB Drive" into the USB slot as shown in Figure2. Figure4 Copyright 2010 All Rights Reserved...

**Page 3** After insertion of USB Drive into reader slot a firmware upgrade information window will appear as shown in Figure5. Figure5 If the window is no present, remove the USB Drive and try reinserting the USB Drive again. Press the "left or right arrow" buttons on the remote controller to select the "Yes". Press the "OK"...

**Page 4** Following message will appease as shown in figure 8 and then disappear. Figure8 While the TV is upgrading no indication will appear on the TV screen but the upgrade is in process. This will take approx.3 minutes. DO NOT unplug the AC power to the TV or press any buttons on the remote controller or the TV keypad during this process.

This manual is also suitable for:

46tI938g46tI933g46tI968g46tI968b46tI963b40tI968g ... [Show all](#)