



Whirlpool DU810SWPT User Instructions

Built-in dishwasher use & care guide

1
2
3
4
5
6
7
8
9
10
11
12
Table Of Contents
13

--

•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

--

Available languages

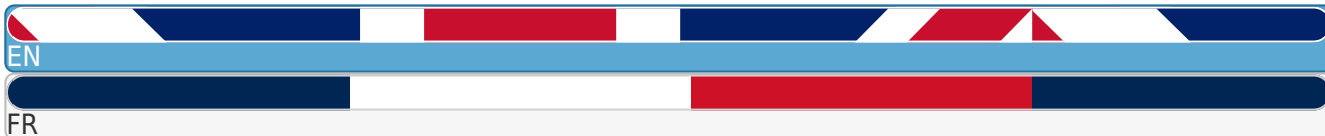

Quick Links

[1 Dishwasher Safety](#)


[2 Dishwasher Use](#)

[3 Quick Steps](#)

[4 Dishwasher Care](#)

[5 Troubleshooting](#)

[Download this manual](#)

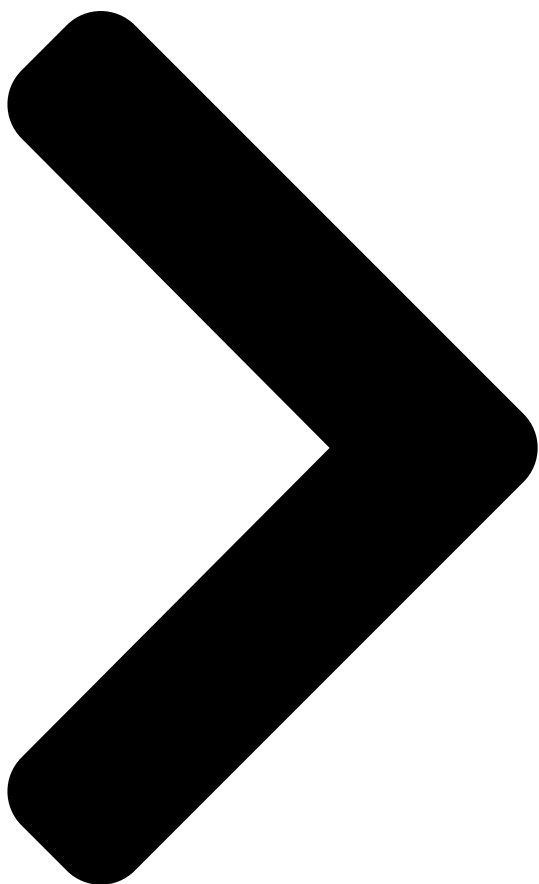

THANK YOU for purchasing this high-quality product. If you should experience a problem not covered in TROUBLESHOOTING,

please visit our website at www.whirlpool.com for additional information. If you still need assistance, call us at 1-800-253-1301. In

Canada, visit our website at www.whirlpool.ca or call us at 1-800-807-6777.

You will need your model and serial number located near the door on the right-hand or left-hand side of the dishwasher interior.

Para obtener acceso a "Instrucciones para el usuario de la lavavajillas" en español, o para información adicional de su producto

visite : www.whirlpool.com

Tenga listo su número de modelo completo. Puede encontrar su número de modelo y de serie en la etiqueta ubicada cerca de la

puerta al lado derecho o izquierdo del interior de la lavavajillas.

We have provided many important safety messages in this Quick Reference Guide and on your appliance. Always read and obey

all safety messages.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:



All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

WARNING:

When using the dishwasher, follow basic precautions, including the following:

Read all instructions before using the dishwasher.

Use the dishwasher only for its intended function.

Use only detergents or rinse agents recommended for use in a dishwasher, and keep them out of the reach of children.

When loading items to be washed:

1) Locate sharp items so that they are not likely to damage the door seal; and

2) Load sharp knives with the handles up to reduce the risk of cut-type injuries.

Do not wash plastic items unless they are marked

"dishwasher safe" or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.

Do not touch the heating element during or immediately after use.

Do not operate the dishwasher unless all enclosure panels are properly in place.

W10130987A



ManualsLib.com

Dishwasher Safety

Your safety and the safety of others are very important.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

You can be killed or seriously injured if you don't immediately follow instructions.

You can be killed or seriously injured if you don't follow instructions.

Do not tamper with controls


Do not abuse, sit on, or stand on the door, lid, or dish racks of the dishwasher.

To reduce the risk of injury, do not allow children to play in or on the dishwasher.

Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the dishwasher turn on all hot water faucets and let the



water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time. Remove the door or lid to the washing compartment when removing an old dishwasher from service or discarding it.

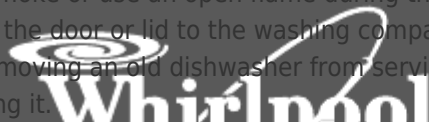

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool DU810SWPT

[Dishwasher Whirlpool DU851SWP Dimensions](#)

Undercounter dishwasher (1 page)

[Dishwasher Whirlpool DU810SWPU Energy Manual](#)

Energy guide (2 pages)

[Dishwasher Whirlpool DU810SWP Features & Specifications](#)

(2 pages)

[Dishwasher Whirlpool DU400SWK Dimensions](#)

Undercounter dishwasher (1 page)

[Dishwasher Whirlpool DU930PWSS - 24 Inch Full Console Dishwasher Dimensions](#)

Undercounter dishwasher (1 page)

[Dishwasher Whirlpool DU4000 Series Use And Care Manual](#)

Whirlpool undercounter dishwashers model series du4000, du8000, du8100, du8400 use and care guide (24 pages)

[Dishwasher Whirlpool DU8100XT Use & Care Manual](#)

Undercounter dishwasher (16 pages)

[Dishwasher Whirlpool DP840 Use And Care Manual](#)

Whirlpool dishwasher user manual (40 pages)

[Dishwasher Whirlpool DU810 Use & Care Manual](#)

(19 pages)

[Dishwasher Whirlpool DU8150XX Use & Care Manual](#)

Whirlpool undercounter dishwasher use & care guide: model du8150xx (16 pages)

[Dishwasher WHIRLPOOL DU850SWPB4 User Instructions](#)

(12 pages)

[Dishwasher Whirlpool DU805DWGB1 Use & Care Manual](#)

Undercounter dishwasher (40 pages)

[Dishwasher Whirlpool DU800DWG Manual](#)

1998 dishwashers (67 pages)

[Dishwasher Whirlpool DU8100XX Use And Care Manual](#)

Undercounter dishwasher (16 pages)

[Dishwasher Whirlpool DU850SWPB0 Parts List](#)

Whirlpool undercounter dishwasher parts list (8 pages)

[Dishwasher Whirlpool DU850SWLQ0 Use & Care Manual](#)

(36 pages)

Summary of Contents for Whirlpool DU810SWPT

[Page 1: Dishwasher Safety](#)

THANK YOU for purchasing this high-quality product. If you should experience a problem not covered in TROUBLESHOOTING, please visit our website at www.whirlpool.com for additional information. If you still need assistance, call us at 1-800-253-1301. In Canada, visit our website at www.whirlpool.ca or call us at 1-800-807-6777.

[Page 2: Grounding Instructions](#)

For a grounded, cord-connected dishwasher: The dishwasher must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. The dishwasher is equipped with a cord having an equipment-grounding conductor and a grounding plug.

[Page 3](#) To avoid thumping/clattering noises during operation, load dishes so they do not touch one another. Make sure lightweight load items are secured in the racks. When loading silverware, always place sharp items pointing down and avoid “nesting” as shown. STEP 2 Add Detergent NOTE: If you do not plan to run a wash cycle soon, run a rinse cycle.

[Page 4: Dishwasher Care](#)

Do not use detergent. Vinegar will mix with the wash water. First try the solutions suggested here or visit our website and reference FAQs (Frequently Asked Questions) In U.S.A., www.whirlpool.com In Canada, www.whirlpool.ca Dishwasher is not operating properly Dishwasher does not run or stops during a cycle...

[Page 5](#) Dishes do not dry completely Dishes do not dry completely Did you use a rinse aid? Your dishwasher is designed to use rinse aid for good drying performance. Without rinse aid your dishes and dishwasher interior will have excessive moisture. The heat dry option will not perform as well without rinse aid.

[Page 6: One-Year Limited Warranty](#)

In Canada, visit www.whirlpool.ca If you do not have access to the Internet and you need assistance using your product, you may contact Whirlpool at the number below. Have your complete model number ready. You can find your model number and serial number on the label located near the door on the right-hand or left-hand side of the dishwasher interior.

[Page 7: Sécurité Du Lave-Vaisselle](#)

Nous vous REMERCIONS d'avoir acheté ce produit de haute qualité. Si vous rencontrez un problème non mentionné dans la section DÉPANNAGE, veuillez visiter notre site Web www.whirlpool.com pour des informations supplémentaires. Si vous avez toujours besoin d'assistance, veuillez nous téléphoner au 1-800-253-1301. Au Canada, visitez notre site Web www.whirlpool.ca ou téléphonez-nous au 1-800-807-6777.

[Page 8: Instructions De Mise À La Terre](#)

INSTRUCTIONS DE MISE À LA TERRE Pour un lave-vaisselle relié à la terre, branché avec un cordon Le lave-vaisselle doit être relié à la terre. En cas d'un mauvais fonctionnement ou d'une panne, la mise à terre réduira le risque d'un choc électrique en fournissant le moins de résistance pour le courant électrique.

[Page 9](#) plastique au lave-vaisselle que s'ils sont identifiés comme “lavable au lave-vaisselle”. Pour éviter les bruits de choc et d'entrechoc durant le fonctionnement, charger la vaisselle pour que les articles ne se touchent pas les uns les autres. S'assurer que les articles légers sont bien retenus dans les paniers.

[Page 10: Entretien Du Lave-Vaisselle](#)

Essayer d'abord les solutions suggérées ici ou visiter notre site Web et les références FAQ (Foire aux questions) pour éviter Aux É.-U., www.whirlpool.com Au Canada, www.whirlpool.ca Le lave-vaisselle ne fonctionne pas correctement Le lave-vaisselle ne fonctionne pas ou s'arrête au cours d'un programme La porte est-elle bien fermée et enclenchée?

[Page 11](#) La vaisselle n'est pas complètement sèche La vaisselle n'est pas complètement sèche Avez-vous utilisé un agent de rinçage? Votre lave-vaisselle est conçu pour utiliser un agent de rinçage pour un meilleur rendement de séchage. Sans agent de rinçage la vaisselle et l'intérieur du lave-vaisselle seront extrêmement humides.

[Page 12](#) JURIDIQUES SPÉCIFIQUES ET VOUS POUVEZ ÉGALEMENT JOUIR D'AUTRES DROITS QUI PEUVENT VARIER D'UNE JURIDICTION À UNE AUTRE. À l'extérieur du Canada et des 50 États des États-Unis, cette garantie ne s'applique pas. Contacter votre marchand Whirlpool autorisé pour déterminer si une autre garantie s'applique.

This manual is also suitable for:

[du810swpq](#) [du850swpt](#)[Du810swpu](#) [du850swpq](#) [du850swpb](#)[Du850swpu](#) ... [Show all](#)