



Whirlpool WFC130M0AB Use & Care Manual

Electric range

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Table of Contents](#)

[2 Feature Guide](#)


[3 Electronic Oven Controls](#)

[4 Self-Cleaning Cycle \(on some Models\)](#)

[5 Troubleshooting](#)

[6 Accessories](#)

[Download this manual](#)

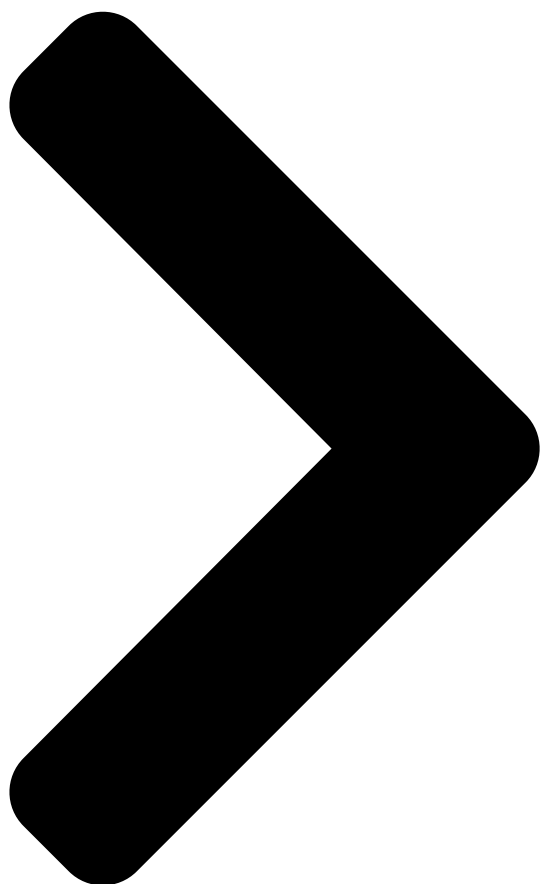

THANK YOU for purchasing this high-quality product. If you should experience a problem not covered in TROUBLESHOOTING,

please visit our website at www.whirlpool.com for additional information. If you still need assistance, call us at 1-800-253-1301.

You will need your model and serial number located on the oven frame behind the storage drawer panel. Para obtener acceso a "Instrucciones para el usuario de la estufa eléctrica" en español, o para obtener información adicional acerca

de su producto, visite: www.whirlpool.com

Tenga listo su número de modelo completo. Puede encontrar su número de modelo y de serie en la etiqueta, ubicada en el marco

del horno, detrás del panel del cajón de almacenamiento.

W10394383A

Table of Contents

RANGE SAFETY	2
The Anti-Tip Bracket	2
FEATURE GUIDE	4
COOKTOP USE	5
Cookware	7
Home Canning	7
OVEN USE	8
Electronic Oven Controls	8
Sabbath Mode (on some models)	8
Aluminum Foil	9
Positioning Racks and Bakeware	9
Oven Vent.....	10
Baking and Roasting.....	10
Broiling	10
Cook Time (on some models).....	10
RANGE CARE	11
Self-Cleaning Cycle (on some models)	11
General Cleaning.....	12
Oven Light	13
TROUBLESHOOTING	13
ACCESSORIES	15
WARRANTY	15

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool WFC130M0AB

[Ranges Whirlpool WFC110M0AW Product Dimensions](#)

30" (76.2 cm) freestanding electric range (1 page)

[Ranges Whirlpool WFC340S0AW Use & Care Manual](#)

Electric range (12 pages)

[Ranges Whirlpool WFC110M0AW User Instructions](#)

4.8 cu. ft. capacity electric range with storage drawer (8 pages)

[Ranges Whirlpool WFC110M0AW Warranty](#)

Warranty information (1 page)

[Ranges Whirlpool WFC340S0AB Installation Instructions Manual](#)

30" (76 cm) freestanding electric ranges (16 pages)

[Ranges WHIRLPOOL WFC340S0AB0 User Instructions](#)

Electric range (12 pages)

[Ranges WHIRLPOOL WFE320M0AS0 User Instructions](#)

(16 pages)

[Ranges WHIRLPOOL WFC110M0AW0 User Instructions](#)

(8 pages)

[Ranges Whirlpool WFC110M0A Product Dimensions](#)

30" (76.2 cm) freestanding electric range (1 page)

[Ranges Whirlpool WFC150M0EW3 User Instructions](#)

(16 pages)

[Ranges Whirlpool WFC310S0ES User Instructions](#)

(16 pages)

[Whirlpool WFC315S0JS - 4.8 cu. ft. Electric Range with Keep Warm Setting Manual](#)

(article)

[Ranges Whirlpool WFG374LVS0 Tech Sheet](#)

(6 pages)

[Ranges Whirlpool wfg515s0es User Instruction](#)

(36 pages)

[Ranges Whirlpool WFE500M4HS User Instructions](#)

(27 pages)

[Ranges Whirlpool WFE525S0HS User Instructions](#)

(44 pages)

Summary of Contents for Whirlpool WFC130M0AB

[Page 1: Table Of Contents](#)

THANK YOU for purchasing this high-quality product. If you should experience a problem not covered in TROUBLESHOOTING, please visit our website at www.whirlpool.com for additional information. If you still need assistance, call us at 1-800-253-1301. You will need your model and serial number located on the oven frame behind the storage drawer panel.

[Page 2: Range Safety](#)

Your safety and the safety of others are very important. We have provided many important

safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 3: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS WARNING: To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, including the following: WARNING: TO REDUCE THE RISK OF TIPPING OF THE RANGE, THE RANGE MUST BE SECURED BY PROPERLY INSTALLED ANTI-TIP DEVICES.

[Page 4: Feature Guide](#)

This manual covers several models. Your model may have some or all of the items listed. Refer to this manual or the Frequently Asked Questions (FAQs) section of our website at www.whirlpool.com for more detailed instructions. KEYPAD FEATURE CLOCK Clock...

[Page 5: Cooktop Use](#)

KEYPAD FEATURE START TIME Delayed start (on some models) COOK TIME Timed cooking (on some models) SELF CLEAN Self-Cleaning (on some cycle models) CONTROL Oven control LOCK lockout WARNING Fire Hazard Turn off all controls when done cooking. Failure to do so can result in death or fire. The control knobs can be set to anywhere between HIGH and LOW.

[Page 6](#) For foods containing sugar in any form, clean up all spills and soils as soon as possible. Allow the cooktop to cool down slightly. Then, while wearing oven mitts, remove the spills using a scraper while the surface is still warm. If sugary spills are allowed to cool down, they can adhere to the cooktop and can cause pitting and permanent marks.

[Page 7: Cookware](#)

IMPORTANT: Do not leave empty cookware on a hot surface cooking area, element or surface burner. Ideal cookware should have a flat bottom, straight sides and a well-fitting lid, and the material should be of medium-to-heavy thickness. Rough finishes may scratch the cooktop. Aluminum and copper may be used as a core or base in cookware.

[Page 8: Oven Use](#)

Odors and smoke are normal when the oven is used the first few times, or when it is heavily soiled. Control Display The display will flash when powered up or after a power loss. Press CANCEL to clear. When oven is not in use, the time of day is displayed.

[Page 9: Aluminum Foil](#)

To set a Timed Bake using Sabbath Mode (on some models): WARNING Food Poisoning Hazard Do not let food sit in oven more than one hour before or after cooking. Doing so can result in food poisoning or sickness. 1. Press BAKE. 2.

[Page 10: Oven Vent](#)

A. Oven vent ® ACCUBAKE Temperature Management System The ACCUBAKE ® system electronically regulates the oven heat levels during preheat and bake to maintain a precise temperature range for optimal cooking results. The bake and broil elements cycle on and off in intervals. The bake element will glow red when cycling on;...

[Page 11: Range Care](#)

WARNING Burn Hazard Do not touch the oven during the Self-Cleaning cycle. Keep children away from oven during Self-Cleaning cycle. Failure to follow these instructions can result in burns. IMPORTANT: The health of some birds is extremely sensitive to the fumes given off during the Self-Cleaning cycle.

[Page 12: General Cleaning](#)

Always follow label instructions on cleaning products. For additional information, you can visit the Frequently Asked Questions (FAQs) section of our website at www.whirlpool.com. Soap, water and a soft cloth or sponge are suggested first unless otherwise noted.

[Page 13: Oven Light](#)

4. Replace bulb, then bulb cover by turning clockwise. 5. Plug in range or reconnect power. TROUBLESHOOTING to possibly avoid the cost of a service call. www.whirlpool.com SOLUTIONS Plug into a grounded outlet. Replace the fuse or reset the circuit breaker. If the problem continues, call an electrician.

[Page 14](#) PROBLEM POSSIBLE CAUSES Display shows messages Power failure (display shows flashing time) Error code (display shows letter followed by number) Start needs to be pressed so a cycle can begin (display shows "PUSH" or "PSH"). Self-Cleaning Cycle will not The oven door is not closed. operate The Self-Cleaning function has not been entered correctly.

[Page 15: Accessories](#)

Whirlpool Corporation or Whirlpool Canada LP (hereafter "Whirlpool") will pay for Factory Specified Parts and repair labor to correct defects in materials or workmanship. Service must be provided by a Whirlpool designated service company. This limited warranty is valid only in the United States or Canada and applies only when the major appliance is used in the country in which it was purchased.

[Page 16](#) For assistance or service in the U.S.A., call 1-800-253-1301. If you need further assistance, you can write to Whirlpool with any questions or concerns at the address below: Whirlpool Brand Home Appliances Customer eXperience Center...

This manual is also suitable for:

wfc130m0aw wfc310s0ab wfc310s0aw wfc310s0at wfe320m0ab wfe320m0aw ... [Show all](#)