



# Fn-Esse - Toshiba 1410-S105 User Manual

1410-s105 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17

Table Of Contents

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254  
255  
256  
257  
258  
259  
260  
261  
262  
263  
264  
265  
266  
267

268  
269  
270  
271



•

[Table of Contents](#)

•

## Bookmarks





# 192

## Toshiba Utilities

### *Fn-esse*

---

Using Accessibility enables you to make the Fn key a sticky key, meaning you can press it once, release it and then press a function key to activate the hot key function.

To open Accessibility:

**1**

Click Start, then click All Programs.

**2**

Select Toshiba Utilities, then select Accessibility.  
The TOSHIBA Accessibility window appears.

**3**

Check the Use Fn-StickyKey box.

*Sample TOSHIBA Accessibility window*

**4**


Put a check mark next to the desired option.

**5**

Click Apply, then click OK.

The function is now active.

**Fn-esse**

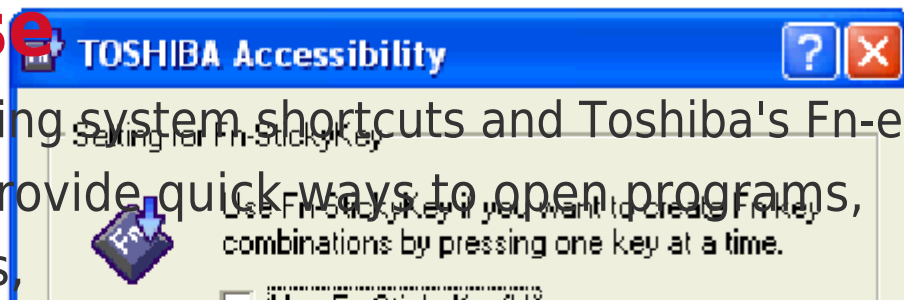

The operating system shortcuts and Toshiba's Fn-esse program provide quick ways to open programs, documents,

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1

...

191

192

193

194

Quick Links:

[Wireless Interoperability](#)

## Related Manuals for Toshiba 1410-S105

[Laptop TOSHIBA Satellite 1415 Series User Manual](#)

Toshiba satellite computer (266 pages)

[Laptop Toshiba PS241U-2DC2P7 User Manual](#)

User manual (240 pages)

[Laptop Toshiba Satellite 1410 User Manual](#)

(240 pages)

[Laptop Toshiba Satellite 1415-S105 Specifications](#)

Satellite 1415 series (2 pages)

[Laptop Toshiba Satellite 1415-S115 Specifications](#)

Satellite 1415 series (2 pages)

[Laptop Toshiba 1405-S171 User Manual](#)

1405-s171 user's guide (298 pages)

[Laptop TOSHIBA Satellite 1400 User Manual](#)

Portable personal computer (240 pages)

[Laptop TOSHIBA Satellite 1400 User Manual](#)

Toshiba satellite portable personal computer (232 pages)

[Laptop Toshiba Satellite Radius 14 L40W-C User Manual](#)

(117 pages)

[Laptop Toshiba Satellite 1130 Series User Manual](#)

Toshiba notebook computer user's guide (244 pages)

[Laptop Toshiba 1905-S301 User Manual](#)

1905-s301 user's guide (271 pages)

[Laptop Toshiba 1105 User Manual](#)

1105 user's guide (242 pages)

[Laptop Toshiba 100CS Manual](#)

(170 pages)

[Laptop Toshiba NB 105-SP2801A Manual Del Usuario](#)

Nb 105-sp2801a user's guide (106 pages)

[Laptop Toshiba KIRABook 13 i5 Quick Start Manual](#)

Quick start guide (13 pages)

[Laptop Toshiba Satellite Radius 12 P20W-C User Manual](#)

(116 pages)

## Related Content for Toshiba 1410-S105

[Satellite 1415 Series Fn-Esse](#)

TOSHIBA Satellite 1415 Series

[Satellite A40-S200 Fn-Esse](#)

Toshiba Satellite A40-S200

[Satellite 1800-S203 Fn-Esse](#)

Toshiba Satellite 1800-S203

[U205-S5002 - Satellite - Core Duo 1.66 GHz Fn-Esse](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[Portege 2010 Fn-Esse](#)

Toshiba Portege 2010

[M45-S165 - Satellite - Celeron M 1.5 GHz Fn-Esse](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Fn-Esse](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

[M115 S1061 - Satellite - Celeron M 1.6 GHz Fn-Esse](#)

Toshiba M115 S1061 - Satellite - Celeron M 1.6 GHz

This manual is also suitable for:

[1410-s1061410-s1731415-s1051415-s1061415-s1151415-s173](#) ... [Show all](#)