



# Control Buttons; Disabling Or Enabling The Touchpad - Toshiba A10-S100 User Manual

A10-s100 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
Table Of Contents  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254  
255  
256  
257  
258  
259  
260  
261  
262  
263



•

[Table of Contents](#)

•

## Bookmarks





# 62

## **Getting Started**

*Using the computer for the first time*

---

## **Control buttons**

When a step instructs you to click or choose an item, move the cursor to the item, then press and release the primary

(left-hand) button. To double-click, press the primary button

twice in rapid succession. The primary button usually corresponds to the left mouse button.

The function of the secondary (right-hand) button depends on

the program you are using. It usually corresponds to the right

mouse button. Check your program's documentation to find

whether it uses the right mouse button.

## **Disabling or enabling the TouchPad**

The TouchPad is enabled by default. To change the enable/disable TouchPad setting by using the

["Disabling or enabling the TouchPad" on page](#)

You may also change the enable/disable setting as follows:

**1**

Click Start, Control Panel.

The Control Panel window appears.

**2**

Click Printers and Other Hardware.

**3**

Click Mouse.

The Mouse Properties window appears.

**4**

Click the TouchPAD ON/OFF tab.

The TouchPAD ON/OFF tab view window appears.

**5**

Select Disable or Enable, whichever is appropriate.

**6**

Click Apply.

**7**

Click OK.

The Mouse Properties window closes.

**8**

Close the Printers and Other Hardware window.

**9**

Close the Control Panel window.

+

keys, see

Fn

F9

235.

Manual ibm.com

[Table of Contents](#)



[Previous Page](#)  
[Next Page](#)

1  
...  
59  
60  
61  
62  
63  
64  
65  
66

Quick Links:

[Installing Additional Memory \(Optional\)](#)

## Related Manuals for Toshiba A10-S100

[Laptop Toshiba Satellite A10-S100 Specifications](#)

Toshiba satellite a10-s100: specifications (9 pages)

[Laptop Toshiba PSA10C-035WM Maintenance Manual](#)

Maintenance manual (417 pages)

[Laptop Toshiba Satellite A10 Maintenance Manual](#)

Personal computer (417 pages)

[Laptop Toshiba Satellite A10 Series User Manual](#)

Toshiba satellite a10 series portable personal computer user's manual (259 pages)

[Laptop Toshiba A10-S3501 User Manual](#)

A10-s3501 user's guide (252 pages)

[Laptop Toshiba Satellite A15 Resource Manual](#)

Toshiba satellite resource guide (52 pages)

[Laptop Toshiba Satellite A10 Series Field Replaceable Unit Documentation](#)

(11 pages)

[Laptop Toshiba Satellite A15-S129 Specifications](#)

Satellite a15 series (9 pages)

[Laptop Toshiba Satellite A15-S157 Specifications](#)

Satellite a15 series (9 pages)

[Laptop Toshiba Satellite A10-S129 Specifications](#)

Toshiba satellite a10-s129: specifications (9 pages)

[Laptop Toshiba Satellite A10-S167 Specifications](#)

Toshiba satellite a10-s167: specifications (9 pages)

[Laptop Toshiba Satellite A10-S169 Specifications](#)

Toshiba satellite a10-s169: specifications (9 pages)

[Laptop Toshiba Satellite A10-S177 Specifications](#)

Satellite a10 series (9 pages)

[Laptop Toshiba Satellite A15-S127 Specifications](#)

Satellite a15 series (3 pages)

[Laptop Toshiba Satellite A10-S127 Specifications](#)

Toshiba satellite a10-s127: specifications (3 pages)

[Laptop Toshiba PSA10U-0ZH6M3 Brochure](#)

Brochure (2 pages)

## Related Content for Toshiba A10-S100

[Satellite A35 Series Control Buttons](#)

Toshiba Satellite A35 Series

[C50 Series Media Control Buttons](#)

Toshiba C50 Series

[Qosmio X70-A series Media Control Buttons](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Media Control Buttons](#)

Toshiba Satellite L40 series

[Satellite L550 Series Control Buttons](#)

Toshiba Satellite L550 Series

[Satellite P200 Series Control Buttons](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Control Buttons](#)

Toshiba Qosmio X300 Series

[Satellite Media Control Buttons](#)

Toshiba Satellite

This manual is also suitable for:

[A10-s129A10-s1291A10-s169A10-s1691A10-s128A15-s127](#) ... [Show all](#)