

Control Buttons; Disabling Or Enabling The Touchpad - Toshiba A70-S2482TD User Manual

A70-s2482td user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

Table Of Contents

28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217



•

[Table of Contents](#)

•

Bookmarks



56

Getting Started

Using the TouchPad™



To move the cursor to the right side of the page, slide your finger across the TouchPad from left to right.



To move it to the left side, slide your finger from right to left.

NOTE

Once you have positioned your cursor, you can either click it into place by double-tapping the TouchPad or clicking the control buttons.

You can disable or enable the TouchPad. See [enabling the TouchPad" on page](#)

Control buttons

When a step instructs you to click or choose an item, move the cursor to the item, then press and release the primary (left-hand) button. To double-click, press the primary button

twice in rapid succession. The primary button usually corresponds to the left mouse button.

The function of the secondary (right-hand) button depends on

the program you are using. It usually corresponds to the right

mouse button. Check your program's documentation to find

whether it uses the right mouse button.

Disabling or enabling the TouchPad

The TouchPad is enabled by default. To change the enable/disable TouchPad setting:

1

Click Start, Control Panel.

The Control Panel window appears.

2

Click Printers and Other Hardware.

Because the TouchPad is much smaller than the display screen, moving your cursor across the screen often means having to move your finger several times across the TouchPad in the preferred direction.

"Disabling or

56.

[Previous Page](#)
[Next Page](#)

1
...
53
54
55
56
57
58
59
60

Quick Links:

[Fcc Requirements](#)

[Your Computer's Features and Specifications](#)

[Installing Additional Memory \(Optional\)](#)

Related Manuals for Toshiba A70-S2482TD

[Desktop Toshiba Satellite A70 Maintenance Manual](#)

(198 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

[Laptop Toshiba Satellite A70 Disassembly Manual](#)

(36 pages)

[Laptop Toshiba Satellite A75-S125 Specifications](#)

Satellite a75 series (12 pages)

[Laptop Toshiba Satellite A75 Series Specification Sheet](#)

Satellite a75 series (12 pages)

[Laptop Toshiba Satellite A75-S226 Specifications](#)

Satellite a75 series (11 pages)

[Laptop Toshiba Satellite A75-S206 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A75-S211 Specifications](#)

Toshiba satellite a75-s211: specifications (10 pages)

[Laptop Toshiba Satellite A75-S2112 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A75-S276 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A75-S2762 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A70-S249 Specifications](#)

Satellite a70 series (8 pages)

[Laptop Toshiba Satellite A75-S209 Specifications](#)

Satellite a75 series (8 pages)

[Laptop Toshiba Satellite A75-S2292 Specifications](#)

Satellite a75 series (8 pages)

[Laptop Toshiba Satellite A70-S2362 Product Information](#)

Satellite a70 series (5 pages)

[Laptop Toshiba Satellite A100 Maintenance Manual](#)

Toshiba personal computer (293 pages)

Related Content for Toshiba A70-S2482TD

[Satellite A35 Series Control Buttons](#)

Toshiba Satellite A35 Series

[C50 Series Media Control Buttons](#)

Toshiba C50 Series

[Qosmio X70-A series Media Control Buttons](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Media Control Buttons](#)

Toshiba Satellite L40 series

[Satellite L550 Series Control Buttons](#)

Toshiba Satellite L550 Series

[Satellite P200 Series Control Buttons](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Control Buttons](#)

Toshiba Qosmio X300 Series

[Satellite Media Control Buttons](#)

Toshiba Satellite

This manual is also suitable for:

[A70-s249A70-s2491A70-s2492stA70-s256A70-s2561A70-s259](#) ... [Show all](#)