



# Playing Cds Using Auto-Run; Creating A Cd - Toshiba A70-S2482TD User Manual

A70-s2482td user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27

Table Of Contents

28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217





•

[Table of Contents](#)

•

## Bookmarks





## Playing CDs using Auto-Run

If you insert a CD into the DVD-ROM/multi-function drive

and the Auto-Run feature does not automatically start your

disk, **⚠ WARNING** try launching the CD manually. To do this, follow these

steps:

**1**

Open the Start menu and select My Computer.

**2**

Click the DVD-ROM/multi-function drive icon.

The disk drive will run the CD.



If your disk does not run using this method, try using an application that is associated with the media on the disk.

For

example, if it is a music CD, open Windows and point it to play the CD. For other types of media, use the associated software to open the files on the disk.

## **Creating a CD**

Your computer may come with a multi-function drive that allows you to:



Play pre-recorded DVDs



Play pre-recorded CDs



Read and write data (depending on your system configuration) and music files to CD-Recordable (CD-R)

## *Using the DVD-ROM or multi-function drive*

Before using headphones to listen to an audio CD, turn the volume dial down. Playing the CD with the volume set too high could damage your ears.

### **Learning the Basics**

---

®

---

# 93 WARNING

## Media Player

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1  
...  
90  
91  
92  
93  
94  
95  
96  
97

Quick Links:

[Fcc Requirements](#)

[Your Computer's Features and Specifications](#)

[Installing Additional Memory \(Optional\)](#)

## Related Manuals for Toshiba A70-S2482TD

[Desktop Toshiba Satellite A70 Maintenance Manual](#)

(198 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

[Laptop Toshiba Satellite A70 Disassembly Manual](#)

(36 pages)

[Laptop Toshiba Satellite A75-S125 Specifications](#)

Satellite a75 series (12 pages)

[Laptop Toshiba Satellite A75 Series Specification Sheet](#)

Satellite a75 series (12 pages)

[Laptop Toshiba Satellite A75-S226 Specifications](#)

Satellite a75 series (11 pages)

[Laptop Toshiba Satellite A75-S206 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A75-S211 Specifications](#)

Toshiba satellite a75-s211: specifications (10 pages)

[Laptop Toshiba Satellite A75-S2112 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A75-S276 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A75-S2762 Specifications](#)

Satellite a75 series (10 pages)

[Laptop Toshiba Satellite A70-S249 Specifications](#)

Satellite a70 series (8 pages)

[Laptop Toshiba Satellite A75-S209 Specifications](#)

Satellite a75 series (8 pages)

[Laptop Toshiba Satellite A75-S2292 Specifications](#)

Satellite a75 series (8 pages)

[Laptop Toshiba Satellite A70-S2362 Product Information](#)

Satellite a70 series (5 pages)

[Laptop Toshiba Satellite A100 Maintenance Manual](#)

Toshiba personal computer (293 pages)

## Related Content for Toshiba A70-S2482TD

[S3 Playing Cds Using Auto-Run](#)

Toshiba S3

[TE2100 Series Playing Cds Using Auto-Run](#)

Toshiba TE2100 Series

[S2 Playing Cds Using Auto-Run](#)

Toshiba S2

[M5 Playing Cds Using Auto-Run](#)

Toshiba M5

[M4 Playing Cds Using Auto-Run](#)

Toshiba M4

[L2-S022 Playing Cds Using Auto-Run](#)

Toshiba L2-S022

[A6 \(PTA60U\) Playing Cds Using Auto-Run](#)

Toshiba A6 (PTA60U)

[A5-S116 Playing Cds Using Auto-Run](#)

Toshiba A5-S116

This manual is also suitable for:

[A70-s249A70-s2491A70-s2492stA70-s256A70-s2561A70-s259](#) ... [Show all](#)