



# Monitoring Main Battery Power - Toshiba L500-ST2521 User Manual

L500-st2521 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

Table Of Contents

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234



•

[Table of Contents](#)

•

## Bookmarks





To recharge the RTC battery, plug the computer into a live electrical outlet and leave the computer powered on for 24 hours.

### **NOTE**

The computer can be used while the RTC battery is being charged, although the charging status of the RTC battery cannot be monitored.

## Monitoring main battery power

The computer's main battery light gives you an indication of the main battery's current charge.

Glows amber while the main battery is being charged (AC adaptor connected).

Glows green when the main battery is fully charged.

Is unlit when the battery has discharged, the battery is not charging, or the AC adaptor is not plugged into the computer or AC outlet.


### NOTE

Flashes amber when the main battery charge is low and it is time to recharge the main battery or plug in the AC adaptor.

### NOTE

#### *Monitoring main battery power*

It is seldom necessary to charge the RTC battery because it charges while the computer is on. If the RTC battery is low, the real-time clock and calendar may display the incorrect time and date or stop working.

When Hibernation mode is enabled and the RTC battery is completely discharged, a warning prompts you to reset the real-time clock. 

Battery life and charge time may vary, depending upon power management settings, applications and features used.

If the AC power light flashes amber during charging, either a battery pack is malfunctioning, or it is not receiving correct input from the AC power supply.

Disconnect the AC power cord/cable and remove the battery pack.

See

["Changing the main battery" on page 119](#)

replacing the main battery.

### Mobile Computing

for information on

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1

...

112

113

114

115

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

## Related Manuals for Toshiba L500-ST2521

[Laptop Toshiba L305D S5897 - Satellite - Turion 64 X2 2 GHz Manual Del Usuario](#)

User's guide for satellite l300d/l305d spanish (233 pages)

[Laptop Toshiba L515-S4007 User Manual](#)

L515-s4007 user's guide (232 pages)

[Laptop Toshiba Satellite L505 Manual Del Usuario](#)

User guide 2 (231 pages)

[Laptop Toshiba L300-ST3502 User Manual](#)

L300-st3502 user's guide (230 pages)

[Laptop Toshiba Satellite L550 series User Manual](#)

(218 pages)

[Laptop Toshiba Satellite L500 User Manual](#)

(214 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite I500 series reference guide (56 pages)

[Laptop Toshiba Satellite L505D-LS5007 Specifications](#)

Toshiba satellite I505d-ls5007: specifications (4 pages)

[Laptop Toshiba Satellite L505D-S6947 Specifications](#)

Toshiba satellite I505d-s6947: specifications (4 pages)

[Laptop Toshiba PSLU0U-0MX035 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite L505-GS5035 Specifications](#)

Toshiba satellite I505-gs5035: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5969 Specifications](#)

Toshiba satellite I505-s5969: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5984 Specifications](#)

Toshiba satellite I505-s5984: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5997 Specifications](#)

Toshiba satellite I505-s5997: specifications (4 pages)

[Laptop Toshiba Satellite L505-ES5018 Specifications](#)

Toshiba satellite I505-es5018: specifications (3 pages)

[Laptop Toshiba Satellite L505-S5966 Specifications](#)

Toshiba satellite I505-s5966: specifications (3 pages)

## Related Content for Toshiba L500-ST2521

[Portégé R830 Series Monitoring Main Battery Power](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Monitoring Main Battery Power](#)

Toshiba SatellitePro L700 Series

[Satellite A200 Series Monitoring Main Battery Power](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Monitoring Main Battery Power](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Monitoring Main Battery Power](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[Tecra M6-EZ6612 Monitoring Main Battery Power](#)

Toshiba Tecra M6-EZ6612

[Tecra A8-EZ8411 Monitoring Main Battery Power](#)

Toshiba Tecra A8-EZ8411

[Tecra A7-ST5112 Monitoring Main Battery Power](#)

Toshiba Tecra A7-ST5112

This manual is also suitable for:

[L500-st5507L500-st55x2L500d-st5501L500d-st5506L500d-st55x1L505-es5011](#) ... [Show all](#)