

Maintaining Your Battery - Toshiba L500-ST2521 User Manual

L500-st2521 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
29
Table Of Contents
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234



•

[Table of Contents](#)

•

Bookmarks



To replace the main battery, use an identical battery that you can purchase through the Toshiba Web site at accessories.toshiba.com.

A reverse polarity condition should be avoided with all batteries. The main battery is designed so that it cannot be installed in reverse polarity.

Charge the battery only in the computer or in a battery charger designated as an approved option.

When you install the battery pack, you should hear a click when it is seated properly.

Do not expose the battery pack to fire. The battery pack could explode.

Maintaining your battery

Fully discharging your battery pack will allow better accuracy of the battery meter.

To fully discharge your battery pack:

Periodically, disconnect the computer from a power source and operate it on battery power until the battery pack fully discharges. Before doing so, follow the steps below:

1



2

3



4

5



If you have extra battery packs, rotate their use.

If you will not be using the system for an extended period, more than one month, remove the battery pack.

Turn off the computer's power.

Disconnect the AC adaptor and turn on the computer's power. If it does not turn on, go to step 4.

Operate the computer on battery power for five minutes. If the battery pack has at least five minutes of operating time, continue operating until the battery pack is fully discharged. If the battery light flashes or there is some other warning to indicate a low battery, go to step 4.

Connect the AC adaptor to the computer and the power cord/cable to a power outlet. The DC-IN or AC power-light should glow green, and the battery light should glow amber to indicate that the battery pack is being charged. If the DC-IN or AC power-light indicator does not glow,

power is not being supplied. Check the connections for the AC adaptor and power cord/cable.
Charge the battery pack until the battery light glows green.

Mobile Computing

Taking care of your battery

123



[Table of Contents](#)

[Next Page](#)

[1](#)

...

[122](#)

[123](#)

[124](#)

[125](#)

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba L500-ST2521

[Laptop Toshiba L305D S5897 - Satellite - Turion 64 X2 2 GHz Manual Del Usuario](#)

User's guide for satellite l300d/l305d spanish (233 pages)

[Laptop Toshiba L515-S4007 User Manual](#)

L515-s4007 user's guide (232 pages)

[Laptop Toshiba Satellite L505 Manual Del Usuario](#)

User guide 2 (231 pages)

[Laptop Toshiba L300-ST3502 User Manual](#)

L300-st3502 user's guide (230 pages)

[Laptop Toshiba Satellite L550 series User Manual](#)

(218 pages)

[Laptop Toshiba Satellite L500 User Manual](#)

(214 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite I500 series reference guide (56 pages)

[Laptop Toshiba Satellite L505D-LS5007 Specifications](#)

Toshiba satellite I505d-ls5007: specifications (4 pages)

[Laptop Toshiba Satellite L505D-S6947 Specifications](#)

Toshiba satellite I505d-s6947: specifications (4 pages)

[Laptop Toshiba PSLU0U-0MX035 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite L505-GS5035 Specifications](#)

Toshiba satellite I505-gs5035: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5969 Specifications](#)

Toshiba satellite I505-s5969: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5984 Specifications](#)

Toshiba satellite I505-s5984: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5997 Specifications](#)

Toshiba satellite I505-s5997: specifications (4 pages)

[Laptop Toshiba Satellite L505-ES5018 Specifications](#)

Toshiba satellite I505-es5018: specifications (3 pages)

[Laptop Toshiba Satellite L505-S5966 Specifications](#)

Toshiba satellite I505-s5966: specifications (3 pages)

Related Content for Toshiba L500-ST2521

[Satellite Radius 15 Maintaining Your Battery](#)

Toshiba Satellite Radius 15

[satellite fusion 15 series Maintaining Your Battery](#)

Toshiba satellite fusion 15 series

[Satellite CL10 Series Maintaining Your Battery](#)

Toshiba Satellite CL10 Series

[Portege Z20-B Series Maintaining Your Battery](#)

Toshiba Portege Z20-B Series

[Satellite S70-B Series Maintaining Your Battery](#)

Toshiba Satellite S70-B Series

[Satellite Click 2 PRO Maintaining Your Battery](#)

Toshiba Satellite Click 2 PRO

[Satellite CL40 Series Maintaining Your Battery](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Maintaining Your Battery](#)

Toshiba Satellite E40-A

This manual is also suitable for:

[L500-st5507L500-st55x2L500d-st5501L500d-st5506L500d-st55x1L505-es5011](#) ... [Show all](#)