



# Scrolling With The Touchpad; Control Buttons; Disabling Or Enabling The Touchpad; Using External Display Devices - Toshiba L500-ST2521 User Manual

L500-st2521 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
Table Of Contents  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234



•

[Table of Contents](#)

•

## Bookmarks





## NOTE

Once you have positioned your cursor, you can click it into place by either double-tapping the TouchPad or clicking the control buttons.

### **Scrolling with the TouchPad**

There are two active regions on the TouchPad scroll as you would with any wheel device on a mouse or trackball. To scroll vertically, run your finger up or down along the right edge of the TouchPad. To scroll horizontally, run your finger along the

bottom edge of the TouchPad. This feature can be disabled or changed in the Mouse Properties dialog box.

## **Control buttons**

When a step instructs you to click or choose an item, move the cursor to the item, then press and release the primary (left-hand) button. To double-click, press the primary button twice in rapid succession. The primary button usually corresponds to the left mouse button.

The function of the secondary (right-hand) button depends on the program you are using. It usually corresponds to the right mouse button ("right-clicking"). Check your program's documentation to determine whether it uses the right mouse button.

## **Disabling or enabling the TouchPad**

The TouchPad

TouchPad setting, press

TouchPad. For more information, see

[TouchPad™ " on page](#)

## **Using external display devices**

Your computer comes with a built-in display, but you can also connect the following types of external display devices to the video

ports described below:

An HDMI™-compatible television or VCR/DVD player via the HDMI Out port\*

*Using external display devices*

Because the TouchPad is much smaller than the display screen, moving your cursor across the screen often means having to move

your finger several times across the TouchPad in the preferred direction.

™

™

is enabled by default. To change the enable/disable  
210.

™

+

. This hot key enables/disables the

Fn

F9

"Disabling or enabling the

**Getting Started**

™

that allow you to

75

[Table of Contents](#)



[Previous Page](#)  
[Next Page](#)

1  
...  
72  
73  
74  
75  
76  
77  
78  
79

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

## Related Manuals for Toshiba L500-ST2521

[Laptop Toshiba L305D S5897 - Satellite - Turion 64 X2 2 GHz Manual Del Usuario](#)

User's guide for satellite l300d/l305d spanish (233 pages)

[Laptop Toshiba L515-S4007 User Manual](#)

L515-s4007 user's guide (232 pages)

[Laptop Toshiba Satellite L505 Manual Del Usuario](#)

User guide 2 (231 pages)

[Laptop Toshiba L300-ST3502 User Manual](#)

L300-st3502 user's guide (230 pages)

[Laptop Toshiba Satellite L550 series User Manual](#)

(218 pages)

[Laptop Toshiba Satellite L500 User Manual](#)

(214 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite I500 series reference guide (56 pages)

[Laptop Toshiba Satellite L505D-LS5007 Specifications](#)

Toshiba satellite I505d-ls5007: specifications (4 pages)

[Laptop Toshiba Satellite L505D-S6947 Specifications](#)

Toshiba satellite I505d-s6947: specifications (4 pages)

[Laptop Toshiba PSLU0U-0MX035 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite L505-GS5035 Specifications](#)

Toshiba satellite I505-gs5035: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5969 Specifications](#)

Toshiba satellite I505-s5969: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5984 Specifications](#)

Toshiba satellite I505-s5984: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5997 Specifications](#)

Toshiba satellite I505-s5997: specifications (4 pages)

[Laptop Toshiba Satellite L505-ES5018 Specifications](#)

Toshiba satellite I505-es5018: specifications (3 pages)

[Laptop Toshiba Satellite L505-S5966 Specifications](#)

Toshiba satellite I505-s5966: specifications (3 pages)

## Related Content for Toshiba L500-ST2521

[X305-Q705 - Qosmio - Core 2 Duo GHz Scrolling With The Touchpad](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Scrolling With The Touchpad](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Scrolling With The Touchpad](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Scrolling With The Touchpad](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Scrolling With The Touchpad](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Scrolling With The Touchpad](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M45-S165 - Satellite - Celeron M 1.5 GHz Scrolling With The Touchpad](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Scrolling With The Touchpad](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

This manual is also suitable for:

[L500-st5507L500-st55x2L500d-st5501L500d-st5506L500d-st55x1L505-es5011](#) ... [Show all](#)