

Using The Hot Key Cards - Toshiba L515-S4007 User Manual

L515-s4007 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
29
Table Of Contents
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232



•

[Table of Contents](#)

•

Bookmarks



Using the Hot Key Cards

The Hot Key Cards are normally hidden from view. The Cards appear when you press the

NOTE

To use the Hot Key Cards:

1

Press and hold the

The TOSHIBA Cards appear along the top of the screen.

(Sample Image) Hot Key Card display

2

Click the Card for the system function to be modified.
The selected Card is displayed full-size with its available options below it. All other Cards are again hidden from view.

3

Click the desired option.
To use a Hot Key Card using a hot key:

1

Press and hold the

2

Press the hot key associated with the desired function.
The associated hot key card appears at the top of the screen with its available options below it.

3

To cycle through the displayed options, hold down the hot key repeatedly. Release the option is selected.

Hot keys are keys that, when pressed in combination with the turn system functions on and off. Hot keys have a legend on the key indicating the option or feature the key controls.



Fn

Fn

Hot Keys/TOSHIBA Cards

Hot Key Cards

Fn

key.

key.

key.

Fn

Fn

and press

key when the desired

197

key,
Fn

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

196

197

198

199

Quick Links:

[Fcc Requirements](#)

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba L515-S4007

[Laptop Toshiba L500-ST2521 User Manual](#)

L500-st2521 user's guide (234 pages)

[Laptop Toshiba Satellite L510-ST3405 Resource Manual](#)

Toshiba satellite l510-st3405: reference guide (36 pages)

[Laptop Toshiba L515-S4925 User Manual](#)

L515-s4925 user's guide (235 pages)

[Laptop Toshiba L515-SP4012L User Manual](#)

L515-sp4012l user's guide (233 pages)

[Laptop Toshiba Satellite L510 Series Maintenance Manual](#)

Maintenance manual (210 pages)

[Laptop Toshiba Satellite L510 Series User Manual](#)

User manual (190 pages)

[Laptop Toshiba Satellite L515-S4925 Resource Manual](#)

Toshiba satellite I515-s4925: supplementary guide (56 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite I500 series reference guide (56 pages)

[Laptop Toshiba Satellite L510-ST3405 Specifications](#)

Toshiba satellite I510-st3405: specifications (4 pages)

[Laptop Toshiba Satellite L515-S4008 Specifications](#)

Toshiba satellite I515-s4008: specifications (4 pages)

[Laptop Toshiba Satellite L515-S4010 Specifications](#)

Toshiba satellite I515-s4010: specifications (4 pages)

[Laptop Toshiba Satellite L515-S4960 Specifications](#)

Toshiba satellite I515-s4960: specifications (4 pages)

[Laptop Toshiba Satellite Pro L510-EZ1410 Specifications](#)

Toshiba satellite pro I510-ez1410: specifications (4 pages)

[Laptop Toshiba PSLU1U-00G004 Brochure](#)

Brochure (1 page)

[Laptop Toshiba Satellite L515-S4925 Detailed Product Specification](#)

Satellite I515 series (4 pages)

[Laptop Toshiba Satellite L50-B User Manual](#)

Toshiba satellite notebooks user's manual (137 pages)

Related Content for Toshiba L515-S4007

[Qosmio X300 Series Hot Key Cards](#)

Toshiba Qosmio X300 Series

[Portégé R830 Series Hot Key Cards](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Hot Key Cards](#)

Toshiba SatellitePro L700 Series

[L835 Hot Key Cards](#)

Toshiba L835

[Satellite R850 Series Hot Key Cards](#)

Toshiba Satellite R850 Series

[Qosmio F750 Series Hot Key Cards](#)

Toshiba Qosmio F750 Series

[Satellite A200 Series Hot Key Cards](#)

TOSHIBA Satellite A200 Series

[X870 Hot Key Cards](#)

Toshiba X870

This manual is also suitable for:

[L510-st3405L515-s4008L515-s4005L515-s4010L515-s4960L515-s4962](#) ... [Show all](#)