



# Display Problems - Toshiba P15-S4091 User Manual

P15-s4091 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
Table Of Contents  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240



•

[Table of Contents](#)

•

## Bookmarks





If the problem occurs when both the keypad overlays are off, make sure the software you are using is not remapping the keyboard. Refer to the software's documentation and check that the program does not assign different meanings to any of the keys.

## **You have connected an external keyboard and the operating system displays one or more keyboard error messages.**

If you have a second keyboard, try it. If it works, the first keyboard may be defective or incompatible with your computer.

### **Display problems**

Here are some typical display problems and their solutions:

#### **The display is blank.**

Display Auto Off may have gone into effect. Press any key to activate the screen.

You may have activated the instant password feature by pressing password, press the

If no password is registered, press and allows you to continue working.

If you are using the built-in screen, make sure the display priority is not set for an external monitor. To do this, press

and

F5

problem, press  
display priority to its previous setting.  
If you are using an external monitor:



---

Check that the monitor is turned on.



Check that the monitor's power cable is firmly plugged into a working power outlet.



Check that the cable connecting the external monitor to the computer is firmly attached.

and

simultaneously. If you have registered a

Fn

F1

Enter key

simultaneously (once). If this does not correct the

and

Fn

**If Something Goes Wrong**

*Resolving a hardware conflict*

, type the password and press

Enter

simultaneously again to return the

F5

. The screen reactivates



# 181

Enter  
Fn

---

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

180

181

182

183

## Related Manuals for Toshiba P15-S4091

### [Laptop Toshiba Satellite P15 Series Specifications](#)

Satellite p15 series (21 pages)

### [Laptop Toshiba Satellite P15-S409 Specifications](#)

Satellite p15 series (9 pages)

### [Laptop Toshiba P15-S470 User Manual](#)

P15-s470 user's guide (290 pages)

### [Desktop Toshiba Satellite P10 Series Maintenance Manual](#)

Personal computer (213 pages)

### [Laptop Toshiba Satellite P10-304 User Manual](#)

Toshiba satellite p10-304: user guide (182 pages)

### [Laptop Toshiba Satellite P10 series User Manual](#)

(172 pages)

### [Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

### [Laptop Toshiba Satellite P10-S429 Specifications](#)

Small business series (9 pages)

### [Laptop Toshiba Satellite P15-S420 Specifications](#)

Satellite p15 series (9 pages)

### [Laptop Toshiba Satellite P15-S470 Specifications](#)

Satellite p15 series (9 pages)

### [Laptop Toshiba Satellite P15-S479 Specifications](#)

Satellite p15 series (9 pages)

### [Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

### [Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

### [Laptop Toshiba Satellite P105-S6064 Specifications](#)

Toshiba satellite p105-s6064: specifications (11 pages)

### [Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

### [Laptop Toshiba TECRA A11 User Manual](#)

Portable personal computer (238 pages)

## Related Content for Toshiba P15-S4091

### [Satellite Radius 15 Display Problems](#)

Toshiba Satellite Radius 15

### [satellite fusion 15 series Display Problems](#)

Toshiba satellite fusion 15 series

### [Satellite CL10 Series Display Problems](#)

Toshiba Satellite CL10 Series

### [Portege Z20-B Series Display Problems](#)

Toshiba Portege Z20-B Series

### [Satellite S70-B Series Display Problems](#)

Toshiba Satellite S70-B Series

[Tecra A3 Series Display Problems](#)

Toshiba Tecra A3 Series

[Satellite Click 2 PRO Display Problems](#)

Toshiba Satellite Click 2 PRO

[Satellite CL40 Series Display Problems](#)

Toshiba Satellite CL40 Series

This manual is also suitable for:

[P15-s420P10-s429P15-s409P10-s4291P15-s4201Psp10u-0dypgr ...](#) [Show all](#)