

Control Buttons; Disabling Or Enabling The Touchpad - Toshiba P15-S4091 User Manual

P15-s4091 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240



•

[Table of Contents](#)

•

Bookmarks



Control buttons

When a step instructs you to click or choose an item, move the cursor to the item, then press and release the primary (left-hand) button. To double-click, press the primary button

twice in rapid succession. The primary button usually corresponds to the left mouse button.

The function of the secondary (right-hand) button depends on the program you are using. It usually corresponds to the right mouse button. Check your program's documentation to find whether it uses the right mouse button.

Disabling or enabling the TouchPad

The TouchPad is enabled by default. To change the enable/disable TouchPad setting:

1

Click Start, Control Panel.

The Control Panel window appears.

2

Click Printers and Other Hardware.

3

Click Mouse or press the Fn + F9 hot keys.

The Mouse Properties window appears.

4

Click the TouchPAD ON/OFF tab.

The TouchPAD ON/OFF tab view window appears.

5

Select Disable or Enable, whichever is appropriate.

6

Click Apply.

7

Click OK.

The Mouse Properties window closes.

8

Close the Printers and Other Hardware window.

Using the computer for the first time

Getting Started

61

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
58
59
60
61
62
63
64
65

Related Manuals for Toshiba P15-S4091

[Laptop Toshiba Satellite P15 Series Specifications](#)

Satellite p15 series (21 pages)

[Laptop Toshiba Satellite P15-S409 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P15-S470 User Manual](#)

P15-s470 user's guide (290 pages)

[Desktop Toshiba Satellite P10 Series Maintenance Manual](#)

Personal computer (213 pages)

[Laptop Toshiba Satellite P10-304 User Manual](#)

Toshiba satellite p10-304: user guide (182 pages)

[Laptop Toshiba Satellite P10 series User Manual](#)

(172 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P10-S429 Specifications](#)

Small business series (9 pages)

[Laptop Toshiba Satellite P15-S420 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S470 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S479 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6064 Specifications](#)

Toshiba satellite p105-s6064: specifications (11 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba TECRA A11 User Manual](#)

Portable personal computer (238 pages)

Related Content for Toshiba P15-S4091

[Satellite A35 Series Control Buttons](#)

Toshiba Satellite A35 Series

[C50 Series Media Control Buttons](#)

Toshiba C50 Series

[Qosmio X70-A series Media Control Buttons](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Media Control Buttons](#)

Toshiba Satellite L40 series

[Satellite L550 Series Control Buttons](#)

Toshiba Satellite L550 Series

[Satellite P200 Series Control Buttons](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Control Buttons](#)

Toshiba Qosmio X300 Series

[Satellite Media Control Buttons](#)

Toshiba Satellite

This manual is also suitable for:

[P15-s420P10-s429P15-s409P10-s4291P15-s4201Psp10u-0dxpgr ... Show all](#)