

Character Keys; Ctrl, Fn, And Alt Keys; Function Keys - Toshiba P15- S4091 User Manual

P15-s4091 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240



•

[Table of Contents](#)

•

Bookmarks



Character keys

Typing with the character keys is very much like typing on a typewriter, except that:



The spacebar creates a space character instead of just passing over an area of the page.



The lowercase l (el) and the number 1 are not interchangeable.



The uppercase letter O and the number 0 are not interchangeable.



The case — the number and symbol keys are not affected. The caps lock light on the keyboard indicator panel illuminates when you press the

Ctrl, Fn, and Alt keys

Ctrl

Ctrl, Fn and Alt keys

The

Ctrl

program you are using. For more information, see your program documentation.

Function keys

ManualsLib.com

The function keys (not to be confused with the 12 keys at the top of the keyboard.

Function keys



through

F1

programmed functions when you press them. Used in combination with the key changes only the alphabet keys to upper

Caps Lock

Fn
Alt

,

, and

keys do different things depending on the

Fn

Alt

are called function keys because they run

F12

Learning the Basics

Using the keyboard

key, function keys marked with icons

Fn

key.

Caps Lock

key) are the

Fn

77

ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
74
75
76
77
78
79
80
81

Related Manuals for Toshiba P15-S4091

[Laptop Toshiba Satellite P15 Series Specifications](#)

Satellite p15 series (21 pages)

[Laptop Toshiba Satellite P15-S409 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P15-S470 User Manual](#)

P15-s470 user's guide (290 pages)

[Desktop Toshiba Satellite P10 Series Maintenance Manual](#)

Personal computer (213 pages)

[Laptop Toshiba Satellite P10-304 User Manual](#)

Toshiba satellite p10-304: user guide (182 pages)

[Laptop Toshiba Satellite P10 series User Manual](#)

(172 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P10-S429 Specifications](#)

Small business series (9 pages)

[Laptop Toshiba Satellite P15-S420 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S470 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S479 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6064 Specifications](#)

Toshiba satellite p105-s6064: specifications (11 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba TECRA A11 User Manual](#)

Portable personal computer (238 pages)

Related Content for Toshiba P15-S4091

[Tecra A9 Series Character Keys](#)

Toshiba Tecra A9 Series

[Satellite 200 Series The Character Keys](#)

Toshiba Satellite 200 Series

[Portégé R830 Series Character Keys](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Character Keys](#)

Toshiba SatellitePro L700 Series

[Satellite 110 Series The Character Keys](#)

Toshiba Satellite 110 Series

[Satellite R10 Character Keys](#)

Toshiba Satellite R10

[Satellite M45 Character Keys](#)

Toshiba Satellite M45

[Satellite A200 Series Character Keys](#)

TOSHIBA Satellite A200 Series

This manual is also suitable for:

[P15-s420P10-s429P15-s409P10-s4291P15-s4201Psp10u-0d xpgr ...](#) [Show all](#)