



# Starting A Program; Saving Your Work - Toshiba P15-S4091 User Manual

P15-s4091 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
Table Of Contents  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240



•

[Table of Contents](#)

•

## Bookmarks





# 80

## **Learning the Basics**

---

### *Starting a program*

To turn off the cursor control overlay, hold down the  
and press  
keyboard indicator panel goes out.

## Starting a program

The easiest way to start a program is to double-click the name of the file that contains the information you want to work on.

To find the file, use My Computer or Windows Explorer. If you prefer to open the program first, you have four options:



Double-click the icon for the program on your desktop



Use the Start menu



Use Windows Explorer to locate the program file



Use the Run dialog box

The Windows

step-by-step instructions for starting a program from the Start

menu. See

## Saving your work

Before you turn off the computer, save your work to the hard disk drive.

Many programs offer a feature that saves documents at regular intervals, such as every 15 minutes. Check your programs' documentation to see whether they have an automatic save feature.

---

again. The cursor control mode light on the F10

®

XP operating system tutorial chapter gives ["Lesson 6: Starting programs" on page](#)

Always save your data even when you are using the Stand by. If your battery fully discharges, your information will be lost. Your computer can be configured to warn you when the battery is running low, see

["Power management" on page](#)

key

Fn

127.

105.



[Previous Page](#)  
[Next Page](#)

1  
...  
77  
78  
79  
80  
81  
82  
83  
84

## Related Manuals for Toshiba P15-S4091

[Laptop Toshiba Satellite P15 Series Specifications](#)

Satellite p15 series (21 pages)

[Laptop Toshiba Satellite P15-S409 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P15-S470 User Manual](#)

P15-s470 user's guide (290 pages)

[Desktop Toshiba Satellite P10 Series Maintenance Manual](#)

Personal computer (213 pages)

[Laptop Toshiba Satellite P10-304 User Manual](#)

Toshiba satellite p10-304: user guide (182 pages)

[Laptop Toshiba Satellite P10 series User Manual](#)

(172 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P10-S429 Specifications](#)

Small business series (9 pages)

[Laptop Toshiba Satellite P15-S420 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S470 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S479 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6064 Specifications](#)

Toshiba satellite p105-s6064: specifications (11 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba TECRA A11 User Manual](#)

Portable personal computer (238 pages)

## Related Content for Toshiba P15-S4091

[Tecra A9 Series Starting A Program](#)

Toshiba Tecra A9 Series

[Satellite 200 Series Starting A Program From The Explorer](#)

Toshiba Satellite 200 Series

[Portégé R830 Series Starting A Program](#)

Toshiba Portégé R830 Series

[TECRA M3 Starting And Ending The Bios Setup Program](#)

Toshiba TECRA M3

[tecras3 Starting And Ending The Bios Setup Program](#)

Toshiba tecra s3

[SatellitePro L700 Series Starting A Program](#)

Toshiba SatellitePro L700 Series

[TECRA A8 Starting And Ending The Bios Setup Program](#)

Toshiba TECRA A8

[Portege M400 Starting And Ending The Bios Setup Program](#)

Toshiba Portege M400

This manual is also suitable for:

[P15-s420P10-s429P15-s409P10-s4291P15-s4201Psp10u-0d xpgr ... Show all](#)