

Turning Off More Quickly - Toshiba P15-S4091 User Manual

P15-s4091 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240



•

[Table of Contents](#)

•

Bookmarks



Turning off more quickly

You can also turn off the computer by pressing the power button or closing the display panel.

To use either of these methods, you first need to turn on the
feature in the Toshiba Power Management Utility.

1

Click Start, Control Panel, then Performance and **Maintenance.**

2

Double-click the Toshiba Power Management icon. The Power Options Properties dialog box appears.

3

Click the Advanced tab, and select the options you want.



Sample Toshiba Power Management Advanced tab

4

Click Apply.

5



Click OK, then close the Control Panel.

When I close the lid of my portable computer

Set this option to Power Off to have the computer shut down when you close the display panel.

 
When I press the power button on my computer

Set this option to Power Off to have the computer shut down when you press the power button.

Learning the Basics

Using Turn Off or Shut down

97



[Previous Page](#)
[Next Page](#)

1
...
94
95
96
97
98
99
100
101

Related Manuals for Toshiba P15-S4091

[Laptop Toshiba Satellite P15 Series Specifications](#)

Satellite p15 series (21 pages)

[Laptop Toshiba Satellite P15-S409 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P15-S470 User Manual](#)

P15-s470 user's guide (290 pages)

[Desktop Toshiba Satellite P10 Series Maintenance Manual](#)

Personal computer (213 pages)

[Laptop Toshiba Satellite P10-304 User Manual](#)

Toshiba satellite p10-304: user guide (182 pages)

[Laptop Toshiba Satellite P10 series User Manual](#)

(172 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P10-S429 Specifications](#)

Small business series (9 pages)

[Laptop Toshiba Satellite P15-S420 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S470 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba Satellite P15-S479 Specifications](#)

Satellite p15 series (9 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6064 Specifications](#)

Toshiba satellite p105-s6064: specifications (11 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba TECRA A11 User Manual](#)

Portable personal computer (238 pages)

Related Content for Toshiba P15-S4091

[R100 Turning Off More Quickly](#)

Toshiba R100

[Portégé M100 Series Turning Off More Quickly](#)

Toshiba Portégé M100 Series

[4010 Turning Off More Quickly](#)

Toshiba 4010

[3500 Tablet PC Turning Off More Quickly](#)

Toshiba 3500 Tablet PC

[2000 Turning Off More Quickly](#)

Toshiba 2000

[P25-S609 Turning Off More Quickly](#)

Toshiba P25-S609

[P25-S670 Turning Off More Quickly](#)

Toshiba P25-S670

[P25-S607 Turning Off More Quickly](#)

Toshiba P25-S607

This manual is also suitable for:

[P15-s420P10-s429P15-s409P10-s4291P15-s4201Psp10u-0d xpgr ...](#) [Show all](#)