

Lesson 11: Setting The Date And Time - Toshiba P25-S509 User Manual

P25-s509 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•

•

Bookmarks



Getting to Know the Windows ® XP Operating System

7

To apply a pattern to your desktop, click Apply.

8

After you have chosen a screen saver pattern and applied it to your desktop, click OK.

The operating system returns you to the desktop.

You can view any object's properties by clicking the

object

with the secondary button, then choosing Properties from the shortcut menu that appears.

The next lesson explains how to set two other properties—the date and time.

Lesson 11: Setting the date and time

You initially set the computer's date and time properties when you turned the computer on for the first time and set up the operating system.

To change the date and time settings:

1

Click Start, then click Control Panel.

2

Click the Date, Time, Language, and Regional Options icon.

3

Click the Date and Time icon.

The operating system displays the Date and Time Properties dialog box.

Sample Date and Time Properties dialog box

Lesson 11: Setting the date and time

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

134

135

136

137

Quick Links:

[Disk Drive Problems](#)

[Index](#)

Related Manuals for Toshiba P25-S509

[Laptop Toshiba Satellite P25-S509 Specifications](#)

Satellite p25 series (18 pages)

[Laptop Toshiba P25-S607 User Manual](#)

P25-s607 user's guide (282 pages)

[Laptop Toshiba P25-S609 User Manual](#)

P25-s609 user's guide (278 pages)

[Laptop Toshiba P25-S670 User Manual](#)

P25-s670 user's guide (277 pages)

[Laptop Toshiba P25-S526 User Manual](#)

P25-s526 user's guide (235 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba Satellite M20 Resource Manual](#)

Toshiba modem resource guide (52 pages)

[Laptop Toshiba Satellite P25 Series Resource Manual](#)

(52 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P25-S5092 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S5093 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S520 Specifications](#)

Satellite p25 series notebook (9 pages)

[Laptop Toshiba Satellite P25-S487 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba P25 Series Specification Sheet](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S507 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S609 Specifications](#)

Satellite p25 series; (9 pages)

Related Content for Toshiba P25-S509

[P25-S526 Lesson 11: Setting The Date And Time](#)

Toshiba P25-S526

[P15-S470 Lesson 11: Setting The Date And Time](#)

Toshiba P15-S470

[P25-S477 Lesson 11: Setting The Date And Time](#)

Toshiba P25-S477

[P15-S4091 Lesson 11: Setting The Date And Time](#)

Toshiba P15-S4091

[A35-S159 Lesson 11: Setting The Date And Time](#)

Toshiba A35-S159

[A20-S259 Lesson 11: Setting The Date And Time](#)

Toshiba A20-S259

[5205-S705 Lesson 11: Setting The Date And Time](#)

Toshiba 5205-S705

[A10-S100 Lesson 11: Setting The Date And Time](#)

Toshiba A10-S100

This manual is also suitable for:

[P25-s5201P25-s5091P25-s5092P25-s5093P25-s520Psp20u-012rjr ...](#) [Show all](#)