

Changing Desktop And Browsing Style - Toshiba P25-S509 User Manual

P25-s509 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230


--	--

•

•

Bookmarks

--

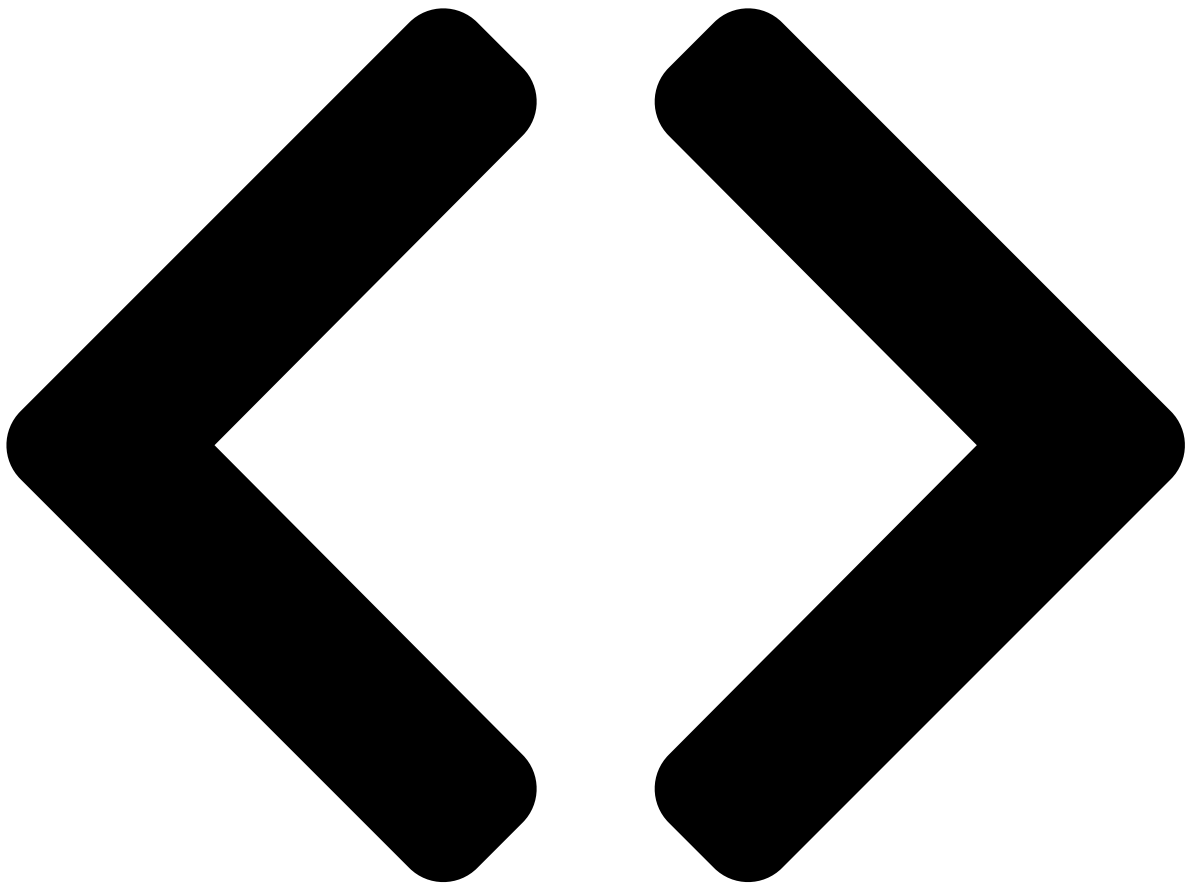

146

Exploring Your Options

Personalizing your desktop

7

To browse the Gallery for more components to add, click

Visit Gallery.

In order to browse, an active Internet connection must be

established.

8

To select some other Web site, type the address of the Web site you want or click **Browse** to locate it.

You can configure the Web content interface in several other

ways. For further information, see your operating system

documentation or access Windows

Help and Support.

Changing desktop and browsing style

The operating system enables you to customize the way you

view your desktop and browse the files and folders on your

local computer or network file server.

You can make it so that:



Items that normally require a double-click will open with

a single click.



Folders will open in their own window instead of in the same window.



Folders are accompanied by a list of common tasks instead of displayed alone.

The options you choose determines how you browse in the operating system, regardless of whether you start from the desktop, My Computer, Windows Explorer, or Internet Explorer.

For more information about changing your desktop style,

enter

desktop

Choosing a style

To select desktop and browsing style options:

1

Click Start, then click My Computer.
in the Help and Support Index.

®

Help by clicking Start, ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)

...

[145](#)

146

[147](#)

[148](#)

Quick Links:

[Disk Drive Problems](#)

[Index](#)

Related Manuals for Toshiba P25-S509

[Laptop Toshiba Satellite P25-S509 Specifications](#)

Satellite p25 series (18 pages)

[Laptop Toshiba P25-S607 User Manual](#)

P25-s607 user's guide (282 pages)

[Laptop Toshiba P25-S609 User Manual](#)

P25-s609 user's guide (278 pages)

[Laptop Toshiba P25-S670 User Manual](#)

P25-s670 user's guide (277 pages)

[Laptop Toshiba P25-S526 User Manual](#)

P25-s526 user's guide (235 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba Satellite M20 Resource Manual](#)

Toshiba modem resource guide (52 pages)

[Laptop Toshiba Satellite P25 Series Resource Manual](#)

(52 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P25-S5092 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S5093 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S520 Specifications](#)

Satellite p25 series notebook (9 pages)

[Laptop Toshiba Satellite P25-S487 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba P25 Series Specification Sheet](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S507 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S609 Specifications](#)

Satellite p25 series; (9 pages)

Related Content for Toshiba P25-S509

[Portege 3490CT Changing Desktop And Browsing Style \(Windows 98 Second Edition\)](#)

Toshiba Portege 3490CT

[M4 Changing Desktop And Browsing Style](#)

Toshiba M4

[A1 Changing Desktop And Browsing Style](#)

Toshiba A1

[S100-S1133 Changing Desktop And Browsing Style](#)

Toshiba S100-S1133

[R200-S2032 Changing Desktop And Browsing Style](#)

Toshiba R200-S2032

[R100 Changing Desktop And Browsing Style](#)

Toshiba R100

[Portégé M100 Series Changing Desktop And Browsing Style](#)

Toshiba Portégé M100 Series

[4010 Changing Desktop And Browsing Style](#)

Toshiba 4010

This manual is also suitable for:

P25-s5201P25-s5091P25-s5092P25-s5093P25-s520Psp20u-012rjr ... [Show all](#)