

Display Settings Hot Key; Exploring Audio Features; Recording Sounds - Toshiba P25-S509 User Manual

P25-s509 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230


--	--

•

•

Bookmarks

--

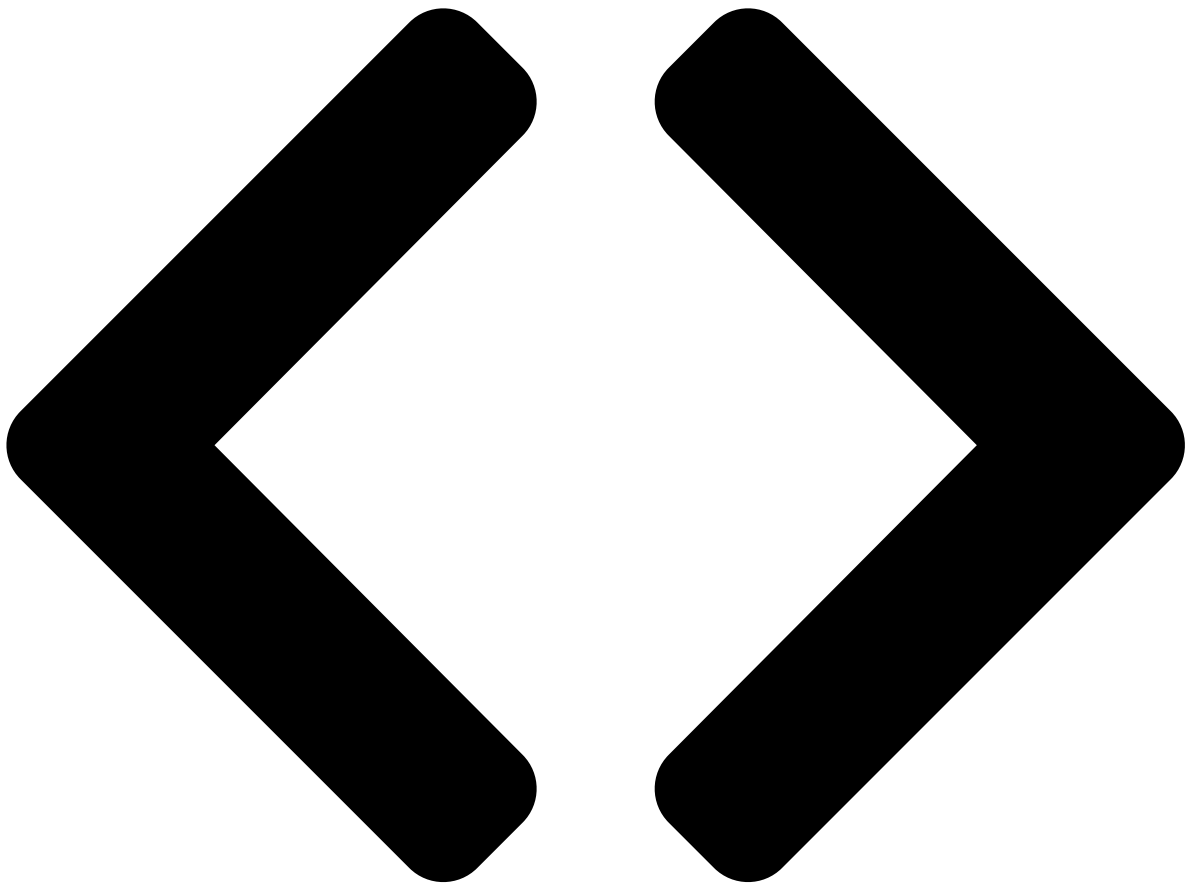

2

Click the Settings tab.

3

Slide the Screen area slider bar toward Less until the setting reads 800 x 600, then click Apply.

The screen blinks momentarily while the settings are adjusted.

4

The Monitor Settings window appears and asks if you want to keep the settings.

5

Click Yes.

6

To change the settings back, repeat steps 2 through 5.

Display settings hot key

Using the
view DVD movies or presentations on an external device.
For
more information, see

Exploring audio features

You can use your computer to record sounds using an external microphone. You can play .wav sound files or audio

CDs using the built-in speakers, headphones or external speakers.

Recording sounds ManualsLib.com

You can make audio recordings and save them as .wav files by connecting an external microphone or other sound source

to the microphone jack and using the Sound Recorder feature

in the operating system.

+

keys, you can set your system's display to

Fn

F5

DEFINITION: A .wav (pronounced "wave") file is a format for storing sound in files.

Exploring Your Options

Exploring audio features

["Display modes" on page](#)

159

203.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

158

159

160

161

Quick Links:

[Disk Drive Problems](#)

[Index](#)

Related Manuals for Toshiba P25-S509

[Laptop Toshiba Satellite P25-S509 Specifications](#)

Satellite p25 series (18 pages)

[Laptop Toshiba P25-S607 User Manual](#)

P25-s607 user's guide (282 pages)

[Laptop Toshiba P25-S609 User Manual](#)

P25-s609 user's guide (278 pages)

[Laptop Toshiba P25-S670 User Manual](#)

P25-s670 user's guide (277 pages)

[Laptop Toshiba P25-S526 User Manual](#)

P25-s526 user's guide (235 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba Satellite M20 Resource Manual](#)

Toshiba modem resource guide (52 pages)

[Laptop Toshiba Satellite P25 Series Resource Manual](#)

(52 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P25-S5092 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S5093 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S520 Specifications](#)

Satellite p25 series notebook (9 pages)

[Laptop Toshiba Satellite P25-S487 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba P25 Series Specification Sheet](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S507 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S609 Specifications](#)

Satellite p25 series; (9 pages)

Related Content for Toshiba P25-S509

[P25-S477 Display Settings Hot Key](#)

Toshiba P25-S477

[P15-S4091 Display Settings Hot Key](#)

Toshiba P15-S4091

[M30X-S171ST Display Settings Hot Key](#)

Toshiba M30X-S171ST

[A70-S2482TD Display Settings Hot Key](#)

Toshiba A70-S2482TD

[A60-S156 Display Settings Hot Key](#)

Toshiba A60-S156

[A35-S159 Display Settings Hot Key](#)

Toshiba A35-S159

[A20-S259 Display Settings Hot Key](#)

Toshiba A20-S259

[A10-S100 Display Settings Hot Key](#)

Toshiba A10-S100

This manual is also suitable for:

P25-s5201P25-s5091P25-s5092P25-s5093P25-s520Psp20u-012rjr ... [Show all](#)