

Removing Pc Cards - Toshiba P25-S509 User Manual

P25-s509 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230


--	--

•

•

Bookmarks

--

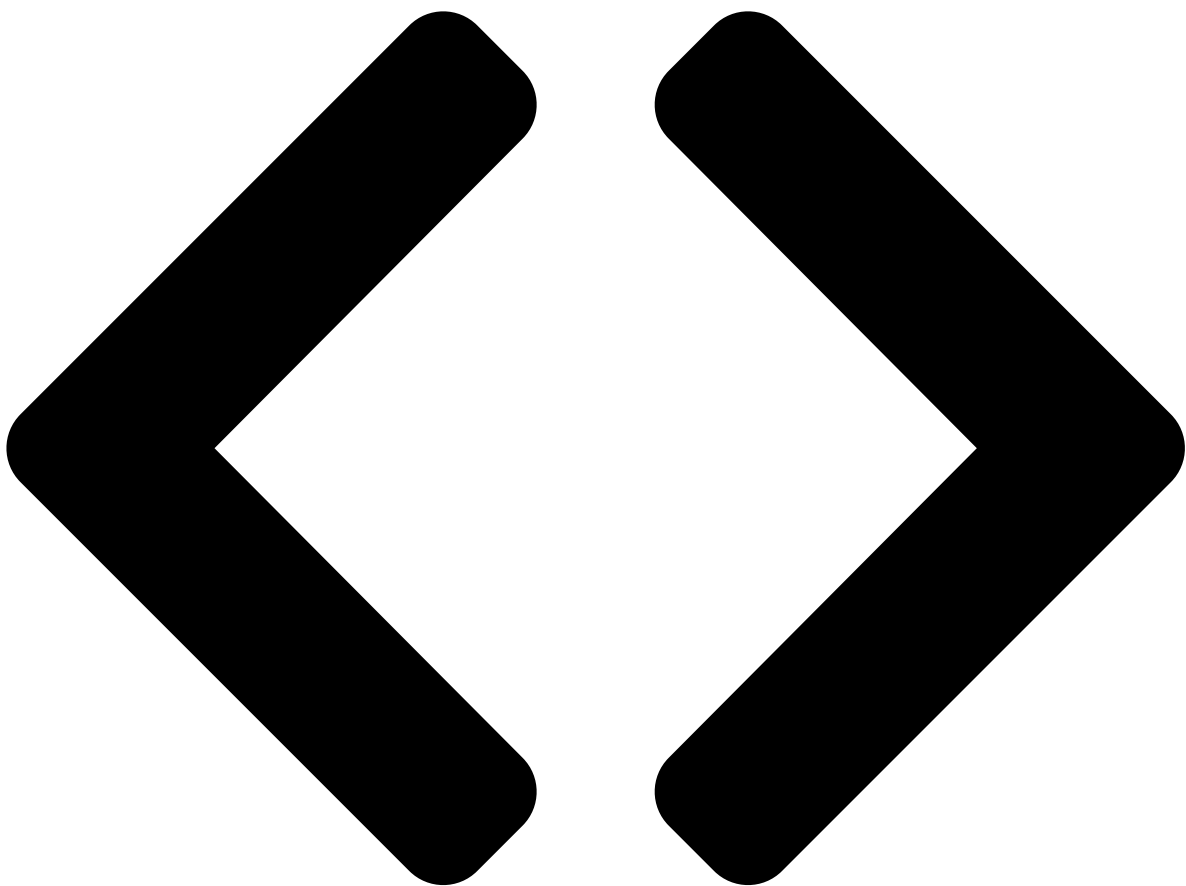


166

Exploring Your Options

Using PC Cards

Inserting a PC Card

There are two eject buttons, one per slot.

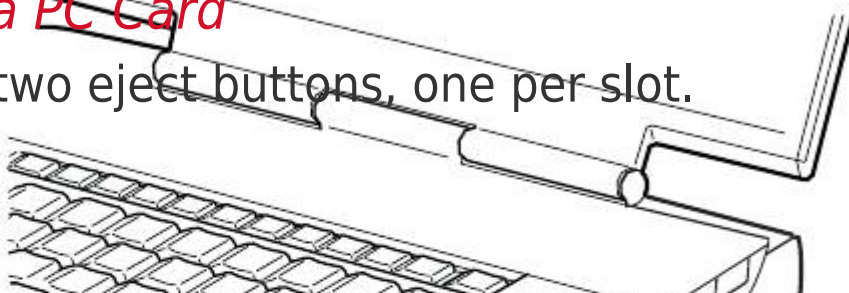

Removing PC Cards

1

Stop the PC Card by clicking the Safely Remove Hardware icon on the System tray.

After the Safe to Remove Hardware message appears, it is safe to remove the PC Card.

2


To remove the PC Card, press the slot's eject button once.

3

Remove the PC Card and store it properly.

If you have a Type III card, insert the connector into the lower slot. If you have a Type I or Type II card, you can insert it into either the upper or the lower slot.

To avoid damaging the PC Card or the computer, don't force the card into the PC Card slot.

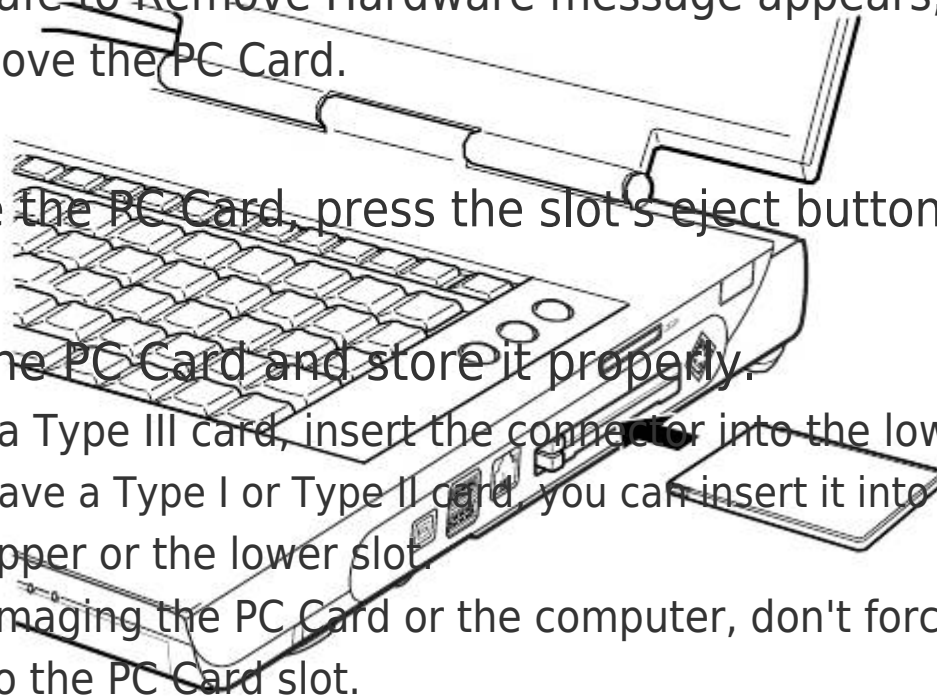

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

165

166

167

168

Quick Links:

[Disk Drive Problems](#)

[Index](#)

Related Manuals for Toshiba P25-S509

[Laptop Toshiba Satellite P25-S509 Specifications](#)

Satellite p25 series (18 pages)

[Laptop Toshiba P25-S607 User Manual](#)

P25-s607 user's guide (282 pages)

[Laptop Toshiba P25-S609 User Manual](#)

P25-s609 user's guide (278 pages)

[Laptop Toshiba P25-S670 User Manual](#)

P25-s670 user's guide (277 pages)

[Laptop Toshiba P25-S526 User Manual](#)

P25-s526 user's guide (235 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba Satellite M20 Resource Manual](#)

Toshiba modem resource guide (52 pages)

[Laptop Toshiba Satellite P25 Series Resource Manual](#)

(52 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P25-S5092 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S5093 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S520 Specifications](#)

Satellite p25 series notebook (9 pages)

[Laptop Toshiba Satellite P25-S487 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba P25 Series Specification Sheet](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S507 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S609 Specifications](#)

Satellite p25 series; (9 pages)

Related Content for Toshiba P25-S509

[Satellite M45 Inserting And Removing Pc Cards](#)

Toshiba Satellite M45

[Satellite 4030CDT Removing Pc Cards](#)

TOSHIBA Satellite 4030CDT

[Satellite 1415 Series Removing Pc Cards](#)

TOSHIBA Satellite 1415 Series

[Satellite Pro 4300 Installing And Removing Pc Cards](#)

Toshiba Satellite Pro 4300

[M45-S165 - Satellite - Celeron M 1.5 GHz Inserting And Removing Pc Cards](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Inserting And Removing Pc Cards](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

[Satellite P20-8PW Removing Pc Cards](#)

Toshiba Satellite P20-8PW

[Satellite 3000-S353 Removing Pc Cards](#)

Toshiba Satellite 3000-S353

This manual is also suitable for:

P25-s5201P25-s5091P25-s5092P25-s5093P25-s520Psp20u-012rjr ... [Show all](#)