

Dvd-Rom Or Multifunction Drive Problems - Toshiba P25-S509 User Manual

P25-s509 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•

•

Bookmarks



DVD-ROM or multifunction drive problems

You cannot access a disc in the drive.

Make sure the drive tray has closed properly. Press gently

until it clicks into place.

Open the drive tray and remove the disc. Make sure the drive

tray is clean. Any dirt or foreign object can interfere with

the

laser beam.

Examine the disc to see whether it is dirty. If necessary, wipe

it with a clean cloth dipped in water or a neutral cleaner.

Replace the disc in the tray. Make sure it is lying flat, label side uppermost. Press the disc down until it locks on the spindle. Close the drive tray carefully, making sure it has shut

completely.

You press the disc eject button, but the drive tray does not slide out.

Make sure the computer is connected to a power source and

turned on. The modular bay drive eject mechanism requires power to operate.

To remove a disc without turning on the computer, use a narrow object, such as a straightened paper clip, to press the manual eject button. This button is in the small hole next to

the disc eject button on the right side of the computer.

Pull the tray fully open, remove the disc and place it in its

Some discs run correctly, but others do not.

If the problem is with an application CD-ROM, refer to the

software's documentation and check that the hardware configuration meets the program's needs.

Never use a pencil to press the manual eject button. Pencil lead can break off inside the computer and damage it.

If Something Goes Wrong

Resolving a hardware conflict

185

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

184

185

186

187

Quick Links:

[Disk Drive Problems](#)

[Index](#)

Related Manuals for Toshiba P25-S509

[Laptop Toshiba Satellite P25-S509 Specifications](#)

Satellite p25 series (18 pages)

[Laptop Toshiba P25-S607 User Manual](#)

P25-s607 user's guide (282 pages)

[Laptop Toshiba P25-S609 User Manual](#)

P25-s609 user's guide (278 pages)

[Laptop Toshiba P25-S670 User Manual](#)

P25-s670 user's guide (277 pages)

[Laptop Toshiba P25-S526 User Manual](#)

P25-s526 user's guide (235 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba Satellite M20 Resource Manual](#)

Toshiba modem resource guide (52 pages)

[Laptop Toshiba Satellite P25 Series Resource Manual](#)

(52 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P25-S5092 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S5093 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S520 Specifications](#)

Satellite p25 series notebook (9 pages)

[Laptop Toshiba Satellite P25-S487 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba P25 Series Specification Sheet](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S507 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S609 Specifications](#)

Satellite p25 series; (9 pages)

Related Content for Toshiba P25-S509

[Satellite Pro 6000 Series Dvd-Rom Or Multifunction Drive Problems](#)

Toshiba Satellite Pro 6000 Series

[Satellite 2430 Series Using The Dvd-Rom Or Multifunction Drive](#)

Toshiba Satellite 2430 Series

[Satellite P25 Series Using The Dvd-Rom Or Multifunction Drive](#)

Toshiba Satellite P25 Series

[Satellite 1955 Series Using The Dvd-Rom Or Multifunction Drive](#)

Toshiba Satellite 1955 Series

[Satellite 5205 Series Using The Dvd-Rom Or Multifunction Drive](#)

Toshiba Satellite 5205 Series

[Satellite A35 Series Dvd-Rom Or Multi-Function Drive Problems](#)

Toshiba Satellite A35 Series

[Satellite R10 Dvd-Rom Or Multi-Function Drive Problems](#)

Toshiba Satellite R10

[Satellite M45 Dvd-Rom Or Multi-Function Drive Problems](#)

Toshiba Satellite M45

This manual is also suitable for:

[P25-s5201P25-s5091P25-s5092P25-s5093P25-s520Psp20u-012rjr ...](#) [Show all](#)