

Indicator Lights - Toshiba P25-S509 User Manual

P25-s509 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230


--	--

•

•

Bookmarks

--

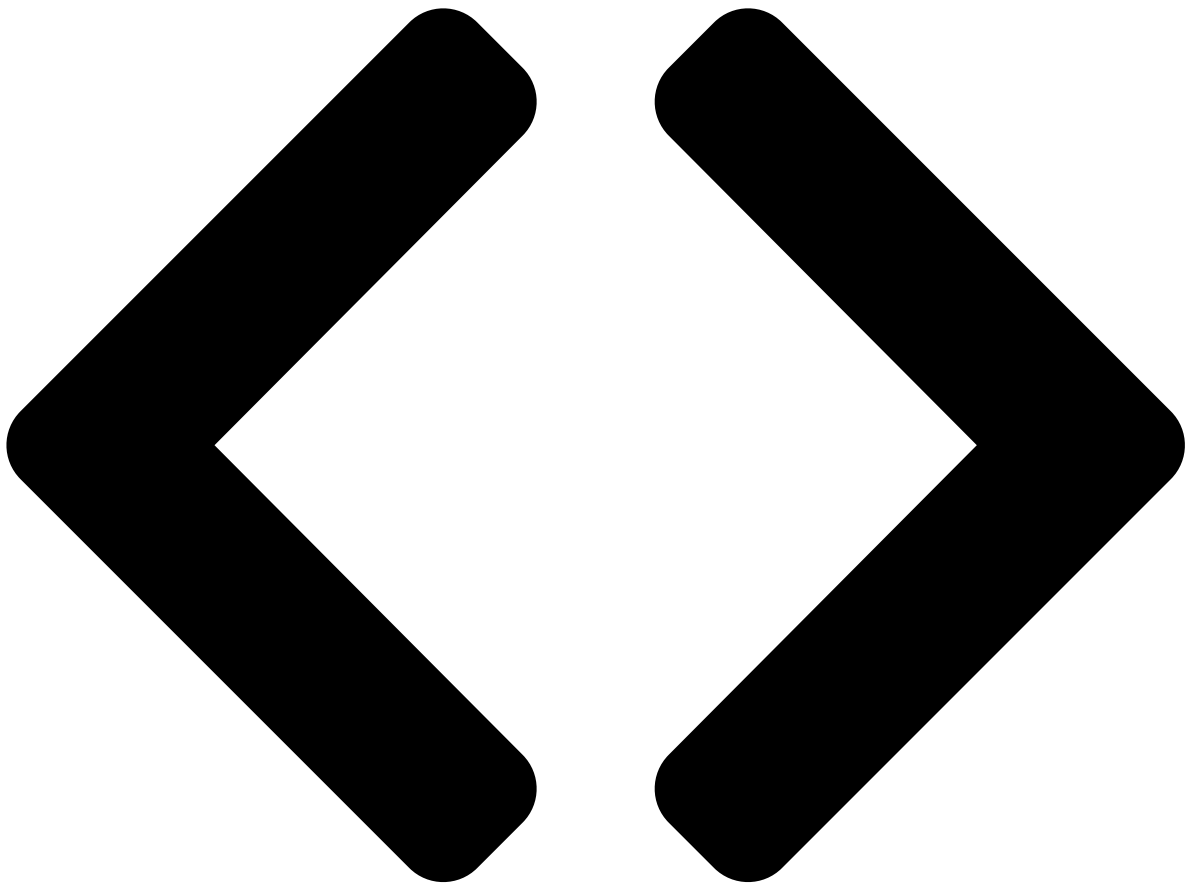

42

Finding Your Way Around

Front with the display open

completely discharged. For more information on determining remaining battery power, see [page](#)

105.

Indicator lights

The hard disk drive light flashes while the hard disk drive is being accessed.

The SD® card slot light goes on when the card slot is in use.

On those systems with Wi-Fi

indicator glows amber when the computer's wireless antenna

is on. The Wi-Fi Mini PCI module is optional.

The digital mode light goes on in digital mode, when the computer is playing a CD or DVD with the computer on.

The disc activity light flashes when the Modular Bay drive is

being accessed.

The caps lock light glows when you press the

When this light is on, pressing a letter key on the keyboard produces an uppercase (capital) letter.

The cursor control mode light glows when the cursor control overlay is on. When this light is on, pressing an overlay key moves the cursor in the direction of the white

arrow printed on the key instead of typing the letter printed

on the top of the key. For more information, see

[cursor control overlay" on page](#)

The numeric mode light glows when the numeric overlay is

on. When this light is on, pressing an overlay key types the white number printed on the key instead of typing the letter

["Monitoring battery power" on](#)

TM

, the wireless antenna

77.

key.

Caps Lock

["Using the](#)



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
39
40
41
42
43
44
45
46

Quick Links:

[Disk Drive Problems](#)

[Index](#)

Related Manuals for Toshiba P25-S509

[Laptop Toshiba Satellite P25-S509 Specifications](#)

Satellite p25 series (18 pages)

[Laptop Toshiba P25-S607 User Manual](#)

P25-s607 user's guide (282 pages)

[Laptop Toshiba P25-S609 User Manual](#)

P25-s609 user's guide (278 pages)

[Laptop Toshiba P25-S670 User Manual](#)

P25-s670 user's guide (277 pages)

[Laptop Toshiba P25-S526 User Manual](#)

P25-s526 user's guide (235 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba Satellite M20 Resource Manual](#)

Toshiba modem resource guide (52 pages)

[Laptop Toshiba Satellite P25 Series Resource Manual](#)

(52 pages)

[Laptop Toshiba Satellite 5205 Series Setup Manual](#)

How to set up your computer to use the media center with a tv tuner (12 pages)

[Laptop Toshiba Satellite P25-S5092 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S5093 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S520 Specifications](#)

Satellite p25 series notebook (9 pages)

[Laptop Toshiba Satellite P25-S487 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba P25 Series Specification Sheet](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S507 Specifications](#)

Satellite p25 series (9 pages)

[Laptop Toshiba Satellite P25-S609 Specifications](#)

Satellite p25 series; (9 pages)

Related Content for Toshiba P25-S509

[9100 Indicator Panel Lights](#)

Toshiba 9100

[8200 Indicator Panel Lights](#)

Toshiba 8200

[8100 Keyboard Indicator Lights](#)

Toshiba 8100

[M10-S405 Indicator Panel Lights](#)

Toshiba M10-S405

[6000 Indicator Panel Lights](#)

Toshiba 6000

[P25-S609 Indicator Lights](#)

Toshiba P25-S609

[P25-S607 Indicator Lights](#)

Toshiba P25-S607

[P15-S470 Indicator Lights](#)

Toshiba P15-S470

This manual is also suitable for:

P25-s5201P25-s5091P25-s5092P25-s5093P25-s520Psp20u-012rjr ... [Show all](#)