



# Maximizing Battery Life - Toshiba P30-S6362ST User Manual

P30-s6362st user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27

Table Of Contents

28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230



•

•

## Bookmarks





# 122

## **Mobile Computing**

*Taking care of your battery*

---



When you install the battery pack, you should hear a click when it is seated properly.



Do not expose the battery pack to fire. The battery pack could explode.

---

## Maximizing battery life

To maximize the life of your battery pack:



At least once a month, disconnect the computer from a power source and operate it on battery power until the battery pack fully discharges. Before doing so, follow the steps below:

**1**

**2**

**3**

**4**

**5**



If you have extra battery packs, rotate their use.



If you will not be using the system for an extended period, more than one month, remove the battery pack. Turn off the computer's power.

Disconnect the AC adapter and turn on the computer's power. If it does not turn on, go to step 4. Operate the computer on battery power for five

minutes. If the battery pack has at least five minutes of operating time, continue operating until the battery pack is fully discharged. If the battery light flashes or there is some other warning to indicate a low battery, go to step 4.

Connect the AC adapter to the computer and the power cord/cable to a power outlet. The DC-IN or AC power-light should glow green, and the battery should glow amber to indicate that the battery pack is being charged. If the DC-IN or AC power-light indicator does not glow, power is not being supplied. Check the connections for the AC adapter and power cord/cable.

Charge the battery pack until the battery glows green.

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1

...

121

122

123

124

## Related Manuals for Toshiba P30-S6362ST

### [Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

### [Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

### [Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

### [Laptop Toshiba Satellite P35-S605 Specification Sheet](#)

Satellite p35 series (12 pages)

### [Laptop Toshiba Satellite P35-S609 Specifications](#)

Satellite p35 series (12 pages)

### [Laptop Toshiba Satellite P35-S6053 Specifications](#)

Toshiba satellite p35-s6053: specifications (10 pages)

### [Laptop Toshiba Satellite P35-S611 Specifications](#)

Satellite p35 series (9 pages)

### [Laptop Toshiba Satellite P35-S6112 Specifications](#)

Satellite p35 series (9 pages)

### [Laptop Toshiba Satellite P30-S701TD Specifications](#)

Satellite p30 series (4 pages)

### [Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

### [Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

### [Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

### [Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

### [Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

### [Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

### [Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

## Related Content for Toshiba P30-S6362ST

### [Satellite 1415 Series Maximizing Battery Life](#)

TOSHIBA Satellite 1415 Series

### [U205-S5002 - Satellite - Core Duo 1.66 GHz Maximizing Battery Life](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

### [Tecra A7-ST5112 Maximizing Battery Life](#)

Toshiba Tecra A7-ST5112

### [Portege 2010 Maximizing Battery Life](#)

Toshiba Portege 2010

### [P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Maximizing Battery Life](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[M45-S165 - Satellite - Celeron M 1.5 GHz Maximizing Battery Life](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Maximizing Battery Life](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

[M105-S1021 - Satellite - Celeron M 1.46 GHz Maximizing Battery Life](#)

Toshiba M105-S1021 - Satellite - Celeron M 1.46 GHz

This manual is also suitable for:

[P30-s6363stP30-s701tdP35-s605P35-s6051P35-s6052P35-s6053](#) ... [Show all](#)