

Using The Bridge Media Slot; Inserting Memory Stick Or Memory Stick Pro Media - Toshiba P30- S6362ST User Manual

P30-s6362st user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
Table Of Contents
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•

•

Bookmarks



Before removing a PC Card, stop it by clicking the **Safely Remove Hardware icon on the System tray. Once the PC Card**

has stopped, you can safely remove it. See

[Card" on page](#)

Using the Bridge Media slot

Your computer is equipped with a Bridge Media slot, which

supports the use of Memory Stick or Memory Stick PRO media, Secure Digital Picture Cards. This media can be used with a variety of digital products: digital music players, cellular phones, PDAs, digital cameras, digital video camcorders, etc.

NOTE

Inserting Memory Stick or Memory Stick PRO media

1

Turn the Memory Stick so that the notched corner faces the back of the computer and the arrow is face up.

2

Push the media into the slot until it locks in place.

145.

Never swap modules when the computer is in Hibernation or Standby mode. This is known as "warm swapping" and is not supported with this computer. For more information on Hibernation and Standby modes,

[Mode" on page 102](#)

Do not use the Copy Disk function for this type of media. To copy data from one media to another, use the drag-and-drop feature of Windows.

Exploring Your Options

Using the Bridge Media slot

and

["Using Standby Mode" on page 104](#)

TM

TM

(SD

) Cards, SmartMedia™ or xD-

"Removing a PC

see."Using Hibernation

147

Table of Contents

[Previous Page](#)
[Next Page](#)

[1](#)
[...](#)
[146](#)
[147](#)
[148](#)
[149](#)

Related Manuals for Toshiba P30-S6362ST

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P35-S605 Specification Sheet](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S609 Specifications](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S6053 Specifications](#)

Toshiba satellite p35-s6053: specifications (10 pages)

[Laptop Toshiba Satellite P35-S611 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P35-S6112 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P30-S701TD Specifications](#)

Satellite p30 series (4 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

Related Content for Toshiba P30-S6362ST

[Satellite A665 Series Bridge Media Slot Troubleshooting](#)

Toshiba Satellite A665 Series

[NB100 Series Using The Bridge Media Adapter Slot](#)

Toshiba NB100 Series

[PORTEGE M400 Bridge Media Slot Troubleshooting](#)

Toshiba PORTEGE M400

[Satellite L670D Bridge Media Slot Troubleshooting](#)

Toshiba Satellite L670D

[Satellite SERIES Bridge Media Slot Troubleshooting](#)

Toshiba Satellite SERIES

[Satellite A500 series Bridge Media Slot](#)

Toshiba Satellite A500 series

[Satellite A205 Series Using The Bridge Media Adapter Slot](#)

Toshiba Satellite A205 Series

[M645-S4080 Bridge Media Slot Troubleshooting](#)

Toshiba M645-S4080

This manual is also suitable for:

[P30-s6363stP30-s701tdP35-s605P35-s6051P35-s6052P35-s6053](#) ... [Show all](#)