

Sound System Problems - Toshiba P30-S6362ST User Manual

P30-s6362st user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

Table Of Contents

 
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•

•

Bookmarks



Examine the disc to see whether it is dirty. If necessary, wipe it with a clean damp cloth dipped in water or a neutral cleaner.

Replace the disc in the tray. Make sure it is lying flat, label side uppermost. Press the disc down until it locks on the spindle. Close the drive tray carefully, making sure it has shut

completely.

You press the disc eject button, but the drive tray does not slide out.

Make sure the computer is connected to a power source and

turned on. The DVD-ROM or multi-function drive eject mechanism requires power to operate.

To remove a disc without turning on the computer, use a narrow object, such as a straightened paper clip, to press the

manual eject button. This button is in the small hole next to

the disc eject button on the right side of the computer.

Some discs run correctly, but others do not.

If the problem is with an application CD-ROM, refer to the software's documentation and check that the hardware configuration meets the program's needs.

Sound system problems

You do not hear any sound from the computer.

Adjust the volume control.

If you are using external headphones or speakers, check that

they are securely connected to your computer.

The computer emits a loud, high-pitched noise.

This is feedback between the microphone and the

speakers. It occurs in any sound system when input from a microphone is fed to the speakers and the speaker volume is too loud.

Adjust the volume control.

Changing the settings for the Record Monitor feature in the Recording Control Utility (default Off), or the Mute feature

If Something Goes Wrong

Resolving a hardware conflict

175

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

174

175

176

177

Related Manuals for Toshiba P30-S6362ST

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P35-S605 Specification Sheet](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S609 Specifications](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S6053 Specifications](#)

Toshiba satellite p35-s6053: specifications (10 pages)

[Laptop Toshiba Satellite P35-S611 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P35-S6112 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P30-S701TD Specifications](#)

Satellite p30 series (4 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

Related Content for Toshiba P30-S6362ST

[Portege 2010 Sound System Problems](#)

Toshiba Portege 2010

[Satellite A35 Series Sound System Problems](#)

Toshiba Satellite A35 Series

[Qosmio X70-A series Sound System Problems](#)

Toshiba Qosmio X70-A series

[Satellite L550 Series Sound System Problems](#)

Toshiba Satellite L550 Series

[TECRA A50 series Sound System Problems](#)

Toshiba TECRA A50 series

[Satellite T210 Series Sound System Problems](#)

Toshiba Satellite T210 Series

[Satellite P200 Series Sound System Problems](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Sound System Problems](#)

Toshiba Qosmio X300 Series

This manual is also suitable for:

[P30-s6363stP30-s701tdP35-s605P35-s6051P35-s6052P35-s6053](#) ... [Show all](#)