

Scrolling With The Touchpad; Using The Scroll Button; Using The Control Buttons - Toshiba P30-S6362ST User Manual

P30-s6362st user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

Table Of Contents

 
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•

•

Bookmarks



56

Getting Started

Using the TouchPad™

NOTE

Once you have positioned your cursor, you can perform clicking functions by either double-tapping the TouchPad or

clicking the control buttons.

Scrolling with the TouchPad

There are two active regions on the TouchPad that allow you

to scroll as you would with any wheel device on a mouse or trackball.

To scroll vertically, run your finger up or down along the right

edge of the TouchPad. To scroll horizontally, run your finger

along the bottom edge of the TouchPad.

Using the Scroll button

For applicable systems, the scroll button, located between the

primary and secondary control buttons on the TouchPad, is

used for rapid viewing of pages on the screen.

Using the Control buttons

When a step instructs you to click or choose an item, move the cursor to the item, then press and release the primary (left-hand) button. To double-click, press the primary button

twice in rapid succession. The primary button usually corresponds to the left mouse button.

The function of the secondary (right-hand) button depends on the program you are using. It usually corresponds to the right mouse button. Check your program's documentation to find whether it uses the right mouse button. Because the TouchPad is much smaller than the display screen, moving your cursor across the screen often means having to move your finger several times across the TouchPad in the preferred direction.

TM

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
53
54
55
56
57
58
59
60

Related Manuals for Toshiba P30-S6362ST

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P35-S605 Specification Sheet](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S609 Specifications](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S6053 Specifications](#)

Toshiba satellite p35-s6053: specifications (10 pages)

[Laptop Toshiba Satellite P35-S611 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P35-S6112 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P30-S701TD Specifications](#)

Satellite p30 series (4 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

Related Content for Toshiba P30-S6362ST

[X305-Q705 - Qosmio - Core 2 Duo GHz Scrolling With The Touchpad](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Scrolling With The Touchpad](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Scrolling With The Touchpad](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Scrolling With The Touchpad](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Scrolling With The Touchpad](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Scrolling With The Touchpad](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M45-S165 - Satellite - Celeron M 1.5 GHz Scrolling With The Touchpad](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Scrolling With The Touchpad](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

This manual is also suitable for:

[P30-s6363stP30-s701tdP35-s605P35-s6051P35-s6052P35-s6053](#) ... [Show all](#)