

Selecting Video Cables - Toshiba P30-S6362ST User Manual

P30-s6362st user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
Table Of Contents
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•

•

Bookmarks



Selecting video cables

To connect a device to the S-video port, you will need to purchase a cable. For the best video quality, always use a properly shielded cable.

HINT: Toshiba recommends using a cable no longer than 20 feet (approximately 6 meters).

Using a poor quality cable may result in a dull or fuzzy picture, poor color, ghosting, video noise, or loss of

video.

Connecting to the S-video port

Video cables are not included with your computer. To connect

NOTE

a device to the video-out port, you will need to purchase an S-video cable.

To connect the device:

1

Connect one end of the video cable to the external video device.

Refer to the documentation provided with the device for the location of its video-in port.

2



Connect the other end of the video cable to the S-video port on the back of the computer.

3

Turn on the external video device.

4

Set the display mode by pressing Display Properties settings. For more information, see ["Directing the display output when you turn on the computer" on page 70.](#)

Getting Started

Using external display devices

70.

, or by setting the

Fn + F5

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
66
67
68
69
70
71
72
73

Related Manuals for Toshiba P30-S6362ST

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P35-S605 Specification Sheet](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S609 Specifications](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S6053 Specifications](#)

Toshiba satellite p35-s6053: specifications (10 pages)

[Laptop Toshiba Satellite P35-S611 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P35-S6112 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P30-S701TD Specifications](#)

Satellite p30 series (4 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

Related Content for Toshiba P30-S6362ST

[Satellite CL10 Series Selecting Video Cables](#)

Toshiba Satellite CL10 Series

[Portege Z20-B Series Selecting Video Cables](#)

Toshiba Portege Z20-B Series

[Satellite S70-B Series Selecting Video Cables](#)

Toshiba Satellite S70-B Series

[Satellite Click 2 PRO Selecting Video Cables](#)

Toshiba Satellite Click 2 PRO

[Satellite CL40 Series Selecting Video Cables](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Selecting Video Cables](#)

Toshiba Satellite E40-A

[C50 Series Selecting Video Cables](#)

Toshiba C50 Series

[Qosmio X70-A series Selecting Video Cables](#)

Toshiba Qosmio X70-A series

This manual is also suitable for:

[P30-s6363stP30-s701tdP35-s605P35-s6051P35-s6052P35-s6053](#) ... [Show all](#)