

Starting A Program From The Start Menu; Starting A Program From Windows ® Explorer - Toshiba P30-S6362ST User Manual

P30-s6362st user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

Table Of Contents

 
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230



•

•

Bookmarks



The next three sections explain how to start a program from the Start menu, Explorer, and the Run dialog box.

Starting a program from the Start menu

When you install a program, the operating system usually puts an icon in the All Programs menu. To start a program that has an icon in the All Programs menu, follow these

steps,
which use the Windows

1

Click Start, then point to All Programs.

The Windows

Programs menu, which lists programs and program groups. If your program is listed, go to step 3, otherwise, continue with step 2.

2

Point to the program group, in this example, Accessories. The Accessories menu displays.

3

Click the program, in this example, WordPad.

WordPad opens.

To close the program, click the Close button in the upper-right corner of the program's window.

Starting a program from Windows

If a program is not listed in the Programs menu, you can start

it from Windows

view of your computer's contents as a hierarchy or "tree."

You can easily see the content of each drive and folder on your computer. To use this method, you should know the file

name and location of the program's executable file (this file

ends with .exe).



This example opens WordPad using its file name, *wordpad.exe*.

1

Click Start, then point to All Programs.

2

Click Accessories.

®

WordPad program as an example:

®

XP operating system displays the All

®

Explorer. Windows

Learning the Basics

Starting a program

®

Explorer

®

Explorer gives you a

81

[Previous Page](#)
[Next Page](#)

1
...
78
79
80
81
82
83
84
85

Related Manuals for Toshiba P30-S6362ST

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba Satellite P30-132 User Manual](#)

Toshiba satellite p30-132: user guide (165 pages)

[Laptop Toshiba Satellite P35-S605 Specification Sheet](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S609 Specifications](#)

Satellite p35 series (12 pages)

[Laptop Toshiba Satellite P35-S6053 Specifications](#)

Toshiba satellite p35-s6053: specifications (10 pages)

[Laptop Toshiba Satellite P35-S611 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P35-S6112 Specifications](#)

Satellite p35 series (9 pages)

[Laptop Toshiba Satellite P30-S701TD Specifications](#)

Satellite p30 series (4 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

Related Content for Toshiba P30-S6362ST

[Satellite R10 Starting A Program From The Start Menu](#)

Toshiba Satellite R10

[Satellite M45 Starting A Program From The Start Menu](#)

Toshiba Satellite M45

[Satellite A200 Series Starting A Program From The Start Menu](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Starting A Program From The Start Menu](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Starting A Program From The Start Menu](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Starting A Program From The Start Menu](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Starting A Program From The Start Menu](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Starting A Program From The Start Menu](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

This manual is also suitable for:

[P30-s6363stP30-s701tdP35-s605P35-s6051P35-s6052P35-s6053](#) ... [Show all](#)