

Monitoring Main Battery Power - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


•

[Table of Contents](#)

•

Bookmarks

--

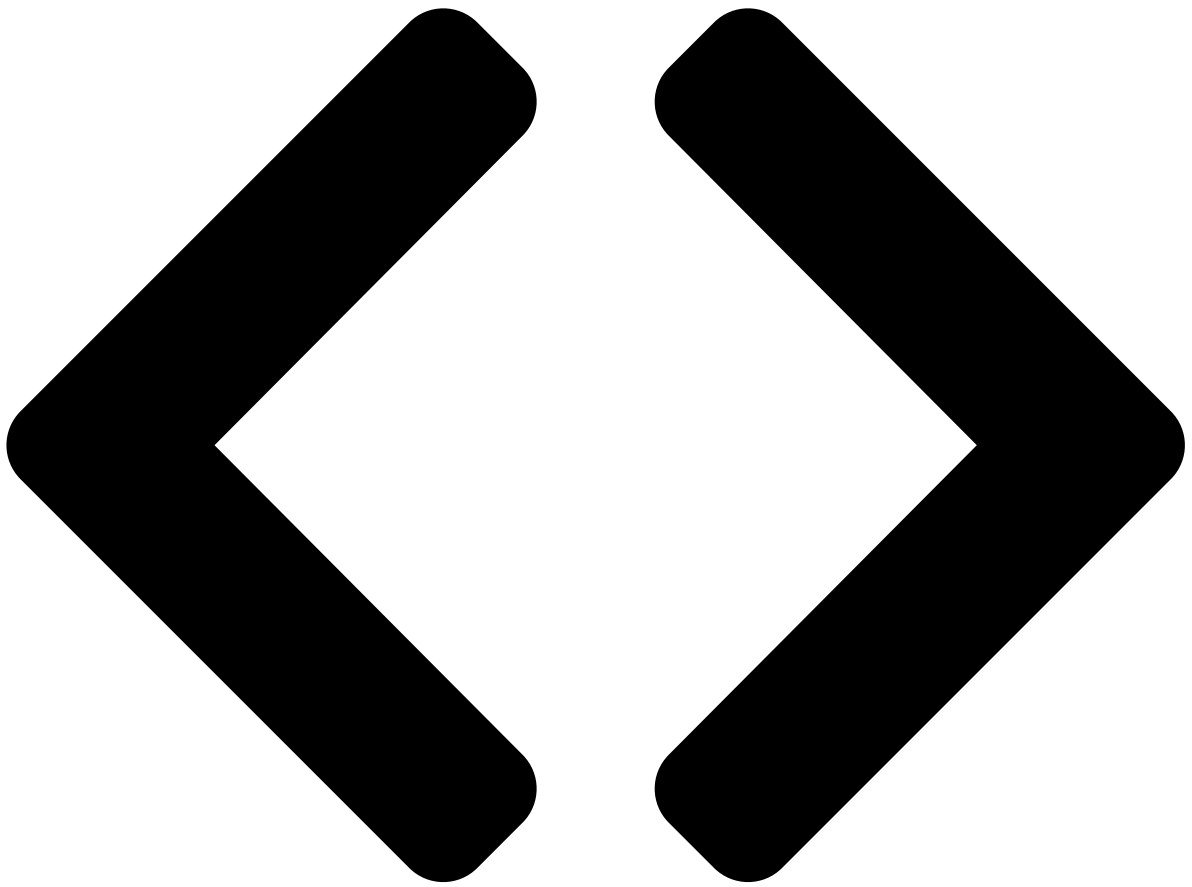

104

Mobile Computing

Monitoring main battery power

NOTE

If the RTC battery is low, the real-time clock and calendar may display the incorrect time and date, or stop working.

To recharge the RTC battery, plug the computer into a live

electrical

outlet and leave the computer powered on for 24 hours.

NOTE

The computer can be used while the RTC battery is being charged, although the charging status of the RTC battery cannot be monitored.

Monitoring main battery power

The computer's main battery light gives you an indication of the main battery's current charge:



Glows amber while the main battery is being charged (AC adaptor connected).



Glows blue when the main battery is fully charged.



Is unlit when the battery has discharged, the battery is not charging, or the AC adaptor is not plugged into the computer or AC outlet.

NOTE



ManualsLib.com

Flashes amber when the main battery charge is low and it is time to recharge the main battery or plug in the AC adaptor.

The above error message may vary by computer model.

The RTC battery does not charge while the computer is turned off even when the AC adaptor is charging the computer. The RTC battery charges when the computer is powered on.

It is seldom necessary to charge the RTC battery because it charges while the computer is on. If the RTC battery is low, the real-time clock and calendar may display the incorrect time and date or stop

working.

When Hibernation mode is enabled and the RTC battery is completely discharged, a warning prompts you to reset the real-time clock.

Battery life and charge time may vary, depending upon power management settings, applications and features used.

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1

...

103

104

105

106

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Portégé R830 Series Monitoring Main Battery Power](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Monitoring Main Battery Power](#)

Toshiba SatellitePro L700 Series

[Satellite A200 Series Monitoring Main Battery Power](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Monitoring Main Battery Power](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Monitoring Main Battery](#)

[Power](#)

[Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz](#)

[Tecra M6-EZ6612 Monitoring Main Battery Power](#)

[Toshiba Tecra M6-EZ6612](#)

[Tecra A8-EZ8411 Monitoring Main Battery Power](#)

[Toshiba Tecra A8-EZ8411](#)

[Tecra A7-ST5112 Monitoring Main Battery Power](#)

[Toshiba Tecra A7-ST5112](#)

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167](#) ... [Show all](#)