

Using An Expresscard; Inserting An Expresscard; Removing An Expresscard - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--

-

[Table of Contents](#)

•

Bookmarks

--



132

Exploring Your Computer's Features

Using an ExpressCard™

Using an ExpressCard **(Available on certain models)**

The ExpressCard

use of ExpressCard media. The slot also supports hot swapping,

which allows you to replace one ExpressCard with another while the computer is on.

Inserting an ExpressCard

Before you insert an ExpressCard comes with the card to see if you need to do anything before you insert it.

To insert an ExpressCard:

1

Locate the ExpressCard slot just below the PC Card slot on the left side of the computer.

2

Insert the ExpressCard.

(Sample Illustration) Inserting an ExpressCard

3

When the card is almost all the way into the slot, push firmly but gently to ensure a firm connection with the computer. Do not force the card into position.

Removing an ExpressCard


1

Prepare the card for removal by clicking the **Safely Remove Hardware icon on the Notification Area and then selecting the card or device you want to remove.**

If the system is unable to prepare the card for safe removal, a message will tell you to try again later. If the card can be removed now, the system displays Safe to Remove Hardware.

2

Locate the ExpressCard

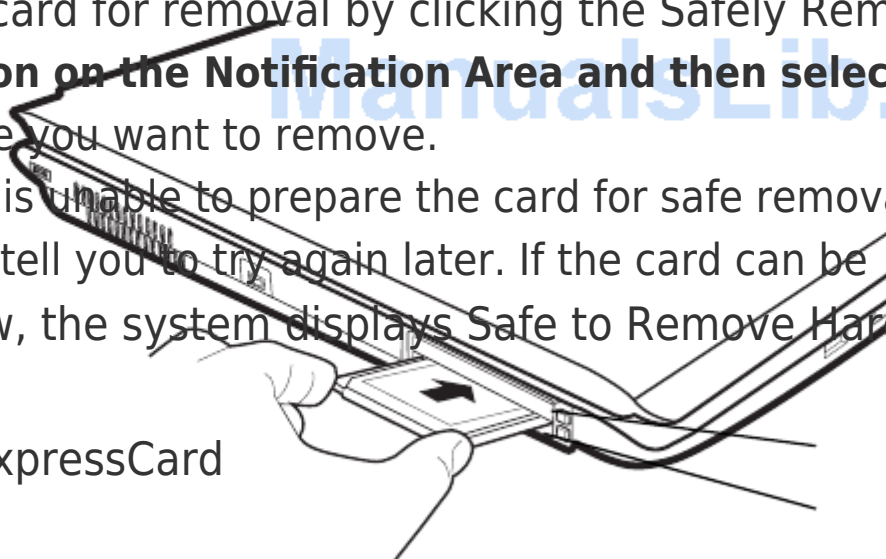

TM

TM

slot (available on certain models) supports the

TM

TM

TM

eject button.

TM

, refer to the documentation that

PC Card slot

ExpressCard slot

[Table of Contents](#)

[Next Page](#)

[1](#)

...

[131](#)

[132](#)

[133](#)

[134](#)

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Satellite A500 series Expresscard Overheating](#)

Toshiba Satellite A500 series

[Satellite A205 Series Using An Expresscard](#)

Toshiba Satellite A205 Series

[SATELLITE R850 Expresscard](#)

Toshiba SATELLITE R850

[QOSMIO G50 Pci Expresscard Slot Troubleshooting](#)

Toshiba QOSMIO G50

[Satellite P500 Expresscard](#)

Toshiba Satellite P500

[Satellite L500 Expresscard Overheating](#)

Toshiba Satellite L500

[Satellite A300 Expresscard](#)

Toshiba Satellite A300

[Satellite L350 series Expresscard](#)

Toshiba Satellite L350 series

This manual is also suitable for:

P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167 ... [Show all](#)