

Using The Bridge Media Adapter Slot; Inserting Memory Media - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


•

[Table of Contents](#)

•

Bookmarks

--

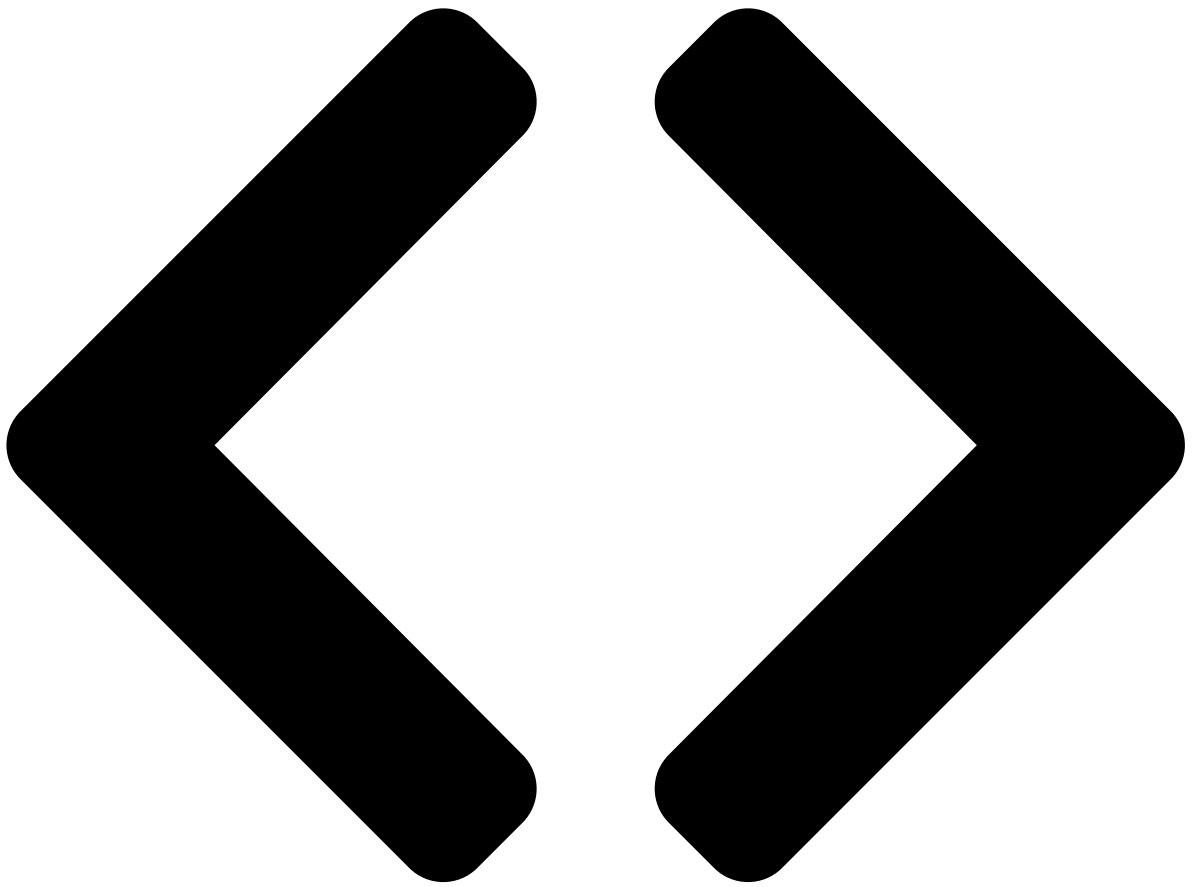

3

Press the ExpressCard eject button once to pop it out slightly, and push it in to remove the ExpressCard.

The ExpressCard ejects slightly from the slot.

4

Grasp the edges of the ExpressCard and slide it out of the slot.

(Sample Illustration) Removing an ExpressCard

Using the Bridge Media Adapter Slot

(Available on ~~certain~~ models)

The Bridge Media Adapter slot (available on certain models) supports the use of Memory Stick

TM

Digital

xD-Picture Card

digital products: digital music players, cellular phones, PDAs, digital cameras, digital video camcorders, etc.

The Bridge Media Adapter slot may also support other types of media. For a complete list of supported media, visit Toshiba's Web site at accessories.toshiba.com.

NOTE

Inserting memory media

The following instructions apply to all types of supported media devices.

1

Turn the media so that the contacts (metal areas) are face down.

Exploring Your Computer's Features

Using the Bridge Media Adapter Slot

TM

TM

(SD

), MMC

TM

media. These media can be used with a variety of

Do not use the Copy Disk function for this type of media. To copy data from one media to another, use the drag-and-drop feature of the

®


Windows

operating system.

ExpressCard

eject button

TM

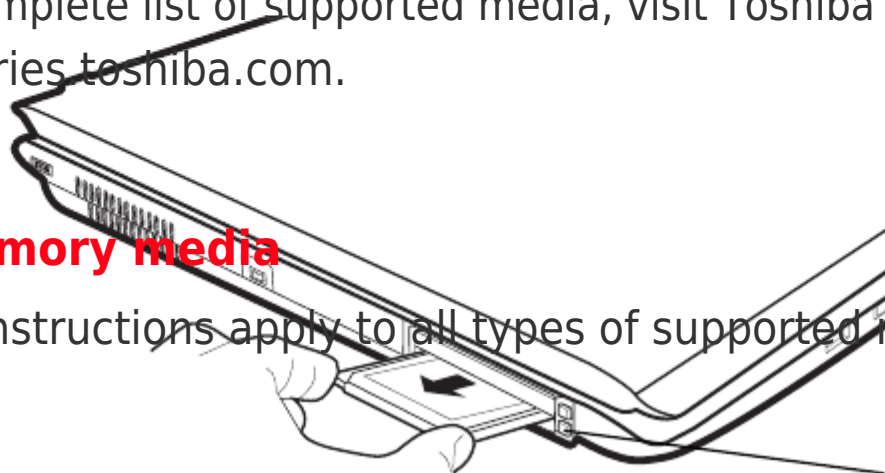

ManualsLib.com

, Memory Stick
(MultiMediaCard

TM

PRO, Secure

TM

), or

133

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

[1](#)

...

[132](#)

133

[134](#)

[135](#)

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[X305-Q705 - Qosmio - Core 2 Duo GHz Using The Bridge Media Adapter Slot](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Using The Bridge Media Adapter Slot](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Using The Bridge Media](#)

[Adapter Slot](#)

[Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz](#)

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Using The Bridge Media](#)

[Adapter Slot](#)

[Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz](#)

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Using The Bridge](#)

[Media Adapter Slot](#)

[Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz](#)

[M45 S169 - Satellite - Celeron M 1.6 GHz Using The Bridge Media](#)

[Adapter Slot](#)

[Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz](#)

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Using The Bridge](#)

[Media Adapter Slot](#)

[Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz](#)

[M400 - Portege - Core 2 Duo 1.83 GHz Using The Bridge Media Adapter](#)

[Slot](#)

[Toshiba M400 - Portege - Core 2 Duo 1.83 GHz](#)

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167 ... Show all](#)