

Toshiba Sd™ Memory Card Format Utility - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--

•

[Table of Contents](#)

•

Bookmarks

--



TOSHIBA SD

This utility is used to format SD Adapter slot.

To format an SD memory card using this utility:

1

Click Start, All Programs, Toshiba, Utilities, and then SD **Memory Card Format**, or click the **SD Memory Card icon** in the Optimize tab of

The TOSHIBA SD Memory Card Format screen appears.



(Sample Image) TOSHIBA SD Memory Card Format screen

2

Select the drive corresponding to the SD memory card.

3

Select the formatting option:



4

Click  to begin formatting. The formatting progress is displayed in the horizontal bar in the window.

5

When formatting is completed, click Close to exit the utility.

TOSHIBA SD™ Memory Card Format Utility

Memory Card Format Utility

Quick Format

Full Format

Toshiba Utilities


TM

cards used with the Bridge Media

TOSHIBA

Assist.

147

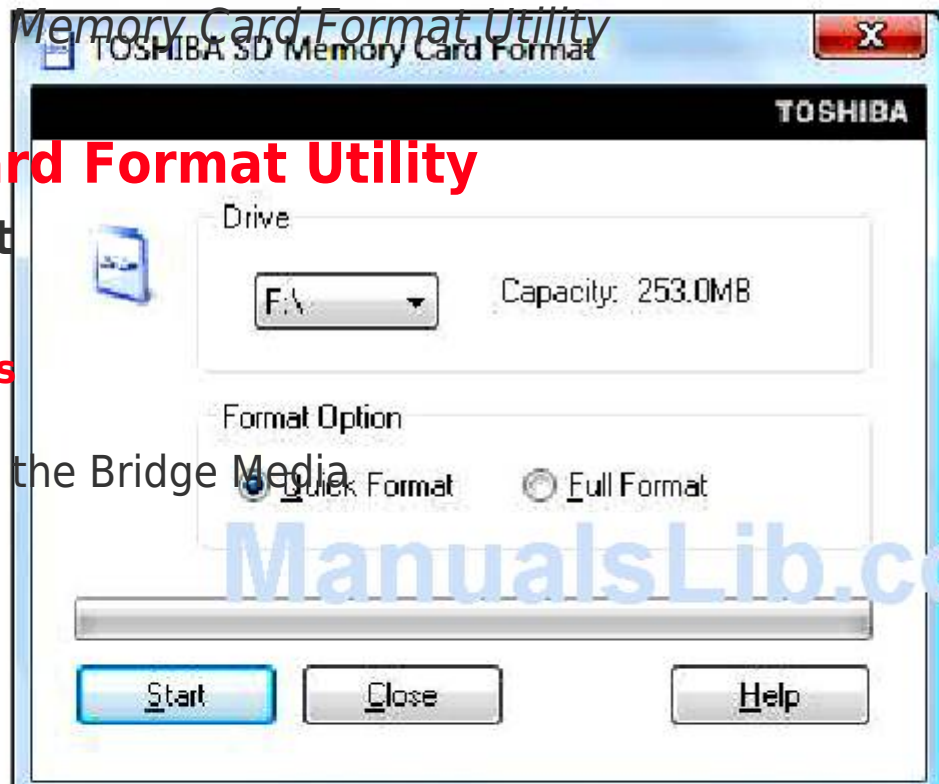

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)

...

[146](#)

147

[148](#)

[149](#)

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Toshiba Sd™ Memory Card Format Utility](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Toshiba Sd™ Memory Card Format Utility](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Toshiba Sd™ Memory Card Format Utility](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Toshiba Sd™ Memory Card Format Utility](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

[M200 - Portege - Pentium M 1.5 GHz Toshiba Sd™ Memory Card Format Utility](#)

Toshiba M200 - Portege - Pentium M 1.5 GHz

[A8 S8514 - Tecra - Core 2 Duo GHz Toshiba Sd™ Memory Card Format Utility](#)

Toshiba A8 S8514 - Tecra - Core 2 Duo GHz

[Tecra M5 Toshiba Sd™ Memory Card Format Utility](#)

Toshiba Tecra M5

[Satellite R20-ST2081 Toshiba Sd™ Memory Card Format Utility](#)

Toshiba Satellite R20-ST2081

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167](#) ... [Show all](#)