

Care And Maintenance Of Your Fingerprint Reader - Toshiba P100- ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


•

[Table of Contents](#)

•

Bookmarks

--

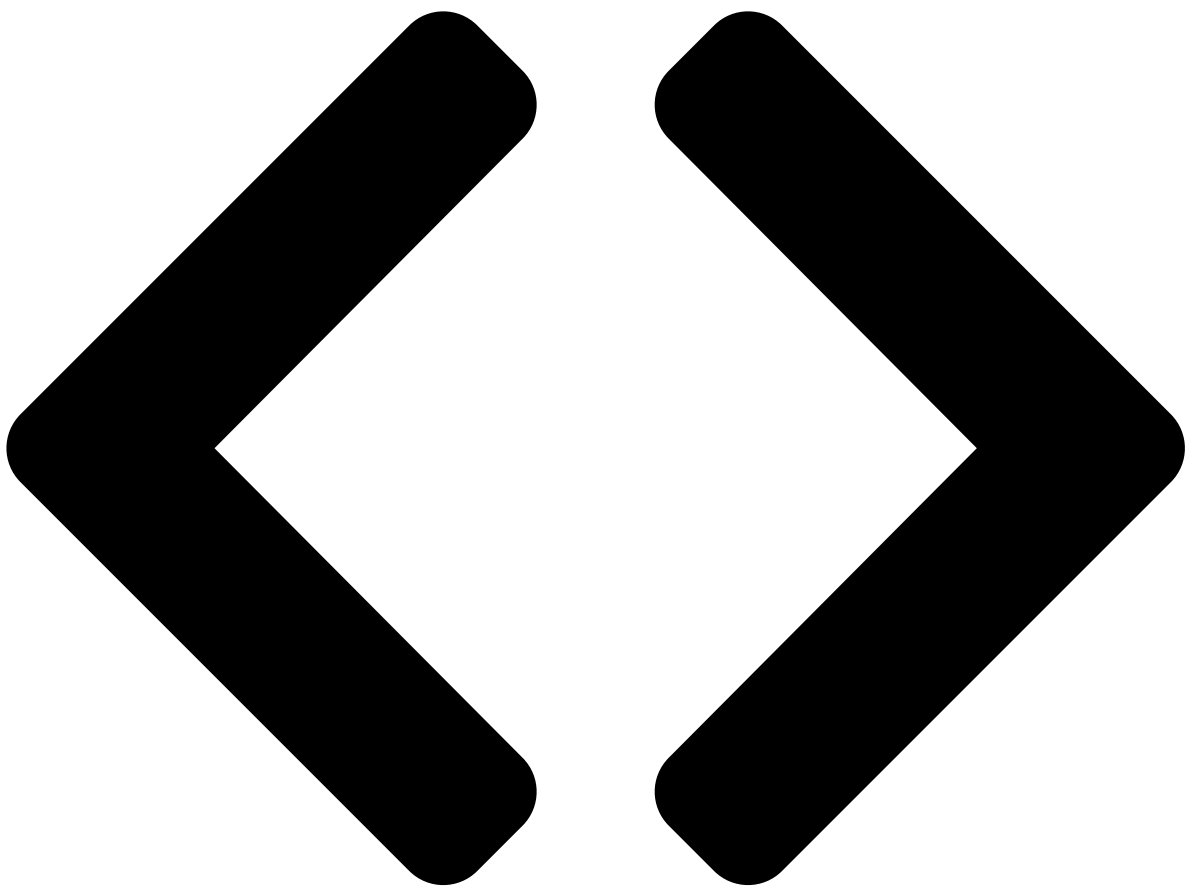

3

Click Settings then Fingerprint Storage Inspector.

The Fingerprint Storage Inspector screen is displayed.

4

If other fingerprint data is still displayed on the list, hold down the selected, then click Remove.

5

Click OK to make the changes permanent.

6

Check that all Fingerprint data was deleted on the Fingerprint Storage Inspector screen.

Care and maintenance of your fingerprint reader

Failure to follow these guidelines and/or procedures might result in

damage to the reader or cause reader failure, finger recognition problems, or lower finger recognition success rate.



Do not scratch or poke the reader with your nails or any hard or sharp objects.



Do not press the reader with too much pressure.



Do not touch the reader with a wet finger or any wet objects. Keep reader surface dry and free of water vapor.



Do not touch the reader with a soiled finger. Minute foreign particles on a soiled or dirty finger may scratch the reader.



Do not paste stickers or write on the reader.



Do not touch the reader with a finger or any object with built-up static electricity.

Observe the following before you swipe your finger on the reader,

whether for fingerprint enrollment/registration or recognition.



Wash and dry your hands thoroughly.



Remove static electricity from your fingers by touching any metal surface. Static electricity is a common cause of reader failures, especially during dry seasons such as winter.



Clean the reader with a lint-free cloth. Do not use detergent to clean the reader.

Fingerprint Authentication Utility

Control

key and select each fingerprint until they are all

Toshiba Utilities

163

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

162

163

164

165

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Tecra Z40-A Series Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Tecra Z40-A Series

[Portégé Z30-A Series Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portégé Z30-A Series

[Satellite A200 Series Care And Maintenance Of Your Fingerprint Reader](#)

TOSHIBA Satellite A200 Series

[X305-Q705 - Qosmio - Core 2 Duo GHz Care And Maintenance Of Your](#)

[Fingerprint Reader](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[Portege Z930-Landis-PT235U-05U0CWG1 Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portege Z930-Landis-PT235U-05U0CWG1

[Portege ORACLER930A Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portege ORACLER930A

[Portege R930-Landis-PT331U-023002 Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba Portege R930-Landis-PT331U-023002

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Care And Maintenance Of Your Fingerprint Reader](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167](#) ... [Show all](#)