

Problems When You Turn On The Computer - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


•

[Table of Contents](#)

•

Bookmarks

--

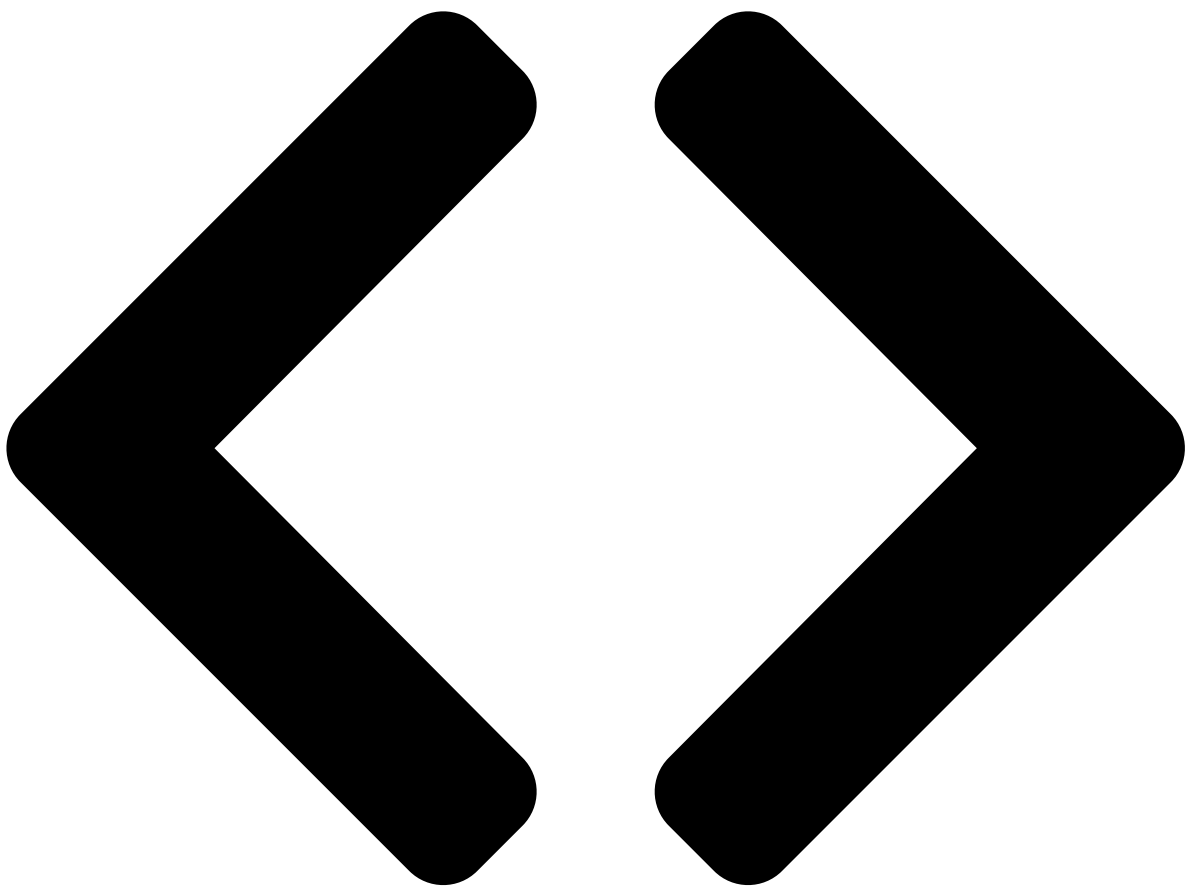

170

If Something Goes Wrong

Problems when you turn on the computer

2

Click the Applications tab.

If a program has stopped responding, the words "not responding" appear beside its name in the list.

3

Select the program you want to close, then click End Task. Closing the failed program should allow you to continue working. If it does not, continue with the next step.

4

Close the remaining programs one by one by selecting the program name, then End Task.

To power off your computer:

1

Click Start, and then click the arrow next to the Lock button in the lower-right part of the Start menu.

The Shut Down menu appears.

Start

(Sample Image) Shut Down menu

2

Click Shut down.

The computer shuts down completely.

Problems when you turn on the computer

These problems may occur when you turn on the power.

The computer will not start.

Make sure you attached the AC adaptor and power cord/cable properly or installed a charged battery.

Press and hold the power button for at least 10 seconds.

If you are using the AC adaptor, check that the wall outlet is

working by plugging in another device, such as a lamp.


Verify that the computer is on by looking at the on/off indicator.

If

the indicator is glowing, the computer is on. Also, try turning the computer off and then on.

Arrow

Shut Down menu

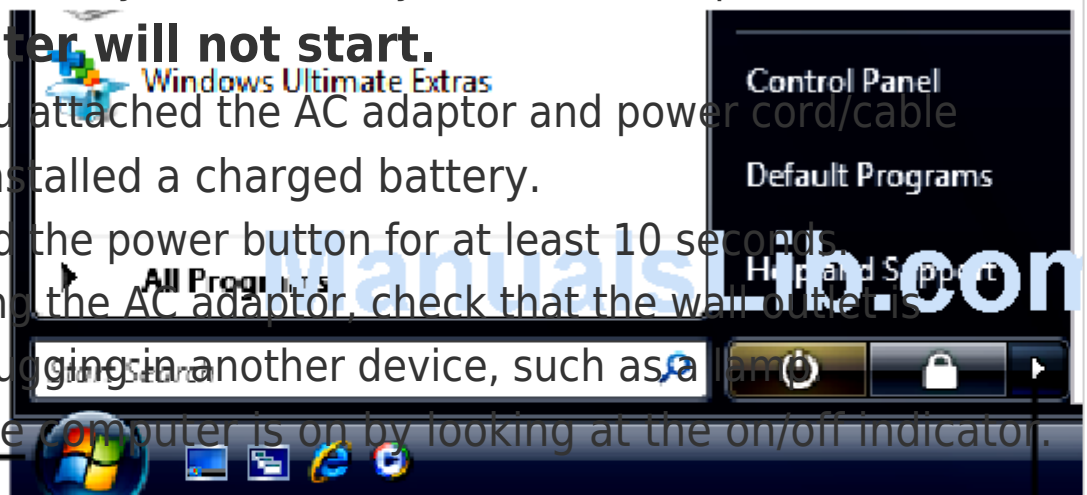

[Previous Page](#)
[Next Page](#)

[1](#)

...

[169](#)

170

[171](#)

[172](#)

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[satellite fusion 15 series Problems When You Turn On The Computer](#)

Toshiba satellite fusion 15 series

[Satellite CL10 Series Problems When You Turn On The Computer](#)

Toshiba Satellite CL10 Series

[Satellite S70-B Series Problems When You Turn On The Computer](#)

Toshiba Satellite S70-B Series

[Satellite CL40 Series Problems When You Turn On The Computer](#)

Toshiba Satellite CL40 Series

[Satellite E40-A Problems When You Turn On The Computer](#)

[Toshiba Satellite E40-A](#)

[Portege 2010 Problems When You Turn On The Computer](#)

[Toshiba Portege 2010](#)

[Satellite A35 Series Problems When You Turn On The Computer](#)

[Toshiba Satellite A35 Series](#)

[C50 Series Problems When You Turn On The Computer](#)

[Toshiba C50 Series](#)

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167](#) ... [Show all](#)