

Keyboard Problems - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


-

[Table of Contents](#)

•

Bookmarks

--

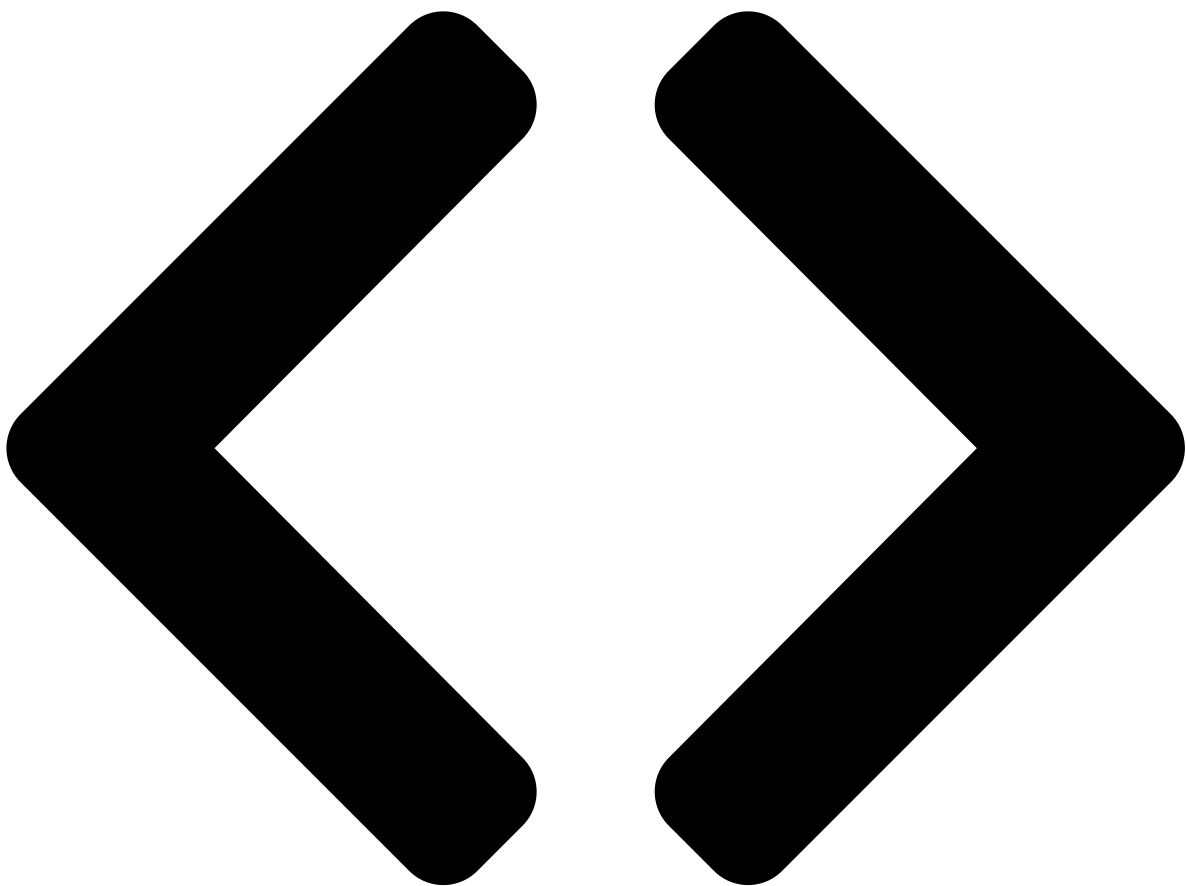

Check the power options via your Power Plans (see [on page](#)

memory module, that takes its power from the battery? Is your software using the hard disk more? Is the display power set to turn off automatically? Was the battery fully charged to begin with?

All

these conditions affect how long the charge lasts.

After a period of time, the battery will lose its ability to perform at

maximum capacity and will need to be replaced. This is normal

for

all batteries. To purchase a new battery pack, see your accessories information that shipped with your computer, or visit the Toshiba Web site at

current on the most recent software and hardware options for your computer, and for other product information.

For more information on maintaining battery power, see [batteries" on page](#)

Keyboard problems

If, when you type, strange things happen or nothing happens, the problem may be related to the keyboard itself.

The keyboard produces unexpected characters.

A keypad overlay may be on. If the numlock light or cursor control mode light is on, press

light, or

If the problem occurs when both the keypad overlays are off, make sure the software you are using is not remapping the keyboard.

Refer to the software documentation and check that the program does not assign different meanings to any of the keys.

You have connected an external keyboard and the operating system displays one or more keyboard error messages.

The keyboard you connected may be defective or incompatible with

the computer. Try using a different make of keyboard.

Nothing happens when you press the keys on the external

keyboard.

You may have plugged the external keyboard in while the computer

was turned on. Using the computer's TouchPad:

1

Click Start, and then click the arrow next to the Lock button in the lower-right part of the Start menu.

The Shut Down menu appears.

2

Click Restart.

The computer will restart and recognize the device.

109). Have you added a device, such as a PC Card or accessories.toshiba.com.

102.

Fn

+

to turn off the numlock light.

Fn

F11

If Something Goes Wrong

Resolving a hardware conflict

Refer to this site often to stay

+

F10

to turn off the cursor control mode

179

"Power Plans"

"Charging"

ManualsLib.com

[Previous Page](#)
[Next Page](#)

1

...

178

179

180

181

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Portege 2010 Keyboard Problems](#)

Toshiba Portege 2010

[Satellite A35 Series Keyboard Problems](#)

Toshiba Satellite A35 Series

[Qosmio X70-A series Keyboard Problems](#)

Toshiba Qosmio X70-A series

[Satellite L550 Series Keyboard Problems](#)

Toshiba Satellite L550 Series

[TECRA A50 series Keyboard Problems](#)

Toshiba TECRA A50 series

[Satellite T210 Series Keyboard Problems](#)

Toshiba Satellite T210 Series

[Satellite P200 Series Keyboard Problems](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Keyboard Problems](#)

Toshiba Qosmio X300 Series

This manual is also suitable for:

P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167 ... [Show all](#)