

Display Problems - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


•

[Table of Contents](#)

•

Bookmarks

--

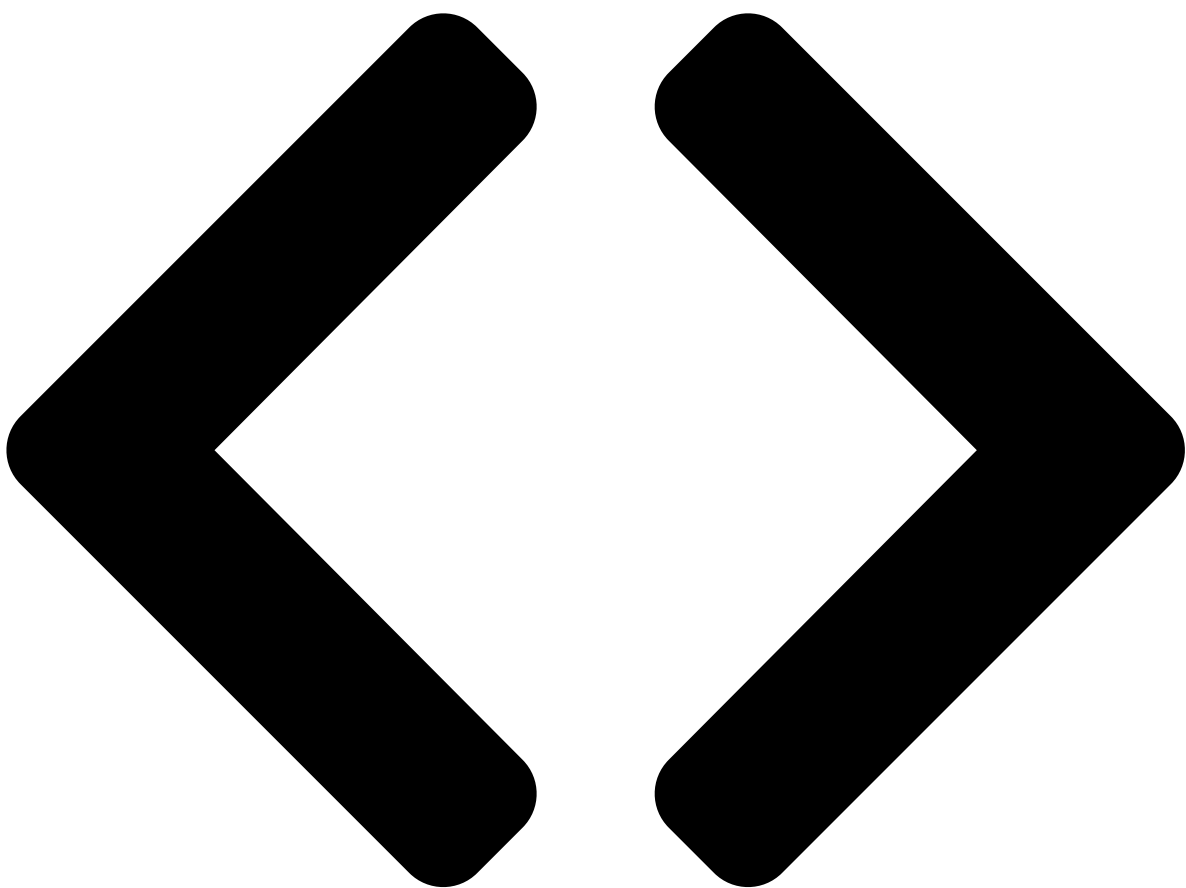

180

If Something Goes Wrong

Resolving a hardware conflict

Display problems

Here are some typical display problems and their solutions:

The screen is blank.

Display Auto Off may have gone into effect. Press any key to activate the screen.

You may have activated the instant password feature by pressing and

Fn

F1

any key, type the password and press registered, press any key. The screen reactivates and allows you to continue working.

If you are using the built-in screen, make sure the display priority is not set for an external monitor. To do this, press simultaneously (once). If this does not correct the problem, press and

simultaneously again to return the display priority to its

F5

previous setting.

If you are using an external monitor:



Check that the monitor is turned on.



Check that the monitor's power cord/cable is firmly plugged into a working power outlet.



Check that the cable connecting the external monitor to the computer is firmly attached.



Try adjusting the contrast and brightness controls on the external monitor.



Press

priority is not set for the built-in screen.

The screen does not look right.

You can change the display settings by clicking a blank area of the desktop with the secondary control button, then clicking

Personalize. This opens the Personalization window. Click Display

settings to choose the colors for the screen. Click Windows Color

and Appearance to choose the screen resolution.

simultaneously. If you have registered a password, press

HINT: Holding the Fn key and pressing the F5 key several times will advance you through the display options.

and

simultaneously to make sure the display

Fn

F5

. If no password is

Enter

Fn

and

F5

Fn

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)

...

[179](#)

180

[181](#)

[182](#)

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Satellite Radius 15 Display Problems](#)

Toshiba Satellite Radius 15

[satellite fusion 15 series Display Problems](#)

Toshiba satellite fusion 15 series

[Satellite CL10 Series Display Problems](#)

Toshiba Satellite CL10 Series

[Portege Z20-B Series Display Problems](#)

Toshiba Portege Z20-B Series

[Satellite S70-B Series Display Problems](#)

[Toshiba Satellite S70-B Series](#)

[Tecra A3 Series Display Problems](#)

[Toshiba Tecra A3 Series](#)

[Satellite Click 2 PRO Display Problems](#)

[Toshiba Satellite Click 2 PRO](#)

[Satellite CL40 Series Display Problems](#)

[Toshiba Satellite CL40 Series](#)

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167](#) ... [Show all](#)