

Using The Hot Key Cards - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


•

[Table of Contents](#)

•

Bookmarks

--

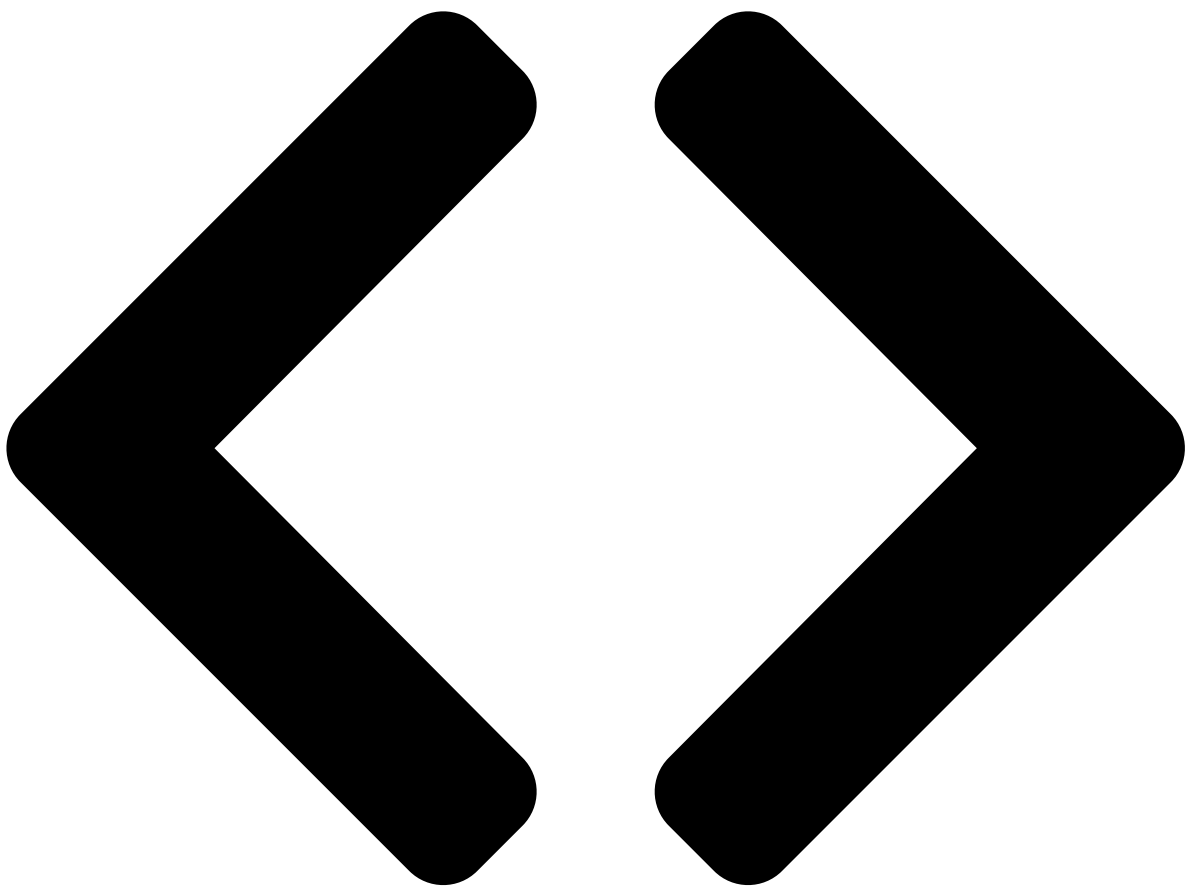

202

Hot Keys

Hot Key Cards

Using the Hot Key Cards

The Hot Key Cards are normally hidden from view. The Cards appear only when the pointing device is moved to the top center edge of the screen.

In addition, a Hot Key Card can be displayed by pressing the

associated hot key.

NOTE

To use the Hot Key Cards using the pointing device:

1

Move the cursor to the top center edge of the screen.

The TOSHIBA Cards appear along the top of the screen.

(Sample Image) Hot Key Card display

2

Double-click the Card for the system function to be modified.

The selected Card is displayed full-size with its available options below it. All other Cards are again hidden from view.

3

Click the desired option.

To use a Hot Key Card using a hot key:

1

Press the hot key associated with the desired function.

The associated hot key card appears at the top of the screen with its available options below it.

2

To cycle through the displayed options, hold down the hot key repeatedly. Release the

option is selected.

Hot keys are keys that, when pressed in combination with the turn system functions on and off. Hot keys have a legend on the key indicating the option or feature the key controls.

F_n

key when the desired

F_n

key,

F_n

and press



ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

201

202

203

204

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Qosmio X300 Series Hot Key Cards](#)

Toshiba Qosmio X300 Series

[Portégé R830 Series Hot Key Cards](#)

Toshiba Portégé R830 Series

[SatellitePro L700 Series Hot Key Cards](#)

Toshiba SatellitePro L700 Series

[L835 Hot Key Cards](#)

Toshiba L835

[Satellite R850 Series Hot Key Cards](#)

Toshiba Satellite R850 Series

[Qosmio F750 Series Hot Key Cards](#)

Toshiba Qosmio F750 Series

[Satellite A200 Series Hot Key Cards](#)

TOSHIBA Satellite A200 Series

[X870 Hot Key Cards](#)

Toshiba X870

This manual is also suitable for:

P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167 ... [Show all](#)