

Password Security - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--

•

[Table of Contents](#)

•

Bookmarks

--



206

Hot Keys

Hot Key Functions

Password security

or
Fn
+



Without a password



The

Fn

instant security. Using the pointing device or any key will make the display's content reappear, if no password is set for the current user.

With a password

The

Fn

the logon screen.

If you set a blank screen saver, selecting this Hot Key Card or pressing

window. Using the pointing device or any key will make the display's content reappear. The Windows

screen will appear, prompting you for a password. After typing in the password for the current user, press

This TOSHIBA Card or hot key blanks the display.

Selecting this Card or pressing the hot key displays the following options:

(Sample Image) Security options



To enable security, select



To cancel, select

+

hot key function turns off the display and activates



F1

+

hot key function activates instant security and displays

F1

Fn

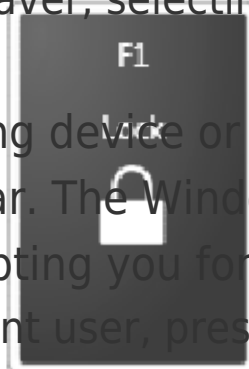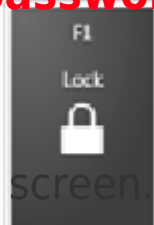

ManualsLib.com

+

F1

to activate instant security will display the logon

.

.

®

operating system log-on

.

Enter



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

205

206

207

208

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Satellite 110 Series Instant Password Security](#)

Toshiba Satellite 110 Series

[Satellite R10 Password Security](#)

Toshiba Satellite R10

[Satellite M45 Instant Password Security](#)

Toshiba Satellite M45

[Satellite 2670 series Chapter 7: Setup And Password Security](#)

TOSHIBA Satellite 2670 series

[Satellite A200 Series Password Security](#)

[TOSHIBA Satellite A200 Series](#)

[PORTEGE 7200CT Chapter 7: Setup And Password Security](#)

[TOSHIBA PORTEGE 7200CT](#)

[Satellite 4030CDT Instant Password Security](#)

[TOSHIBA Satellite 4030CDT](#)

[Satellite 1415 Series Instant Password Security](#)

[TOSHIBA Satellite 1415 Series](#)

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167](#) ... [Show all](#)