

Using The Dual Mode Pad; Using Dual Mode - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237

--


•

[Table of Contents](#)

•

Bookmarks

--

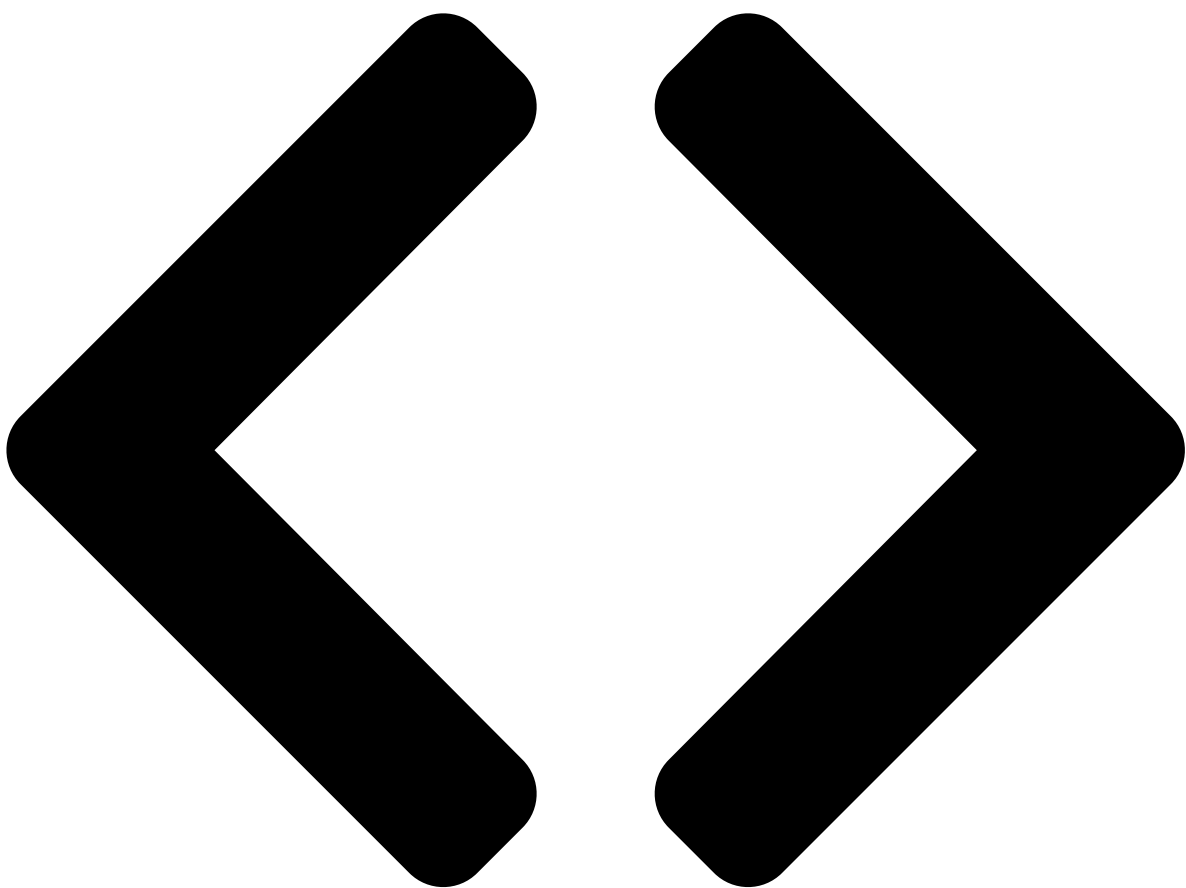

Using the Dual Mode Pad

(Available on certain models)

Using Dual Mode

The Dual Mode feature allows you to switch between Cursor Mode

(the default mode) and Button Mode.

In Button Mode, you can use the virtual buttons on the Dual Mode Pad which provide convenient shortcuts to frequently used

applications. You can also use the volume control bar to adjust the system volume quickly and easily.

Using the Virtual Buttons

The Dual Mode Pad has six virtual buttons and a volume control bar. Each virtual button can be configured to start an application. The volume control bar is used to adjust the system volume level.

Virtual
buttons

Virtual
buttons

(Sample Illustration) Virtual buttons on the Dual Mode Pad

NOTE

The virtual buttons at the top of the Dual Mode Pad have the following default settings:



Left button: Opens the assigned email application



Middle button: Opens the ConfigFree utility (see the Toshiba online Help for more information)



Right button: Sends the item in the active window to the printer
The other three virtual buttons have no default settings. You must configure these buttons in the Mouse Properties dialog box before they can be used.


TOSHIBA

1

2

Activating the Dual Mode Pad will deactivate an external mouse.

Getting Started

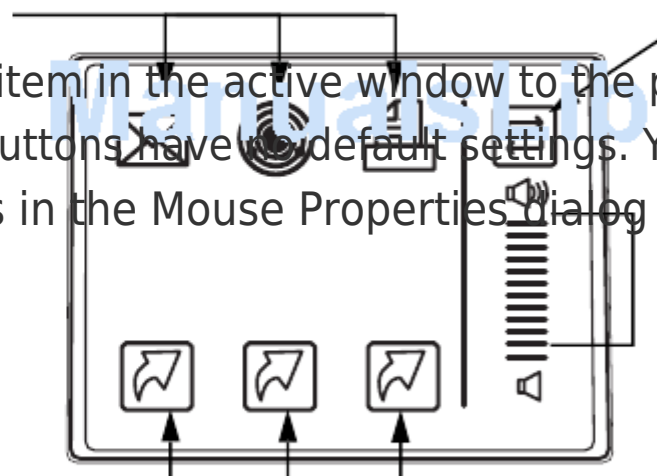

Using the Dual Mode Pad

Mode switch
button

Volume
control
bar
3

65

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
62
63
64
65
66
67
68
69

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Satellite A210 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba Satellite A210 Series

[Satellite A200 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

[TOSHIBA Satellite A200 Series](#)

[A200 series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

[Toshiba A200 series](#)

[Satellite P200 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

[Toshiba Satellite P200 Series](#)

[PSPB0U-00W008 Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

[Toshiba PSPB0U-00W008](#)

[PSAAKC-VA104C Using The Touch Pad/Dual Mode Pad](#)

[Toshiba PSAAKC-VA104C](#)

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Using The Dual Mode Pad](#)

[Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz](#)

[Satellite X200-AA3 Using The Dual Mode Pad](#)

[Toshiba Satellite X200-AA3](#)

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167](#) ... [Show all](#)