

Playing Optical Media; Creating A Cd/Dvd - Toshiba P100-ST1072 User Manual

P100-st1072 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
Table Of Contents
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237



•

[Table of Contents](#)

•

Bookmarks



The Windows Media
ordinary compact disc player:



To play the CD or to pause, click the Play/Pause button.



To stop the CD, click the Stop button.

Playing optical media

If you insert a CD/DVD into the optical drive and the Auto-Run



feature does not automatically start your disc, try launching the CD/DVD manually. To do this, follow these steps:

1

Click Start, and then Computer.

2

Click the optical drive icon.

The disc drive will run the CD/DVD.

If your disc does not run using this method, try using an application that is associated with the media on the disc. For example, if it is a music CD, open Windows Media then play the CD. For other types of media, use the associated software to open the files on the disc.

Creating a CD/DVD

Depending on the configuration, your computer may come with a multi-function drive that allows you to:



Play pre-recorded DVDs



Play pre-recorded CDs



Read and write data (depending on your system configuration) and music files to CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs; and DVD

®

Player control panel works much like an

Before putting on headphones to listen to an audio CD, turn the

volume dial down. Do not set the volume too high when using headphones. Continuous exposure to loud sound can harm your hearing.

Learning the Basics

Using the optical drive

®

Player and use it to select and

±

±

R/

RW or DVD-RAM discs.

CAUTION

97

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
94
95
96
97
98
99
100
101

Related Manuals for Toshiba P100-ST1072

[Laptop Toshiba Satellite P100-ST1072 Series Specifications](#)

Toshiba satellite p100-st1072: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6157 Specifications](#)

Toshiba satellite p105-s6157: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6177 Specifications](#)

Toshiba satellite p105-s6177: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6197 Specifications](#)

Toshiba satellite p105-s6197: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6207 Specifications](#)

Toshiba satellite p105-s6207: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6217 Specifications](#)

Toshiba satellite p105-s6217: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6227 Specifications](#)

Toshiba satellite p105-s6227: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST1072

[Satellite L40 series Playing Optical Media](#)

Toshiba Satellite L40 series

[Satellite L550 Series Playing Optical Media](#)

Toshiba Satellite L550 Series

[TECRA A50 series Playing Optical Media](#)

Toshiba TECRA A50 series

[Satellite P200 Series Playing Optical Media](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Playing Optical Media](#)

Toshiba Qosmio X300 Series

[Satellite Playing Optical Media](#)

Toshiba Satellite

[Tecra A9 Series Playing Optical Media](#)

Toshiba Tecra A9 Series

[Portégé R830 Series Playing Optical Media](#)

Toshiba Portégé R830 Series

This manual is also suitable for:

[P100-st1071P105-s6147P105-s6148P105-s6157P105-s6158P105-s6167 ... Show all](#)