

Inserting A Charged Battery - Toshiba P100-ST7211 User Manual

P100-st7211 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
Table Of Contents
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267

268
269
270
271
272
273
274
275



•

•

Bookmarks



Inserting a charged battery

To insert a battery:

1

Wipe the terminals of the charged battery with a clean cloth to ensure a good connection.

2

▲ WARNING

Insert the charged battery into the slot until the latch

clicks.

The battery pack has been designed so that you cannot install it with reverse polarity.

If the battery is leaking or its case is cracked, put on protective gloves to handle it, and discard it immediately. Always dispose of used battery packs in compliance with all applicable laws and regulations. Put an **AWARNING** insulating tape, such as cellophane tape, on the electrode during transportation to avoid a possible short circuit, fire or electric shock. Failure to do so could possibly result in serious injury.

If the battery does not slide into the slot easily, move the battery release lock to the unlocked position and try again. Do not force the battery into position.

Mobile Computing

Changing the main battery

115

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

114

115

116

117

Related Manuals for Toshiba P100-ST7211

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Laptop Toshiba Satellite P100-ST7211 Series Specifications](#)

Toshiba satellite p100-st7211: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6014 Specifications](#)

Toshiba satellite p105-s6014: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6084 Specifications](#)

Toshiba satellite p105-s6084: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6104 Specifications](#)

Toshiba satellite p105-s6104: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6134 Specifications](#)

Toshiba satellite p105-s6134: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST7211

[C50 Series Inserting A Charged Battery](#)

Toshiba C50 Series

[Qosmio X70-A series Inserting A Charged Battery](#)

Toshiba Qosmio X70-A series

[Satellite L40 series Inserting A Charged Battery](#)

Toshiba Satellite L40 series

[Satellite L550 Series Inserting A Charged Battery](#)

Toshiba Satellite L550 Series

[TECRA A50 series Inserting A Charged Battery](#)

Toshiba TECRA A50 series

[Satellite T210 Series Inserting A Charged Battery](#)

Toshiba Satellite T210 Series

[Satellite P200 Series Inserting A Charged Battery](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Inserting A Charged Battery](#)

Toshiba Qosmio X300 Series

This manual is also suitable for:

[P100-st7111P100-st9012P100-st9212P100-st9412P100-st9612P105-s6002](#) ... [Show all](#)