

Maintaining Security When The Battery Is Not Fully Charged - Toshiba P100-ST7211 User Manual

P100-st7211 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
Table Of Contents
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267

268
269
270
271
272
273
274
275



•

•

Bookmarks



222

Hot Keys

Password security

3

If you clicked Choose a screen saver, the Screen Saver tab has already been selected. If it is not selected, click the Screen Saver tab.

4

Click the On resume, password protected check box.

5

Click OK.

Maintaining security when the battery is not fully charged

When the battery is not fully charged (even if the computer is

operating on AC power) your display may reappear automatically after a short time. To protect your desktop, you

must set up a screen saver with a password before activating the password feature.

To set up a password with a screen saver, go to Windows XP

help for instructions:

1

Click Start, Help and Support.

2

In the Search field, type

3

Press

4

Click the Protect your files with a screen saver

password link located under the suggested topics.

Follow the steps listed in the Windows help to set up your password-protected screen saver.

To ensure the password protection is activated after pressing

+

Fn

F1

walking away from the computer.

Enter

.

(to activate instant security), wait ten seconds before password screen saver

.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

221

222

223

224

Related Manuals for Toshiba P100-ST7211

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Laptop Toshiba Satellite P100-ST7211 Series Specifications](#)

Toshiba satellite p100-st7211: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6014 Specifications](#)

Toshiba satellite p105-s6014: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6084 Specifications](#)

Toshiba satellite p105-s6084: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6104 Specifications](#)

Toshiba satellite p105-s6104: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6134 Specifications](#)

Toshiba satellite p105-s6134: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

Related Content for Toshiba P100-ST7211

[M200 - Portege - Pentium M 1.5 GHz Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba M200 - Portege - Pentium M 1.5 GHz

[A8 S8514 - Tecra - Core 2 Duo GHz Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba A8 S8514 - Tecra - Core 2 Duo GHz

[A105-S4004 - Satellite - Core Duo 1.66 GHz Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba A105-S4004 - Satellite - Core Duo 1.66 GHz

[Tecra M5 Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba Tecra M5

[Satellite R20-ST2081 Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba Satellite R20-ST2081

[Portege M400 Series Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba Portege M400 Series

[S3 Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba S3

[M9-S5516X Maintaining Security When The Battery Is Not Fully Charged](#)

Toshiba M9-S5516X

This manual is also suitable for:

[P100-st7111P100-st9012P100-st9212P100-st9412P100-st9612P105-s6002](#) ... [Show all](#)