



# Using The Dual Mode Pad - Toshiba P100-ST7211 User Manual

P100-st7211 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
Table Of Contents  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

 
118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254  
255  
256  
257  
258  
259  
260  
261  
262  
263  
264  
265  
266  
267

268  
269  
270  
271  
272  
273  
274  
275



•

•

## Bookmarks





**4**

Replace the memory module slot cover and tighten the screws.

**5**

---

Re-insert the main battery. For more information on inserting the main battery, see [battery" on page](#)

**6**

Turn the computer right side up.

**7**

Reconnect the cables.

**8**

Restart the computer.

## **Checking total memory**

When you add or remove a memory module, you can check that the computer has recognized the change. To do this:

**1**

Click Start, Control Panel, Performance and **Maintenance, and then System.**

**2**

The General tab view automatically appears and shows total memory.

If the computer does not recognize the memory configuration, turn off the computer, remove the memory slot



cover, and check that the module is inserted completely into

the socket and lined up squarely with the socket clips.

## **Using the Dual Mode Pad**

**(Available on certain models)**

The Dual Mode Pad, the small square cutout located in front

of the keyboard, is sensitive to touch. To move the cursor,

simply move your finger on the Dual Mode Pad in the direction you would like to move the cursor:

113.

TECHNICAL NOTE: You must have at least one memory module installed for the computer to work.

## **Getting Started**

*Using the Dual Mode Pad*

"Changing the main

# 61

[Table of Contents](#)



[Previous Page](#)  
[Next Page](#)

1  
...  
58  
59  
60  
**61**  
62  
63  
64  
65

## Related Manuals for Toshiba P100-ST7211

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Laptop Toshiba Satellite P100-ST7211 Series Specifications](#)

Toshiba satellite p100-st7211: specifications (8 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba PSPA3C-SD402E User Manual](#)

User manual (172 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P105-S6014 Specifications](#)

Toshiba satellite p105-s6014: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6024 Specifications](#)

Toshiba satellite p105-s6024: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6084 Specifications](#)

Toshiba satellite p105-s6084: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6104 Specifications](#)

Toshiba satellite p105-s6104: specifications (11 pages)

[Laptop Toshiba Satellite P105-S6134 Specifications](#)

Toshiba satellite p105-s6134: specifications (11 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

## Related Content for Toshiba P100-ST7211

[Satellite A210 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba Satellite A210 Series

[Satellite A200 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

TOSHIBA Satellite A200 Series

[A200 series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba A200 series

[Satellite P200 Series Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba Satellite P200 Series

[PSPB0U-00W008 Dual Mode Pad Button Function \(Dual Mode Pad Is Provided With Some Models\)](#)

Toshiba PSPB0U-00W008

[PSAAKC-VA104C Using The Touch Pad/Dual Mode Pad](#)

Toshiba PSAAKC-VA104C

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Using The Dual Mode Pad](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[Satellite X200-AA3 Using The Dual Mode Pad](#)

Toshiba Satellite X200-AA3

This manual is also suitable for:

[P100-st7111P100-st9012P100-st9212P100-st9412P100-st9612P105-s6002](#) ... [Show all](#)