

Using An Expresscard; Inserting An Expresscard; Removing An Expresscard - Toshiba P205-S6277 User Manual

P205-s6277 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
Table Of Contents
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242



•

[Table of Contents](#)

•

Bookmarks



Using an ExpressCard

(Available on certain models)

The ExpressCard

use of ExpressCard media. The slot also supports hot swapping, which allows you to replace one ExpressCard with another while the computer is on.

Inserting an ExpressCard

Before you insert an ExpressCard

comes with the card to see if you need to do anything before you insert it.

To insert an ExpressCard:

1

Locate the ExpressCard slot on the left side of the computer.

2

Insert the ExpressCard.

(Sample Illustration) Inserting an ExpressCard

3

When the card is almost all the way into the slot, push firmly but gently to ensure a firm connection with the computer. Do not force the card into position.

Removing an ExpressCard

1

Prepare the card for removal by clicking the **Safely Remove Hardware icon in the Notification Area and then selecting the card or device you want to remove.**

If the system is unable to prepare the card for safe removal, a message will tell you to try again later. If the card can be removed now, the system displays **Safe to Remove Hardware.**

2

Locate the ExpressCard

Exploring Your Computer's Features

Using an ExpressCard™

™

™


slot (available on certain models) supports the

™

™

™

eject button.

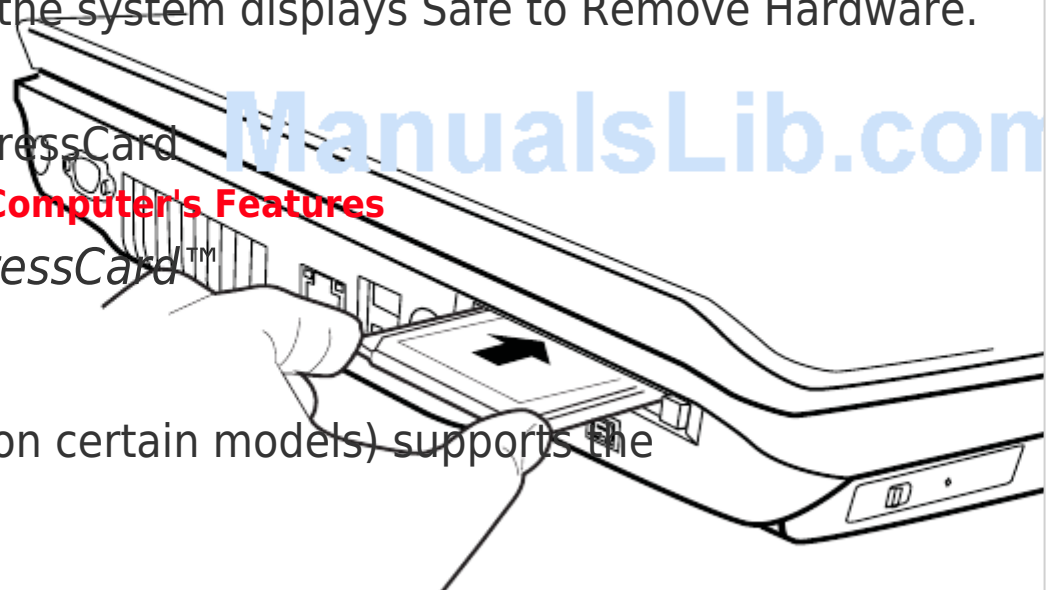

, refer to the documentation that

135

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1

...

134

135

136

137

Quick Links:

[Your Computer's Features and Specifications](#)

Related Manuals for Toshiba P205-S6277

[Laptop Toshiba Satellite P205-S6277 Specifications](#)

Toshiba satellite p205-s6277: specifications (4 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P205-S6267 Specifications](#)

Toshiba satellite p205-s6267: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6337 Specifications](#)

Toshiba satellite p205-s6337: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6347 Specifications](#)

Toshiba satellite p205-s6347: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7402 Specifications](#)

Toshiba satellite p205-s7402: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7457 Specifications](#)

Toshiba satellite p205-s7457: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7469 Specifications](#)

Toshiba satellite p205-s7469: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7476 Specifications](#)

Toshiba satellite p205-s7476: specifications (4 pages)

Related Content for Toshiba P205-S6277

[Satellite A500 series Expresscard Overheating](#)

Toshiba Satellite A500 series

[Satellite A205 Series Using An Expresscard](#)

Toshiba Satellite A205 Series

[SATELLITE R850 Expresscard](#)

Toshiba SATELLITE R850

[QOSMIO G50 Pci Expresscard Slot Troubleshooting](#)

Toshiba QOSMIO G50

[Satellite P500 Expresscard](#)

Toshiba Satellite P500

[Satellite L500 Expresscard Overheating](#)

Toshiba Satellite L500

[Satellite A300 Expresscard](#)

Toshiba Satellite A300

[Satellite L350 series Expresscard](#)

Toshiba Satellite L350 series

This manual is also suitable for:

[P205-s7469P205-s7476P205-s7482P205-s6297P205-s7484P205-s8811](#) ... [Show all](#)