



# Using The Bridge Media Adapter Slot - Toshiba P205-S6277 User Manual

P205-s6277 user's guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
Table Of Contents  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242



•

[Table of Contents](#)

•

## Bookmarks





# 136

## Exploring Your Computer's Features

---

### *Using the Bridge Media Adapter Slot*

#### **3**

Press the ExpressCard eject button once to pop it out slightly, and push it in to remove the ExpressCard.

The ExpressCard ejects slightly from the slot.

#### **4**



Grasp the edges of the ExpressCard and slide it out of the slot.

*(Sample Illustration) Removing an ExpressCard*

## Using the Bridge Media Adapter Slot

**(Available on certain models)**

The Bridge Media Adapter slot (available on certain models) supports the use of Memory Stick

™

Digital

xD-Picture Card

digital products: digital music players, cellular phones, PDAs, digital cameras, digital video camcorders, etc.

The Bridge Media Adapter slot may also support other types of media. For a complete list of supported media, visit Toshiba's Web site at [accessories.toshiba.com](http://accessories.toshiba.com).

### NOTE

™

™

(SD

), MMC

™

media. These media can be used with a variety of

Do not use the Copy Disk function for this type of media. To copy data from one media to another, use the drag-and-drop feature of the

®

Windows

operating system.

™

, Memory Stick

(MultiMediaCard

ExpressCard

eject button

™

PRO, Secure



ManualsLib.com

™

), or

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1

...

135

136

137

138

Quick Links:

[Your Computer's Features and Specifications](#)

## Related Manuals for Toshiba P205-S6277

[Laptop Toshiba Satellite P205-S6277 Specifications](#)

Toshiba satellite p205-s6277: specifications (4 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P205-S6267 Specifications](#)

Toshiba satellite p205-s6267: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6337 Specifications](#)

Toshiba satellite p205-s6337: specifications (4 pages)

[Laptop Toshiba Satellite P205-S6347 Specifications](#)

Toshiba satellite p205-s6347: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7402 Specifications](#)

Toshiba satellite p205-s7402: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7457 Specifications](#)

Toshiba satellite p205-s7457: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7469 Specifications](#)

Toshiba satellite p205-s7469: specifications (4 pages)

[Laptop Toshiba Satellite P205-S7476 Specifications](#)

Toshiba satellite p205-s7476: specifications (4 pages)

## Related Content for Toshiba P205-S6277

[X305-Q705 - Qosmio - Core 2 Duo GHz Using The Bridge Media Adapter Slot](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[U205-S5002 - Satellite - Core Duo 1.66 GHz Using The Bridge Media Adapter Slot](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

[P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Using The Bridge Media Adapter Slot](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Using The Bridge Media Adapter Slot](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Using The Bridge Media Adapter Slot](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Using The Bridge Media Adapter Slot](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Using The Bridge Media Adapter Slot](#)

Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz

[M400 - Portege - Core 2 Duo 1.83 GHz Using The Bridge Media Adapter Slot](#)

Toshiba M400 - Portege - Core 2 Duo 1.83 GHz

This manual is also suitable for:

[P205-s7469P205-s7476P205-s7482P205-s6297P205-s7484P205-s8811](#) ... [Show all](#)